


## Governor Valve

### Removal

Bend down the tabs on the lock plates, remove the bolts holding the governor to the torque converter housing, and remove the governor.

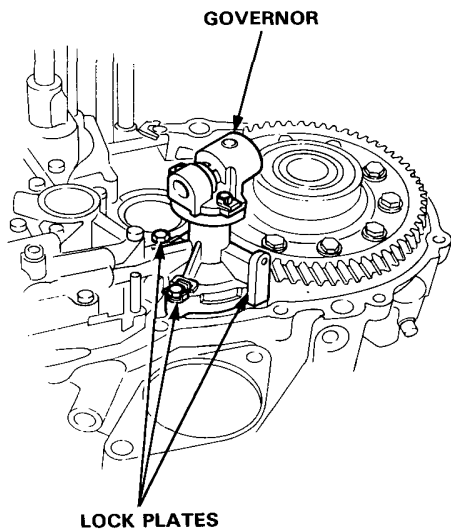

## Main Valve Body



### Removal

1. Remove the accumulator covers.

**CAUTION:** Accumulator covers are spring loaded; to prevent stripping the threads in the torque converter housing, press down on the accumulator covers while unscrewing the bolts in a criss-cross pattern.

2. Remove the accumulator springs.


4th ACCUMULATOR COVER

2nd/3rd ACCUMULATOR COVER

3rd ACCUMULATOR SPRING  
OD: 15.5 mm  
(0.61 in.)

4th ACCUMULATOR SPRING  
OD: 18.6 mm (0.73 in)

2nd ACCUMULATOR SPRING  
OD: 20.2 mm (0.79 in.)

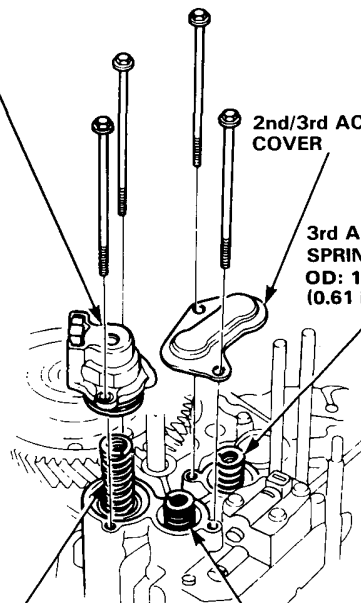

(cont'd)