



Lock-Up Shift Valve Body

Disassembly/Inspection

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner.
- Replace valve body as an assembly if any parts are worn or damaged.
- Check all valves for free movement, if any fail to slide freely, see Valve Body Repair on page 16-25.
- Coat all parts with ATF before reassembly.

