


Differential and Seal




Replacement


1. If seals are to be replaced, or if differential needs repair, remove the differential.

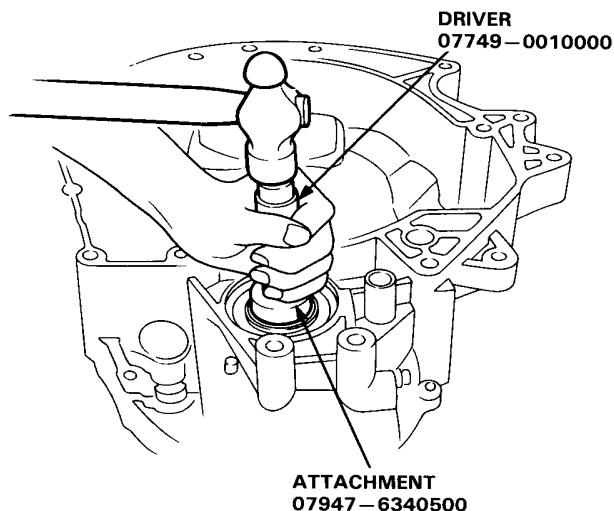

2. On the torque converter housing, remove the 80 mm snap ring, then drive out the seal as shown.
3. Remove the differential seal from the transmission housing in the same way.

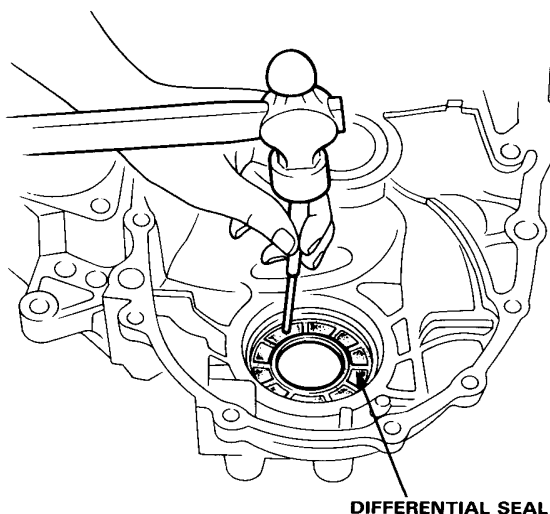

4. On the torque converter housing, install the differential 80 mm snap ring if removed.

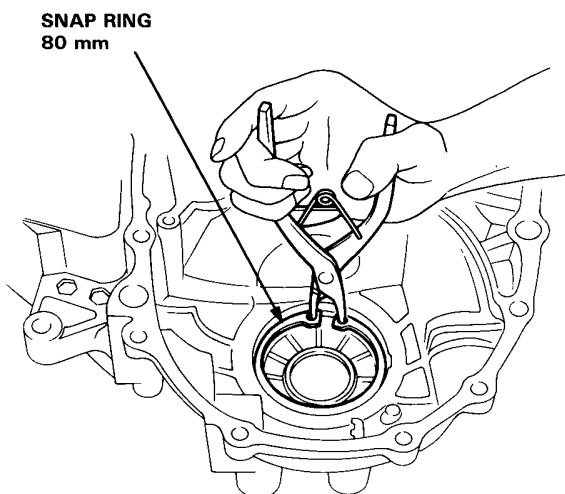

5. Install the differential seals into the torque converter housing and transmission housing.

