



Shift Indicator Light

Check and Installation

Check for continuity between indicator light connector terminals as shown. If there is no continuity, check for burned out bulb or open circuit.

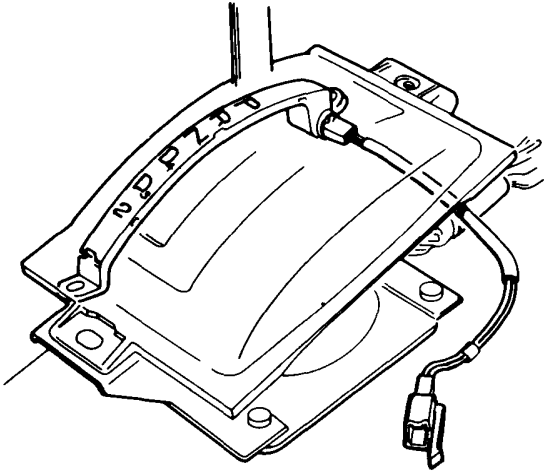

1. Install the indicator bulb in the bulb housing. Insert the bulb housing into slot in escutcheon, then turn 90° to bulb housing.

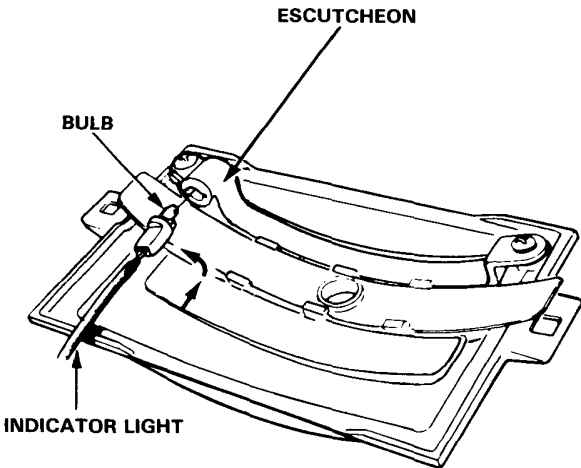

Shift Indicator Panel Position



Adjustment

1. Check that the index mark of the indicator aligns with the N mark of the shift indicator panel with the transmission in NEUTRAL.
2. If not aligned, remove the panel mounting screws and adjust by moving panel.

NOTE: Whenever escutcheon is removed for indicator bulb replacement etc., reinstall the panel as described above.

