


Rear Suspension



Index

NOTE: Replace self-locking bolts if you can easily thread a nut past their nylon locking inserts.

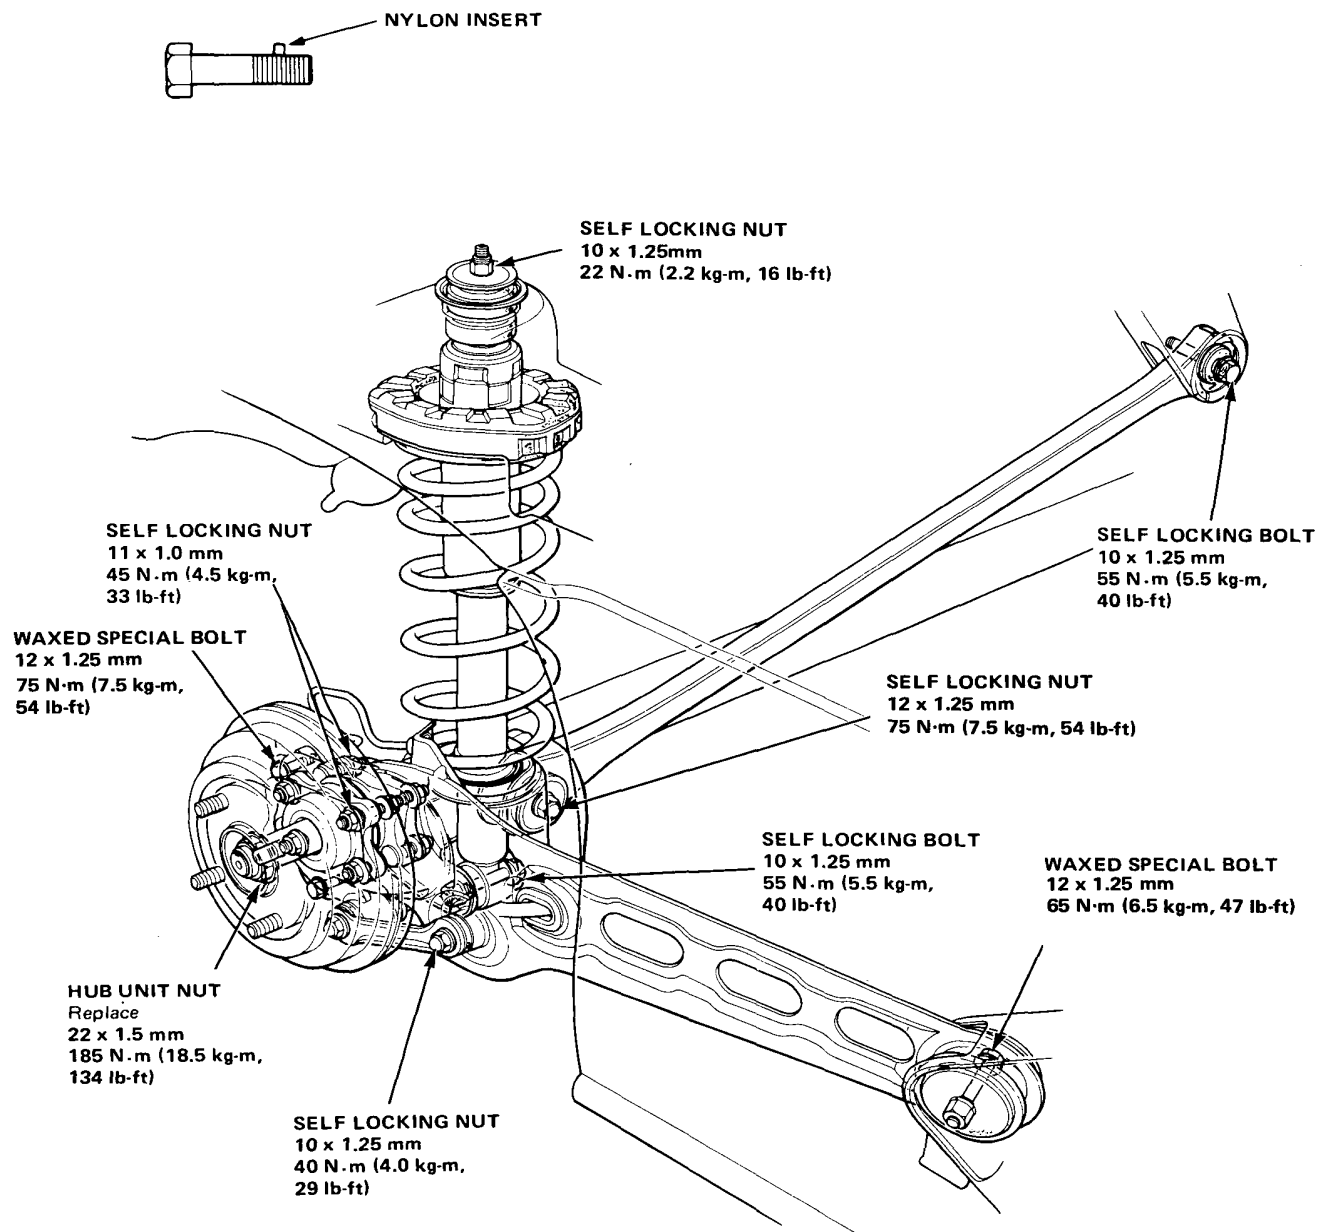

Disassembly/Inspection

NOTE: Inspect all bushings and rubber parts for wear and damage.

Replace all self locking nuts after disassembly.

Replace all waked special bolt after disassembly.

