

# Required Maintenance Schedule

SERVICE AT THE INTERVAL OF LISTED KM (MILES) OR MONTHS, WHICHEVER OCCURS FIRST.						
ITEMS	x 1,000 km	20	40	60	80	100
	x 1,000 miles	12	24	36	48	60
	months	12	24	36	48	60
IDLE SPEED AND IDLE CO		I	I	I	I	I
VALVE CLEARANCE		I	I	I	I	I
ALTERNATOR DRIVE BELT						
ENGINE OIL AND OIL FILTER	Replace every 10,000 km (6,000 miles) or 6 months					
TRANSMISSION OIL			R		R	
RADIATOR COOLANT					R*1	
COOLING SYSTEM HOSES AND CONNECTIONS			I		I	
SECONDARY AIR SUPPLY SYSTEM *4 (For cars using unleaded gasoline)						I
AIR CLEANER ELEMENT		R*3	R	R*3	R	R*3
FUEL FILTER			R		R	
INTAKE AIR TEMP. CONTROL SYSTEM*4						I
TANK, FUEL LINE AND CONNECTIONS			I		I	
THROTTLE CONTROL SYSTEM*2*4			I		I	
CHOKE MECHANISM*4			I		I	
EVAPORATIVE EMISSION CONTROL SYSTEM						I
IGNITION TIMING AND CONTROL SYSTEM			I		I	
SPARK PLUGS (For cars using leaded gasoline)		R	R	R	R	R
SPARK PLUGS (For cars using unleaded gasoline)			R		R	
DISTRIBUTOR CAP AND ROTOR			I		I	
IGNITION WIRING			I		I	
CRANKCASE EMISSION CONTROL SYSTEM			I		I	
BRAKE HOSES, LINES		I	I	I	I	I
BRAKE FLUID			R		R	
FRONT BRAKE DISCS AND CALIPERS		I	I	I	I	I
FRONT BRAKE PADS	Inspect every 10,000 km (6,000 miles) or 6 months					
REAR BRAKES			I		I	
PARKING BRAKE		I	I		I	
CLUTCH RELEASE ARM TRAVEL		I	I	I	I	I
ENGINE EXHAUST SILENCER, SUSPENSION MOUNTING BOLTS		I	I	I	I	I
FRONT WHEEL ALIGNMENT		I	I	I	I	I
STEERING OPERATION, TIE ROD ENDS, STEERING GEAR BOX AND BOOTS		I	I	I	I	I
POWER STEERING SYSTEM*5		I	I	I	I	I
POWER STEERING PUMP BELT*5			I		I	
CATALYTIC CONVERTER HEAT SHIELD						I

R—Replace I—Inspect. After inspection, clean, adjust, repair or replace if necessary

■ **REMARK:** Day to day care (such as oil, coolant check and replenishment) should be done practically according to the Owner's Manual.

\*1 Thereafter, replace every 2 years or 48,000 km (30,000 miles), whichever comes first.

\*2 Except for KX type.

\*3 Except for carbretor types of Europedn and KQ. types.

\*4 Except for cars equipped with Fuel Injection Engine.

\*5 Cars equipped with power steering.

**CAUTION:** The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

"Severe driving conditions" include:

- A: Repeated short-distance driving
- B: Driving in dusty conditions
- C: Driving in severe, cold weather
- D: Driving in areas using road salt or other corrosive materials
- E: Driving on rough and/or muddy roads
- F: Towing a trailer

R—Replace

I—Inspect. After inspection, clean, adjust, repair or replace if necessary.

Condition	Maintenance item	Maintenance operation	Interval
A, B, F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 3 months
A, B, D, E, F	Front brake discs and calipers	I	Every 10,000 km (6,000 miles) or 6 months
A, B, C, E, F	Clutch release arm travel	I	Every 10,000 km (6,000 miles) or 6 months
B, C, E	Power steering system	I	Every 10,000 km (6,000 miles) or 6 months