

Maintenance Schedule

| SERVICE AT THE INTERVAL OF LISTED KM (MILES) OR MONTHS, WHICHEVER OCCURS FIRST. | | | | | | |
|---|---|----|----|----|-----|-----|
| ITEMS | x 1,000 km | 20 | 40 | 60 | 80 | 100 |
| | x 1,000 miles | 12 | 24 | 36 | 48 | 60 |
| | months | 12 | 24 | 36 | 48 | 60 |
| IDLE SPEED AND IDLE CO | | I | I | I | I | I |
| VALVE CLEARANCE | | I | I | I | I | I |
| ALTERNATOR DRIVE BELT | | | I | | I | |
| ■ ENGINE OIL AND OIL FILTER | Replace every 10,000 km (6,000 miles) or 6 months | | | | | |
| ■ TRANSMISSION OIL | | | R | | R | |
| ■ RADIATOR COOLANT | | | | | R*1 | |
| COOLING SYSTEM HOSES AND CONNECTIONS | | | I | | I | |
| AIR CLEANER ELEMENT (Dry type)*2 | | R | R | R | R | R |
| AIR CLEANER ELEMENT (Viscous type)*3 | | | R | | R | |
| FUEL FILTER | | | R | | R | |
| INTAKE AIR TEMP. CONTROL SYSTEM (for Carburetor type) | | | | | | I |
| TANK, FUEL LINE AND CONNECTIONS | | | I | | I | |
| THROTTLE CONTROL SYSTEM (for Carburetor type) | | | I | | I | |
| CHOKE MECHANISM (for Carburetor type) | | | I | | I | |
| EVAPORATIVE EMISSION CONTROL SYSTEM**4 | | | | | | I |
| IGNITION TIMING AND CONTROL SYSTEM | | | I | | I | |
| SPARK PLUGS (For cars using leaded gasoline) | | R | R | R | R | R |
| SPARK PLUGS (For cars using unleaded gasoline) | | | R | | R | |
| DISTRIBUTOR CAP AND ROTOR | | | I | | I | |
| IGNITION WIRING | | | I | | I | |
| CRANKCASE EMISSION CONTROL SYSTEM | | | I | | I | |
| BRAKE HOSES, LINES | | I | I | I | I | I |
| BRAKE FLUID | | | R | | R | |
| FRONT BRAKE DISCS AND CALIPERS | | I | I | I | I | I |
| FRONT BRAKE PADS | Inspect every 10,000 km (6,000 miles) or 6 months | | | | | |
| REAR BRAKES | | | I | | I | |
| PARKING BRAKE | | I | | | | |
| CLUTCH RELEASE ARM TRAVEL | | I | I | I | I | I |
| ENGINE EXHAUST SILENCER, SUSPENSION MOUNTING BOLTS | | I | I | I | I | I |
| FRONT WHEEL ALIGNMENT | | I | I | I | I | I |
| STEERING OPERATION, TIE ROD ENDS, STEERING GEAR BOX AND BOOTS | | I | I | | I | |
| POWER STEERING SYSTEM (Cars equipped with power steering) | | I | I | I | I | I |
| POWER STEERING PUMP BELT (Cars equipped with power steering) | | | I | | I | |
| CATALYTIC CONVERTER HEAT SHIELD (Cars equipped with catalytic converter) | | | | | | I |

R—Replace I—Inspect. After inspection, clean, adjust, repair or replace if necessary

■ REMARK: These service intervals assume routine checking and replenishment has been done, as needed, by the customer.

*1 Thereafter, replace every 2 years or 48,000 km (30,000 miles), whichever comes first.

*2 Except EC and KQ types

*3 EC and KQ types

*4 Only for KQ and KY types

CAUTION: The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

"Severe driving conditions" include:

- A: Repeated short-distance driving
- B: Driving in dusty conditions
- C: Driving in severe, cold weather
- D: Driving in areas using road salt or other corrosive materials
- E: Driving on rough and/or muddy roads
- F: Towing a trailer

R—Replace

I—Inspect. After inspection, clean, adjust, repair or replace if necessary.

| Condition | Maintenance item | Maintenance operation | Interval |
|---------------|--|-----------------------|---|
| A, B, F | Engine oil and oil filter | R | Every 5,000 km (3,000 miles) or 3 months |
| F | Transmission oil | R | Every 20,000 km (12,000 miles) or 12 months |
| A, B, D, E, F | Front brake discs and calipers | I | Every 10,000 km (6,000 miles) or 6 months |
| A, B, D, E, F | Rear brakes (Only for disc type brake) | I | Every 20,000 km (12,000 miles) or 12 months |
| A, B, C, E, F | Clutch release arm travel | I | Every 10,000 km (6,000 miles) or 6 months |
| B, C, E | Power steering system | I | Every 10,000 km (6,000 miles) or 6 months |