



## NOTE:

- Whenever the transmission is removed, clean and grease the release bearing sliding surface.
- If the parts marked \* are removed, the clutch hydraulic system must be bled (see page 12-9).
- Inspect the hoses for damage, leaks, interference, and twisting.
- LHD type is shown. RHD type is similar.

