


# Torque Converter Housing Bearings


## Mainshaft Bearing/Oil Seal Replacement

1. Pull up the mainshaft bearing and oil seal using the special tools as shown.

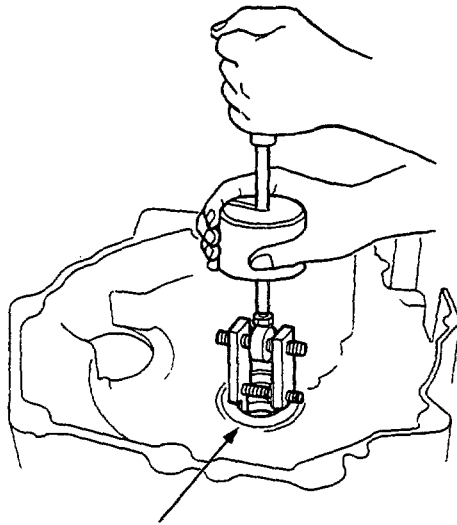

ADJUSTABLE BEARING  
REMOVER SET  
07JAC-PH80000

2. Drive in the new mainshaft bearing until it bottoms in the housing, using the special tools as shown.

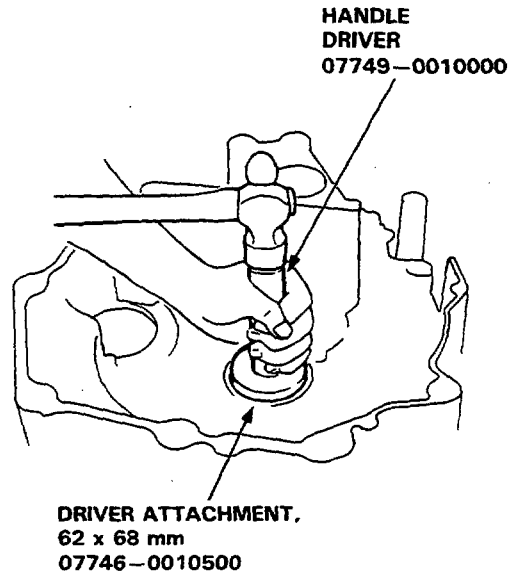

3. Install the new oil seal flush with the housing using the special tools as shown.

