


ATF Cooler Hoses

Connection

1. Connect the ATF cooler hoses to the joint pipes and ATF cooler and secure them with the clips as shown.

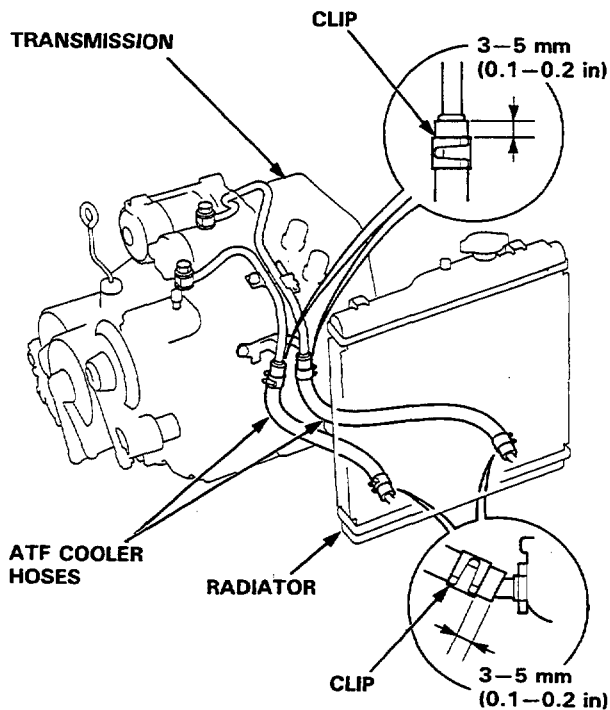

Throttle Control Cable

Inspection

NOTE: Before inspecting the throttle control cable, make sure:

- throttle cable free play is correct (see section 11).
- Idle speed is correct (see section 11).
- To warm up the engine to normal operating temperature (the cooling fan comes on).

1. Verify that the throttle control cable is clamped correctly in three positions.

