


# Valve Caps

## Description

- Caps with one projected tip and one flat end are installed with the flat end toward the spring.
- Caps with a projected tip on each end are installed with the smaller tip toward the spring. The small tip is a spring guide.

Toward outside of valve body.

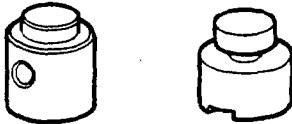

Toward spring.

- Caps with one projected tip and hollow end are installed with the tip toward the spring. The tip is a spring guide.


Toward outside of valve body.



Toward spring.

- Caps with hollow ends are installed with the hollow end away from the spring.
- Caps with notched ends are installed with the notch toward the spring.
- Caps with flat ends and a hole through the center are installed with the smaller hole toward the spring.

Toward outside of valve body.

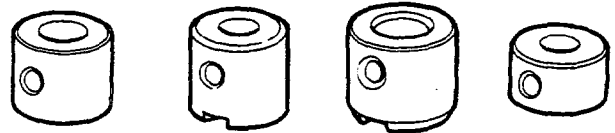

Toward spring.

- Caps with flat ends and a groove around the cap are installed with the groove side opposite the spring.

Toward outside of valve body.



Toward spring.