


# One-way Clutch/Parking Gear




## Disassembly/Inspection

1. Separate countershaft 1st gear from the parking gear by turning the parking gear in the direction shown.

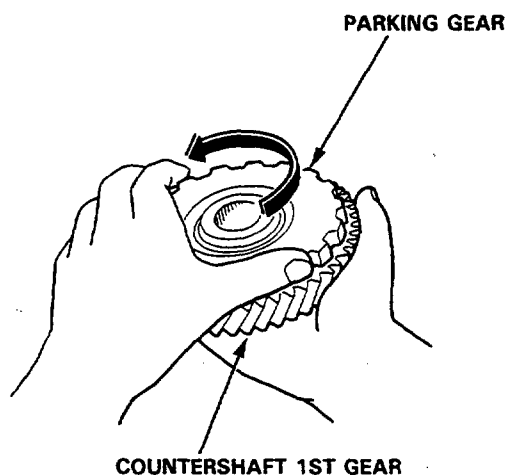

2. Remove the one-way clutch by prying it up with the end of a screwdriver.



COUNTERSHAFT 1ST GEAR ONE-WAY CLUTCH  
NOTE: Install in this direction.

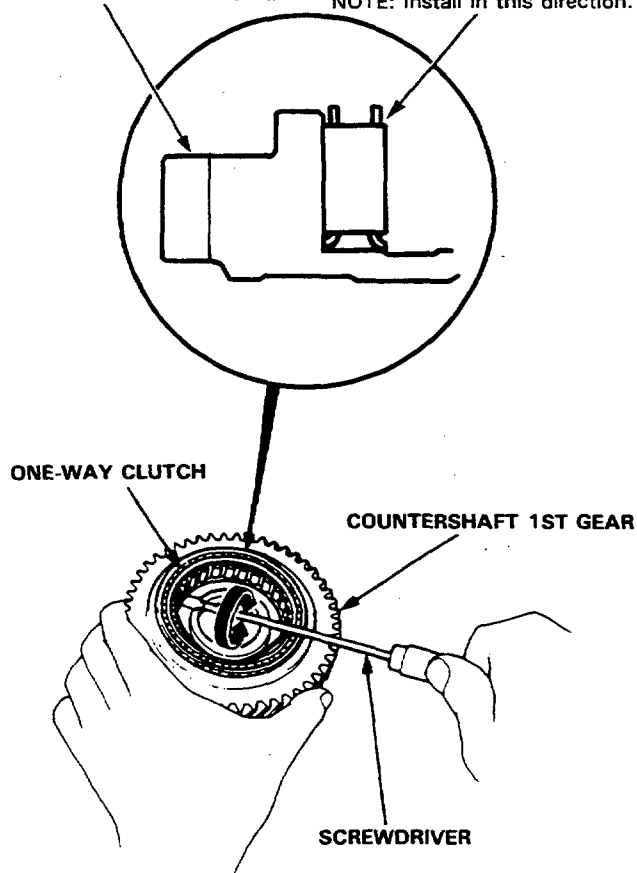

Inspect the parts as follows:


### PARKING GEAR

Inspect the parking gear for wear or scoring.

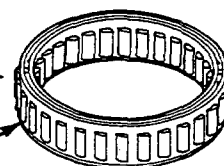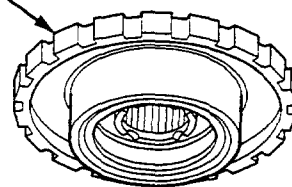

### ONE-WAY CLUTCH

Inspect the one-way clutch for damage or faulty movement.

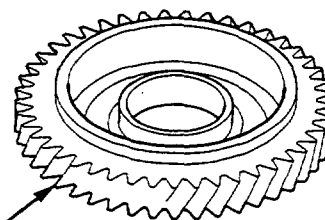

### 1ST GEAR

Inspect countershaft 1st gear for wear or scoring.

3. After the parts are assembled, hold countershaft 1st gear and turn the parking gear in the direction shown to be sure it turns freely.

