


Differential (Manual Transmission)



Illustrated Index

OIL SEAL Replace.
Removal, page 15-5
Installation, page 15-8

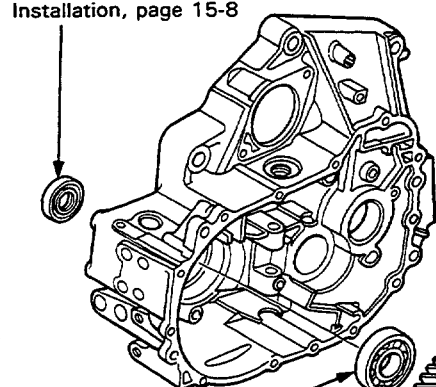

BALL BEARING
Replacement, page 15-4
Check for wear and damage.

10 x 1.0 mm
101 N·m (10.3 kgf·m, 74.5 lbf·ft)
Left-hand threads


**SPEEDOMETER
DRIVE GEAR**

FINAL DRIVEN GEAR
Replacement, page 15-5
Check for wear and damage.

DIFFERENTIAL CARRIER
Backlash inspection, page 15-4
Check for cracks.

BALL BEARING
Replacement, page 15-4
Check for wear and damage.

THRUST SHIM
Selection, page 15-7

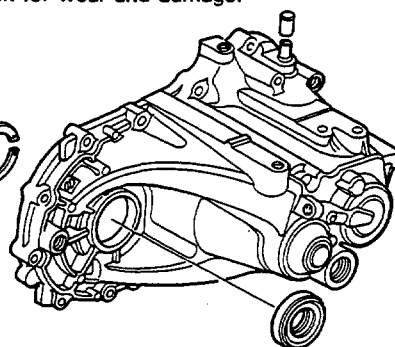

OIL SEAL Replace.
Removal, page 15-5
Installation, page 15-8