

Rear Damper




Removal

1. Remove the rear wheels (see page 18-29).
2. Remove the trunk side panel (see section 20).
3. Remove the damper cap.
4. Remove the two self-locking nuts.


SELF-LOCKING NUTS
10 x 1.5 mm
Replace.

DAMPER CAP

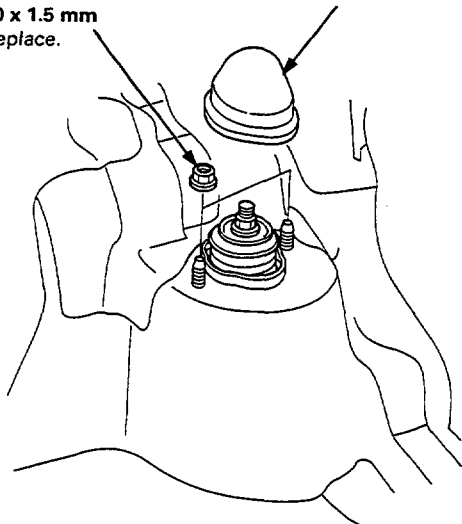


5. Remove the wheel sensor wire brackets (for cars with ABS).

NOTE: Do not disconnect the wheel sensor connector.

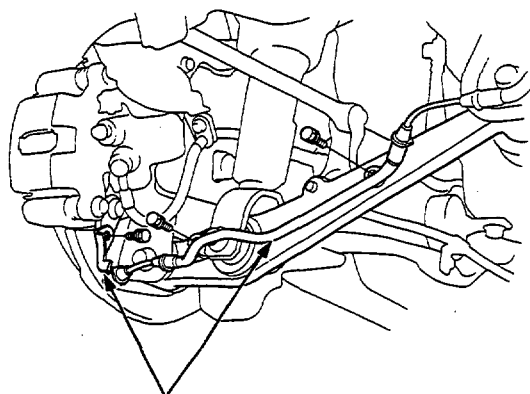

WHEEL SENSOR WIRE BRACKETS

6. Remove the flange bolt on the damper.
7. Remove the flange bolt that connects the lower arm to the trailing arm.

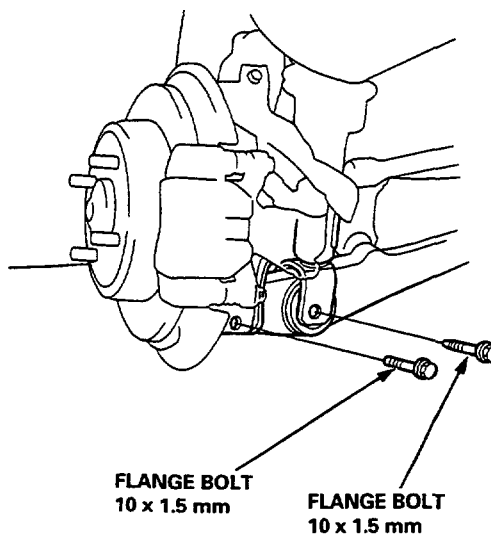

8. Lower the rear suspension and remove the damper.