

Mirrors


 
Power Mirror Replacement

1. Remove the door panel (see page 20-4).
2. Pry out the cover panel with a flat tip screwdriver, then remove it.
Disconnect the connector(s).

CAUTION: When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.

3. Remove the screws, then remove the mirror while holding it.

►: Screw locations, 3

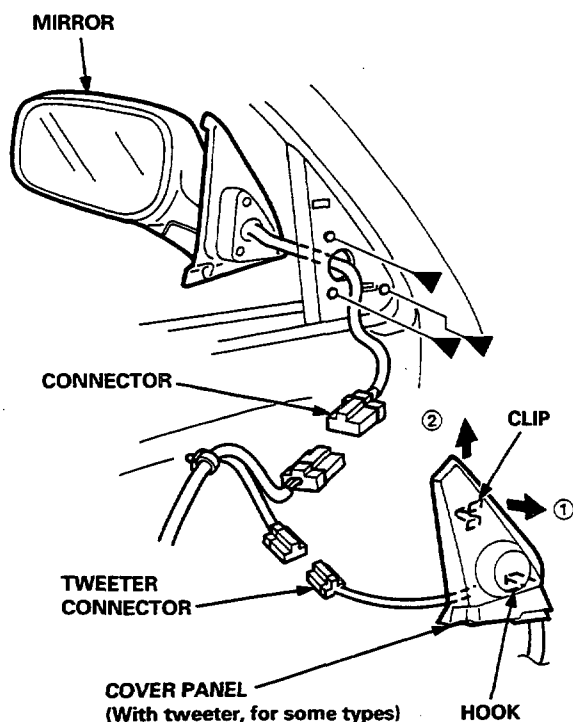

4. Installation is the reverse of the removal procedure.
5. Check for water leaks.

NOTE: Do not use high-pressure water.

Manual Mirror Replacement

1. Remove the cap and screw, then remove the control knob.
2. Pry out the cover panel with a flat tip screwdriver, then remove it.

CAUTION: When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.

3. Remove the screws, then remove the mirror while holding it.

►: Screw locations


A ►, 1



B ►, 3



5 x 0.8 mm
4 N-m (0.4 kgf-m,
3 lbf-ft)

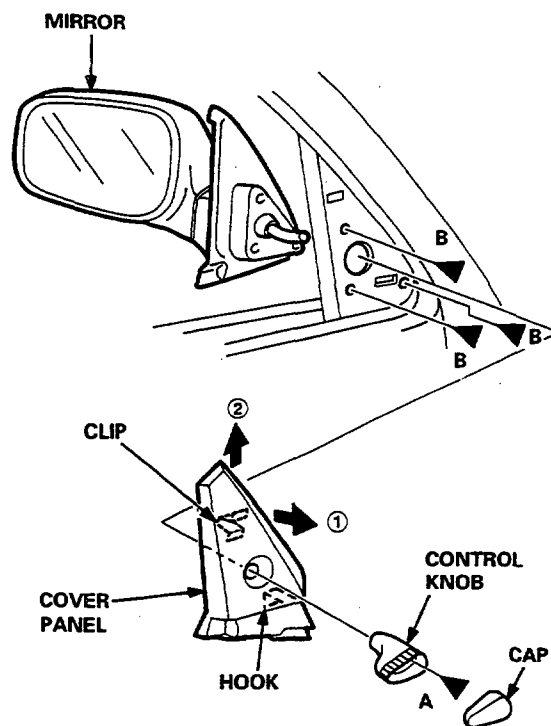

4. Installation is the reverse of the removal procedure.
5. Check for water leaks.

NOTE: Do not use high-pressure water.