



# Seats



## Front Seat Removal

NOTE: Take care not to scratch the seat covers and body.

1. Remove the seat track end cover.
2. Remove the bolts, then remove the front seat.

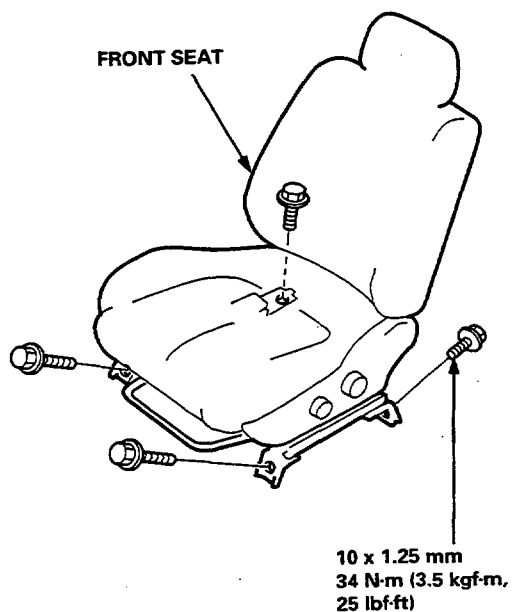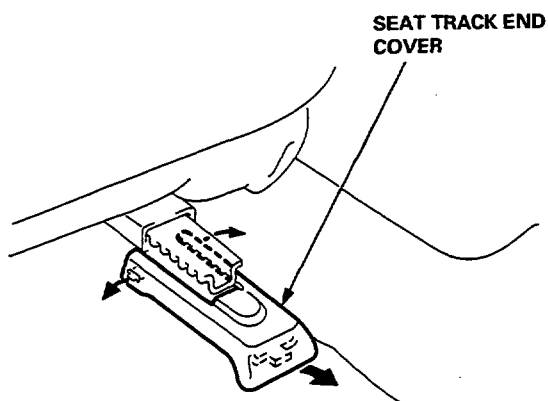


3. Installation is the reverse of the removal procedure.


## Front Seat Replacement

NOTE: Take care not to scratch the seat covers and body.

1. Remove the front seat through the door opening.
2. Remove the access cap.

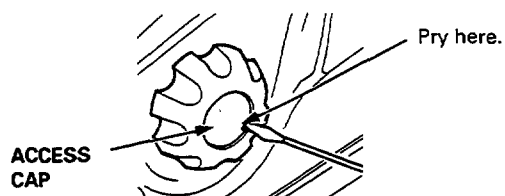


3. Remove the screws, then remove the recline dial and up-down dial.

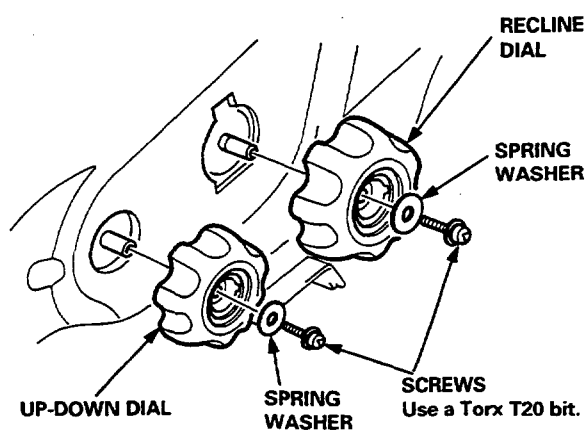

4. Remove the recline cover.

►: Screw locations, 4  
Use a Torx T20 bit.

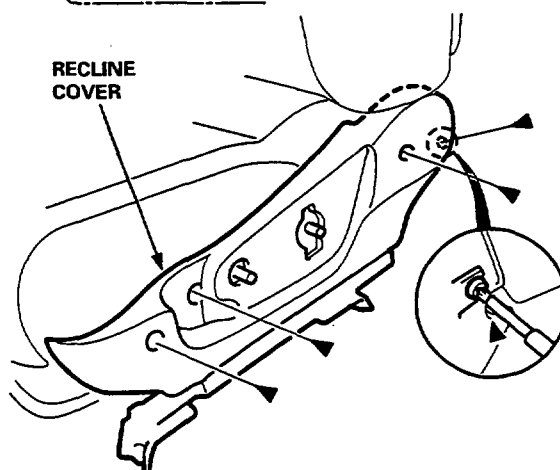

(cont'd)