




## Front Seat Cover Replacement

**CAUTION:** Wear gloves to remove and install the seat cover.


**NOTE:** Take care not to tear the seams or damage the cover.

### Seat-back cover removal:


1. Remove the recline cover and inner cover (see pages 20-61, 62).
2. Remove the headrest by turning the headrest guides.

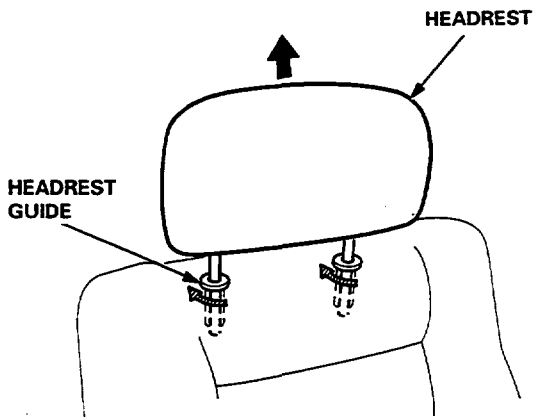


3. Remove the headrest guides by turning it.

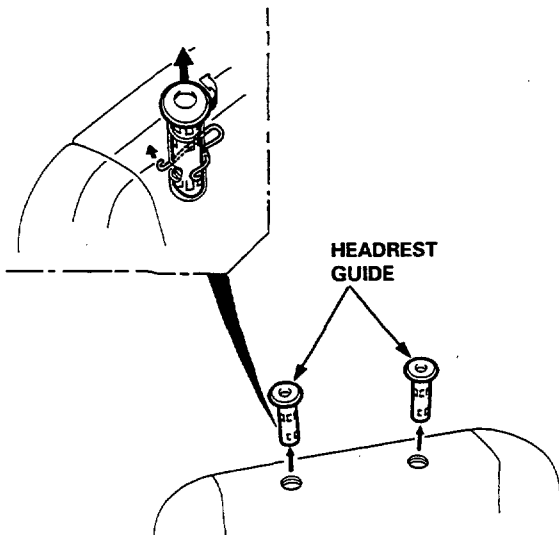

4. Remove the all clips from the seat cushion.

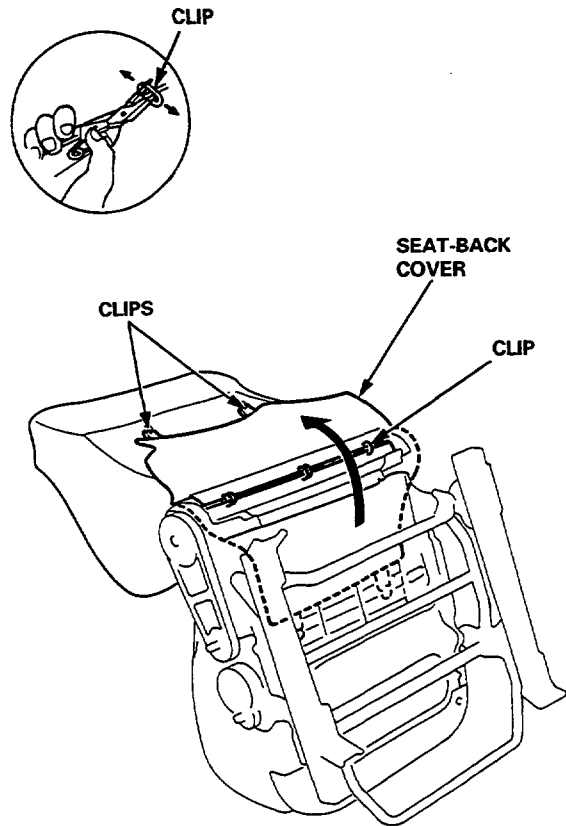

5. Detach the hooks.

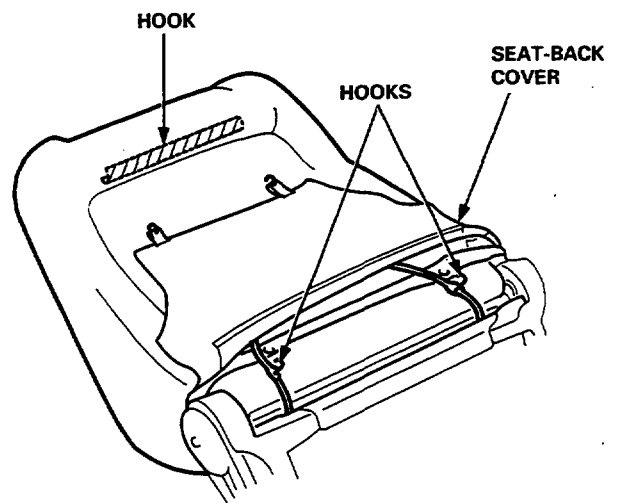


(cont'd)

# Seats

## Front Seat Cover Replacement (cont'd)



6. Pull back the edge of the seat-back cover all the way around, then remove the clips and hooks.

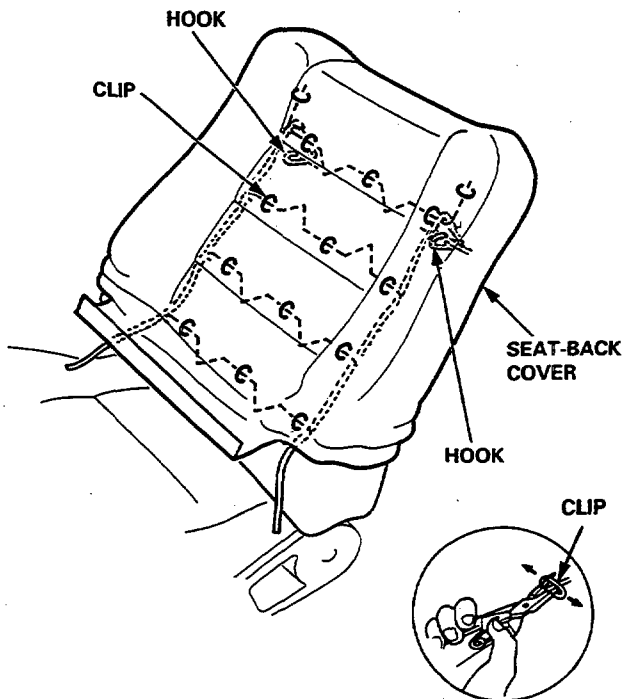


### Seat cushion cover removal:

1. Remove the recline cover and inner cover (see pages 20-61, 62).
2. Remove the hooks and clips from under the seat cushion.

▷: Clip locations, 4

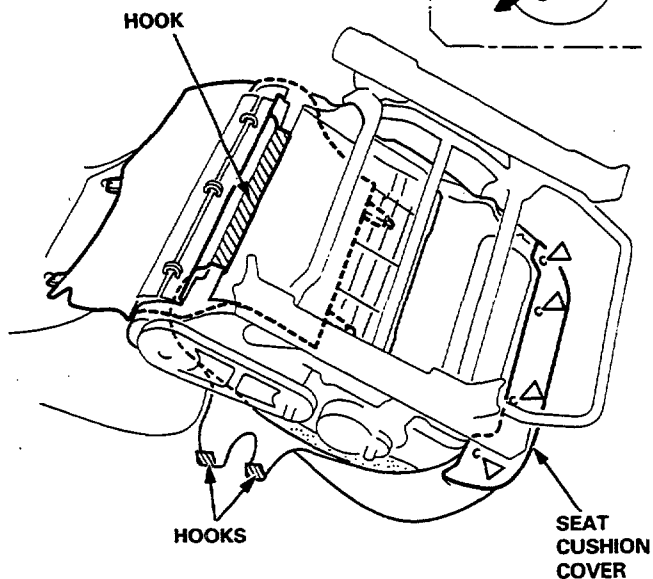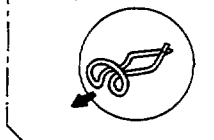

3. Pull back the edge of the seat cushion cover all the way around, then release the clips.

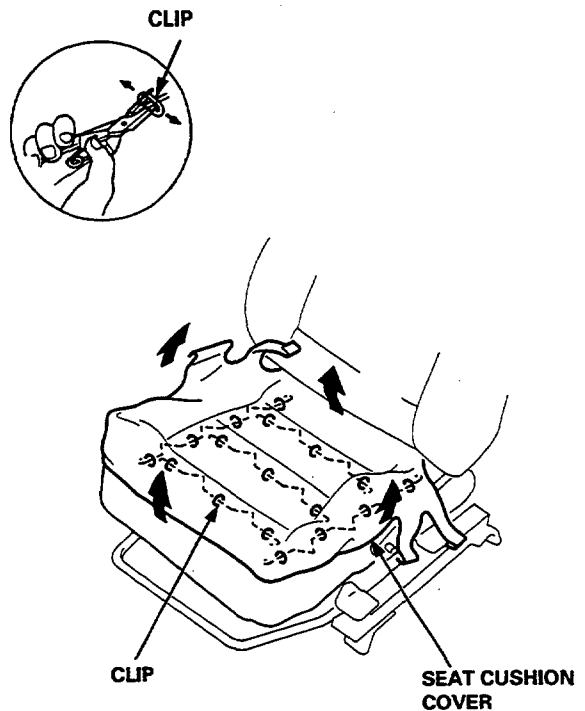

4. Installation is the reverse of the removal procedure.

### NOTE:

- To prevent wrinkles when installing a seat covers, make sure the material is stretched evenly over the pad before securing all the clips.
- Replace the released clips with new ones.

### UPHOLSTERY RING PLIERS

Commercially available.

