



Heater Control Panel

Air Mix Control Cable Replacement


1. Pull out the temperature control knob.
2. Remove the three self-tapping (TORX) screws and remove the temperature control assembly.

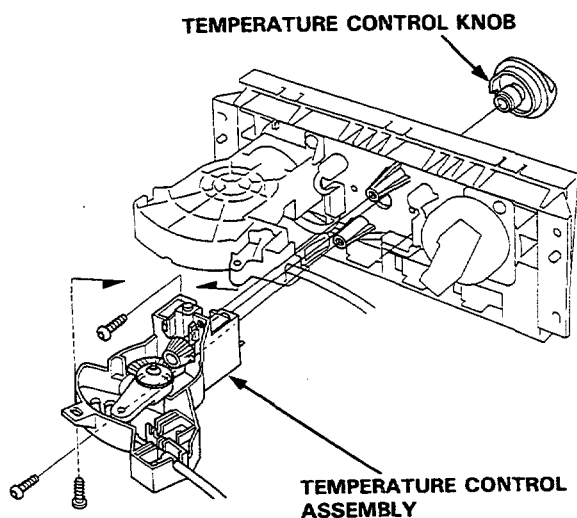


3. Remove the two self-tapping (TORX) screws and remove the lower base.
4. Remove the temperature control shaft.

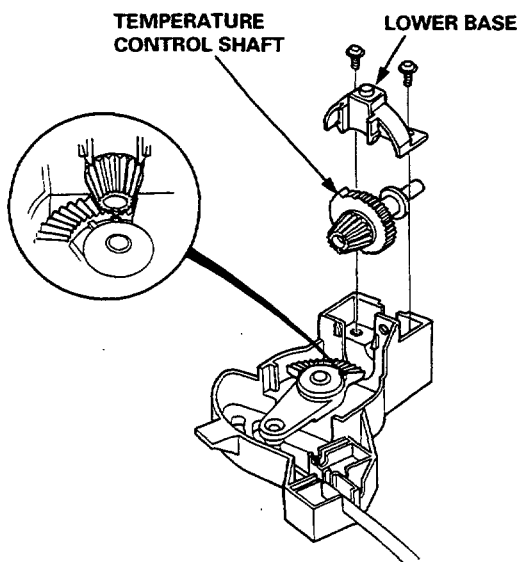

5. Remove the self-tapping (TORX) screw and remove the temperature control lever.

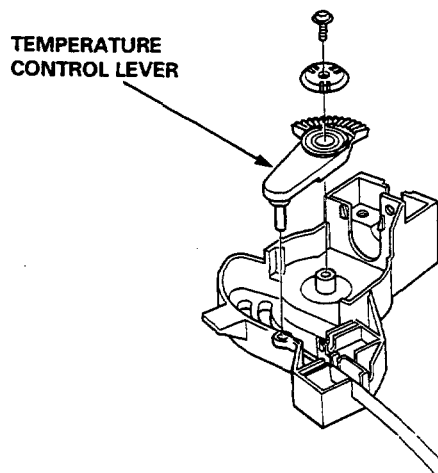

6. Remove the self-tapping (TORX) screw and the clamp, and remove the air mix control cable.

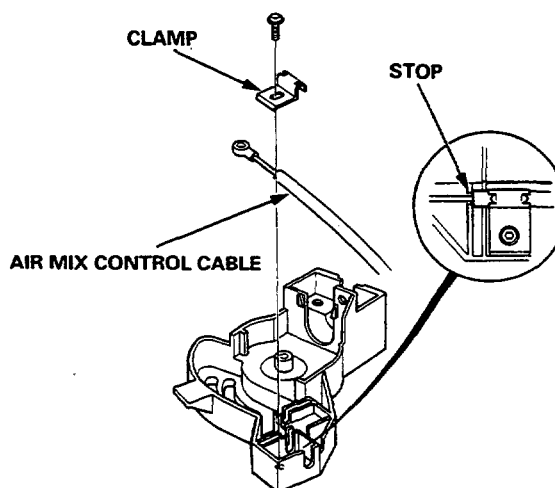

7. Install in the reverse order of removal, and:

- hold the end of the cable against the stop.
- apply grease to the sliding surfaces.
- when installing the temperature control shaft, make sure that the marks on the temperature control shaft and temperature control lever are aligned.
- after installing, make sure that the temperature control knob moves smoothly without binding.