


Heater Valve Cable


Adjustment

1. Disconnect the heater valve cable from the heater valve arm and the clamp, and from the heater control arm and the clamp.
2. Set the temperature control lever to MAX. COOL.
3. Turn the heater control arm as shown, and connect the end of the heater valve cable to the heater control arm.
4. Gently slide the heater valve cable housing back from the end enough to take up any slack in the heater valve cable, but not enough to make the temperature control lever move. Hold the end of the heater valve cable housing against the stop, then snap the heater valve cable housing into the clamp.

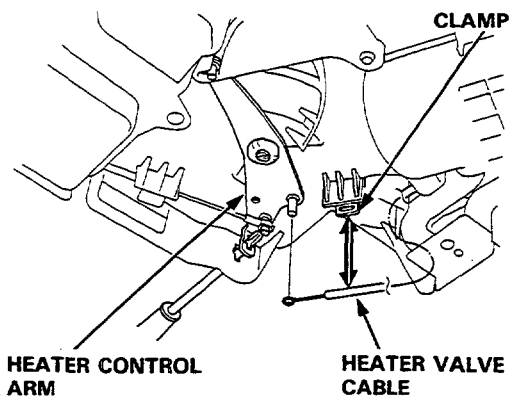

5. Turn the heater valve arm as shown, and connect the end of the heater valve cable to the heater valve arm.
6. Gently slide the heater valve cable housing back from the end enough to take up any slack in the heater valve cable, but not enough to make the temperature control lever move, then snap the heater valve cable housing into the clamp.

NOTE: The air mix control cable should always be adjusted whenever the heater valve cable has been disconnected.

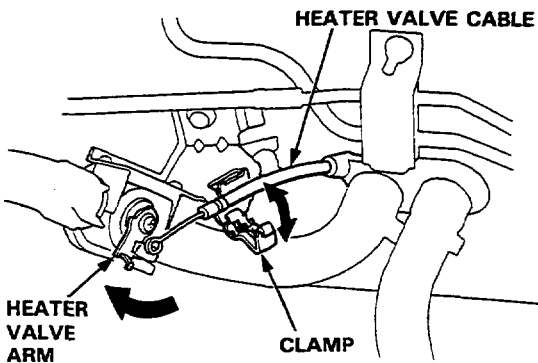

Air Mix Control Cable

Adjustment

1. Disconnect the air mix control cable from the air mix control arm and the clamp.
2. Set the temperature control lever to MAX. COOL.
3. Turn the air mix control arm as shown, and connect the end of the air mix control cable to the air mix control arm.
4. Gently slide the air mix control cable housing back from the end enough to take up any slack in the air mix control cable, but not enough to make the temperature control lever move, then snap the air mix control cable housing into the clamp.

NOTE: The heater valve cable should always be adjusted whenever the air mix control cable has been disconnected.

