




A/C Filter

Replacement

1. Remove the glove box (see section 20) and the glove box frame (see page 22-23).
2. Remove the evaporator lid and pull out the A/C filter.
 - Replace the A/C filter every 30.000 km (18.000 miles) or 12 months whichever comes first.

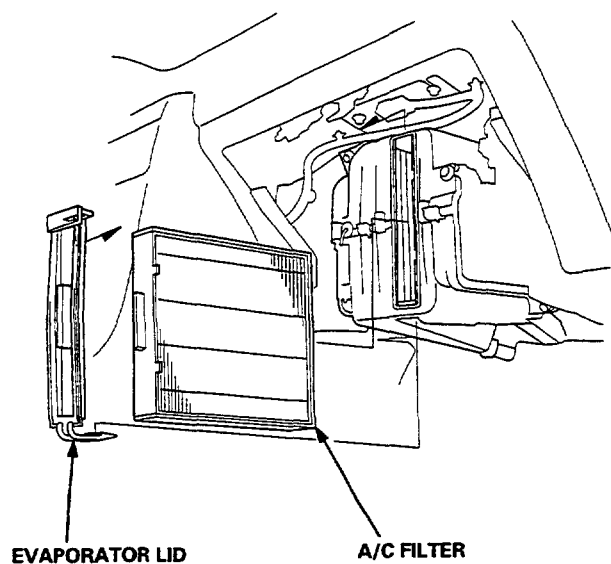

3. Install the A/C filter in the reverse order of removal, then doesn't leak any air.