

# Condenser

## Replacement

1. Discharge the refrigerant (see page 22-19).
2. Disconnect the A/C pressure switch connector and condenser fan connector.
3. Remove the compressor clutch connector from the condenser fan shroud.
4. Disconnect the discharge hose and condenser pipe.

**CAUTION:** Cap the open fittings immediately to keep moisture and dirt out of the system.

5. Remove the suction hose clamp bolt and condenser brackets.
6. Remove the condenser assembly by pulling it up.

**NOTE:**

- Be careful not to damage the condenser fins when removing/installing the condenser.
- Be careful not to hit the side of the radiator during removal/installation.

7. Install in the reverse order of removal, and:

- If you're installing a new condenser, add refrigerant oil (SP-10: P/N 38899-P13-003) (see page 22-18).
- Replace the O-rings with new ones at each fitting, and apply a thin coat of refrigerant oil (SP-10: P/N 38899-P13-003) before installing them.

**NOTE:** Be sure to use the right O-rings for HFC-134a (R-134a) to avoid leakage.

- Charge the system (see page 22-36) and test its performance (see page 22-20).

