


Headlights

Replacement


CAUTION:

- Halogen headlights can become very hot in use; do not touch them or the attaching hardware immediately after they have been turned off.
- Do not try to replace or clean the headlights with the lights on.

1. Remove the front bumper.

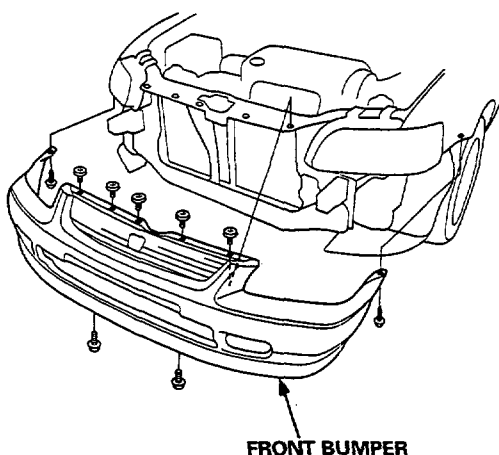

2. Disconnect the connectors from the headlight.
3. Remove the mounting bolts and nut, then pull out the headlight.

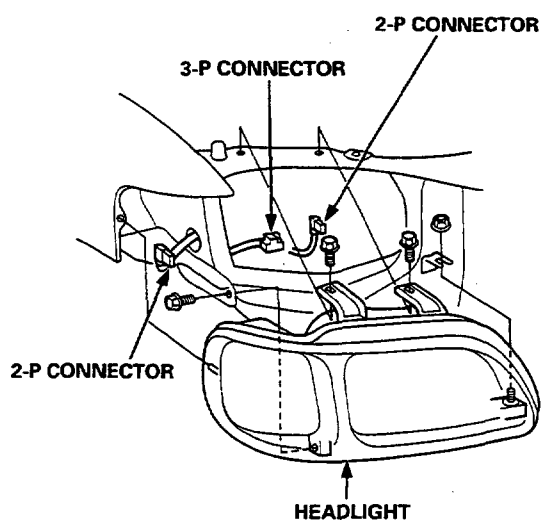

4. After replacement, adjust the headlight to local requirements.

Bulb Replacement

CAUTION:

- Halogen headlights can become very hot in use; do not touch them or the attaching hardware immediately after they have been turned off.
- Do not try to replace or clean the headlights with the lights on.
- Do not touch the glass of the halogen bulbs.

1. Disconnect the 3-P connector from the bulb.
2. Turn the retaining spring out, and remove the bulb.

