



Fuses

Under-hood Fuse/Relay Box

*: Not used

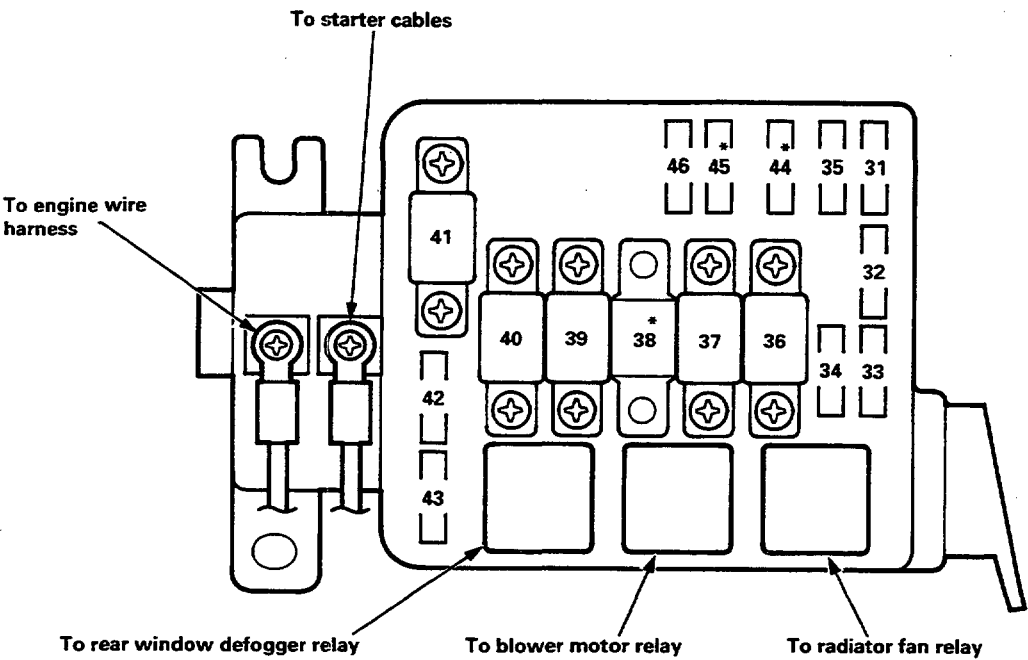

NOTE: View from back side of the under-hood fuse/relay box.

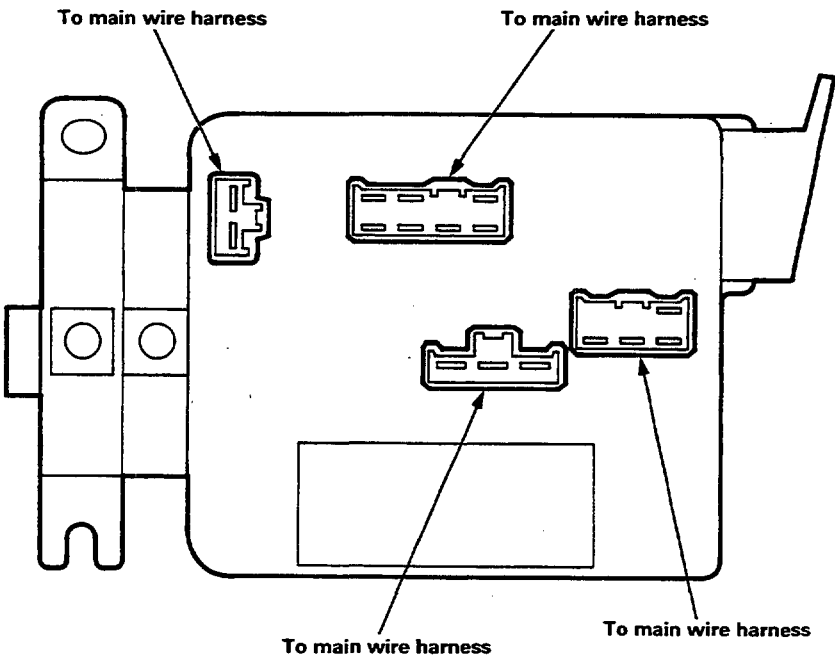



| Fuse Number | Amps | Wire Color | Component(s) or Circuit(s) Protected |
|-------------|------|------------|--|
| 31 | 15 A | YEL/WHT | PGM-FI main relay (+B) |
| 32 | 30 A | WHT/BLU | ECM, Clock, Stereo radio/cassette player |
| 33 | 30 A | BLK/GRN | Rear window defogger (Via relay) |
| 34 | 15 A | BLK/RED | Radiator fan motor (Via relay) |
| 35 | 20 A | WHT | Condenser fan motor, A/C compressor clutch |
| 36 | 50 A | WHT/RED | (To under-dash fuse/relay box) |
| 37 | 30 A | BLU/WHT | Blower motor (Via relay) |
| 38 | — | — | Not used |
| 39 | 50 A | WHT/BLK | Ignition switch (BAT) |
| 40 | 40 A | WHT | Combination light switch, Integrated control unit, Rear fog light |
| 41 | 80 A | — | Power distribution |
| 42 | 20 A | WHT/GRN | Horn, Brake system, Horn relay (with SRS), Security alarm horn relay |
| 43 | 10 A | WHT/GRN | Turn signal/hazard system |
| 44 | — | — | Not used |
| 45 | — | — | Not used |
| 46 | — | — | Not used |