



# SRS Indicator Light Wire Connections

## SRS Indicator Light Power Circuit

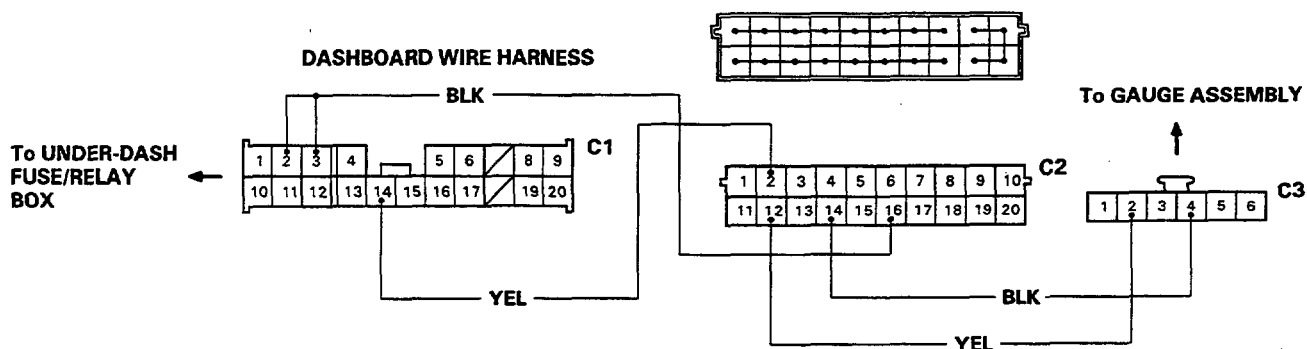

## SRS Indicator Light Control Circuit

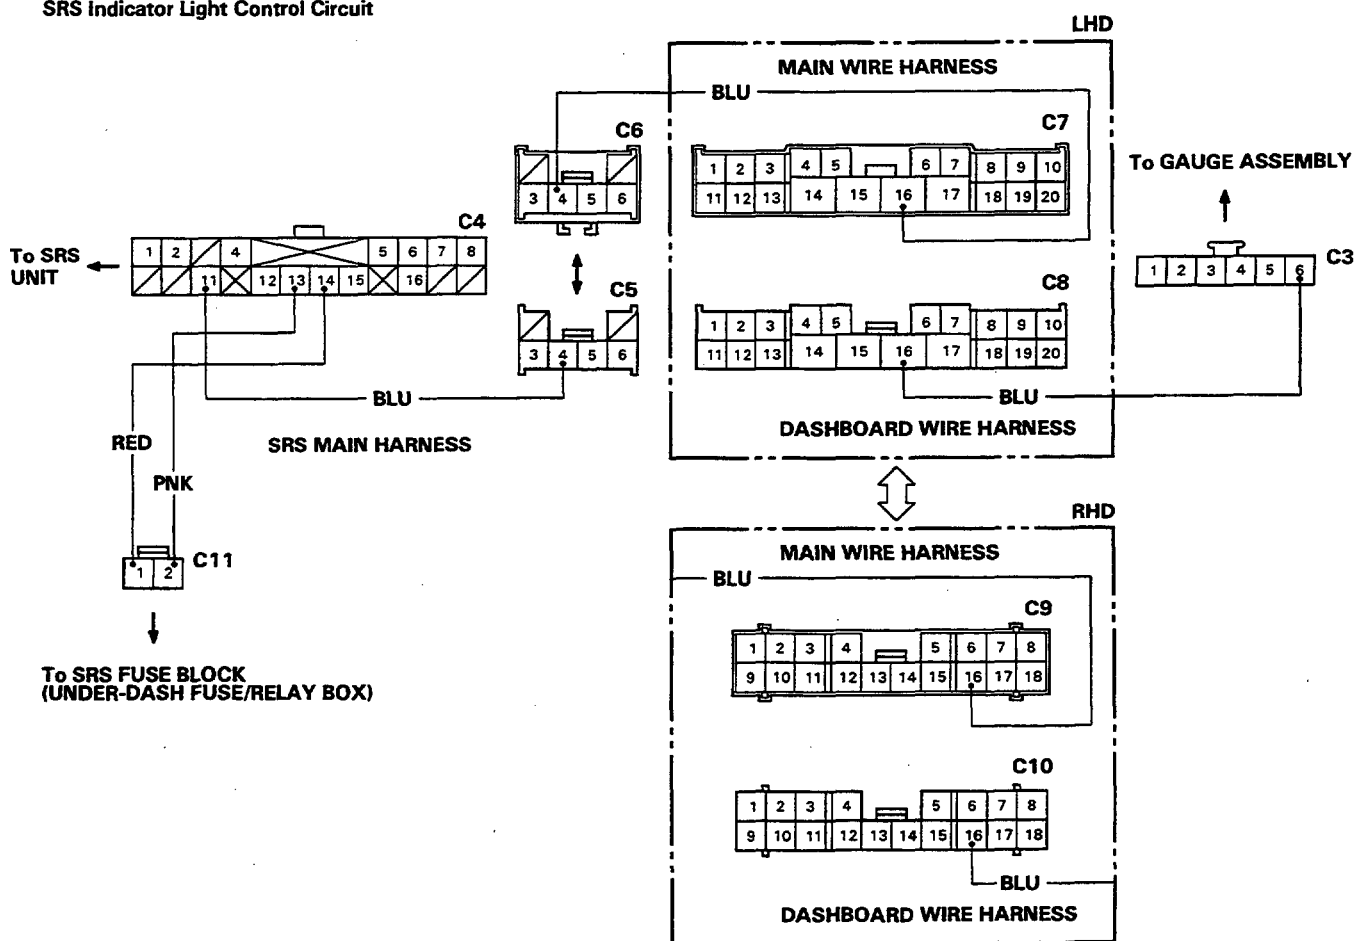

C1: DASHBOARD WIRE HARNESS 20-P CONNECTOR  
 C2: JOINT CONNECTOR  
 C3: DASHBOARD WIRE HARNESS 6-P CONNECTOR  
 C4: SRS MAIN HARNESS 18-P CONNECTOR  
 C5: SRS MAIN HARNESS 6-P CONNECTOR

C6: MAIN WIRE HARNESS 6-P CONNECTOR  
 C7: MAIN WIRE HARNESS 20-P CONNECTOR (LHD)  
 C8: DASHBOARD WIRE HARNESS 20-P CONNECTOR (LHD)  
 C9: MAIN WIRE HARNESS 18-P CONNECTOR (RHD)  
 C10: DASHBOARD WIRE HARNESS 18-P CONNECTOR (RHD)  
 C11: SRS MAIN HARNESS 2-P CONNECTOR