


Timing Belt

Illustrated Index

D16Y2, D15Z3 engines:

NOTE:

- Refer to page 6-25 for positioning crankshaft and pulley before installing the belt.
- Mark the direction of rotation on the belt before removing.
- Do not use the upper cover and lower cover for storing disassembled items.
- Clean the upper cover and lower cover before installing.
- Replace the camshaft seals and crankshaft seals if there is oil leakage.
- Refer to page 6-17 before installing timing belt.

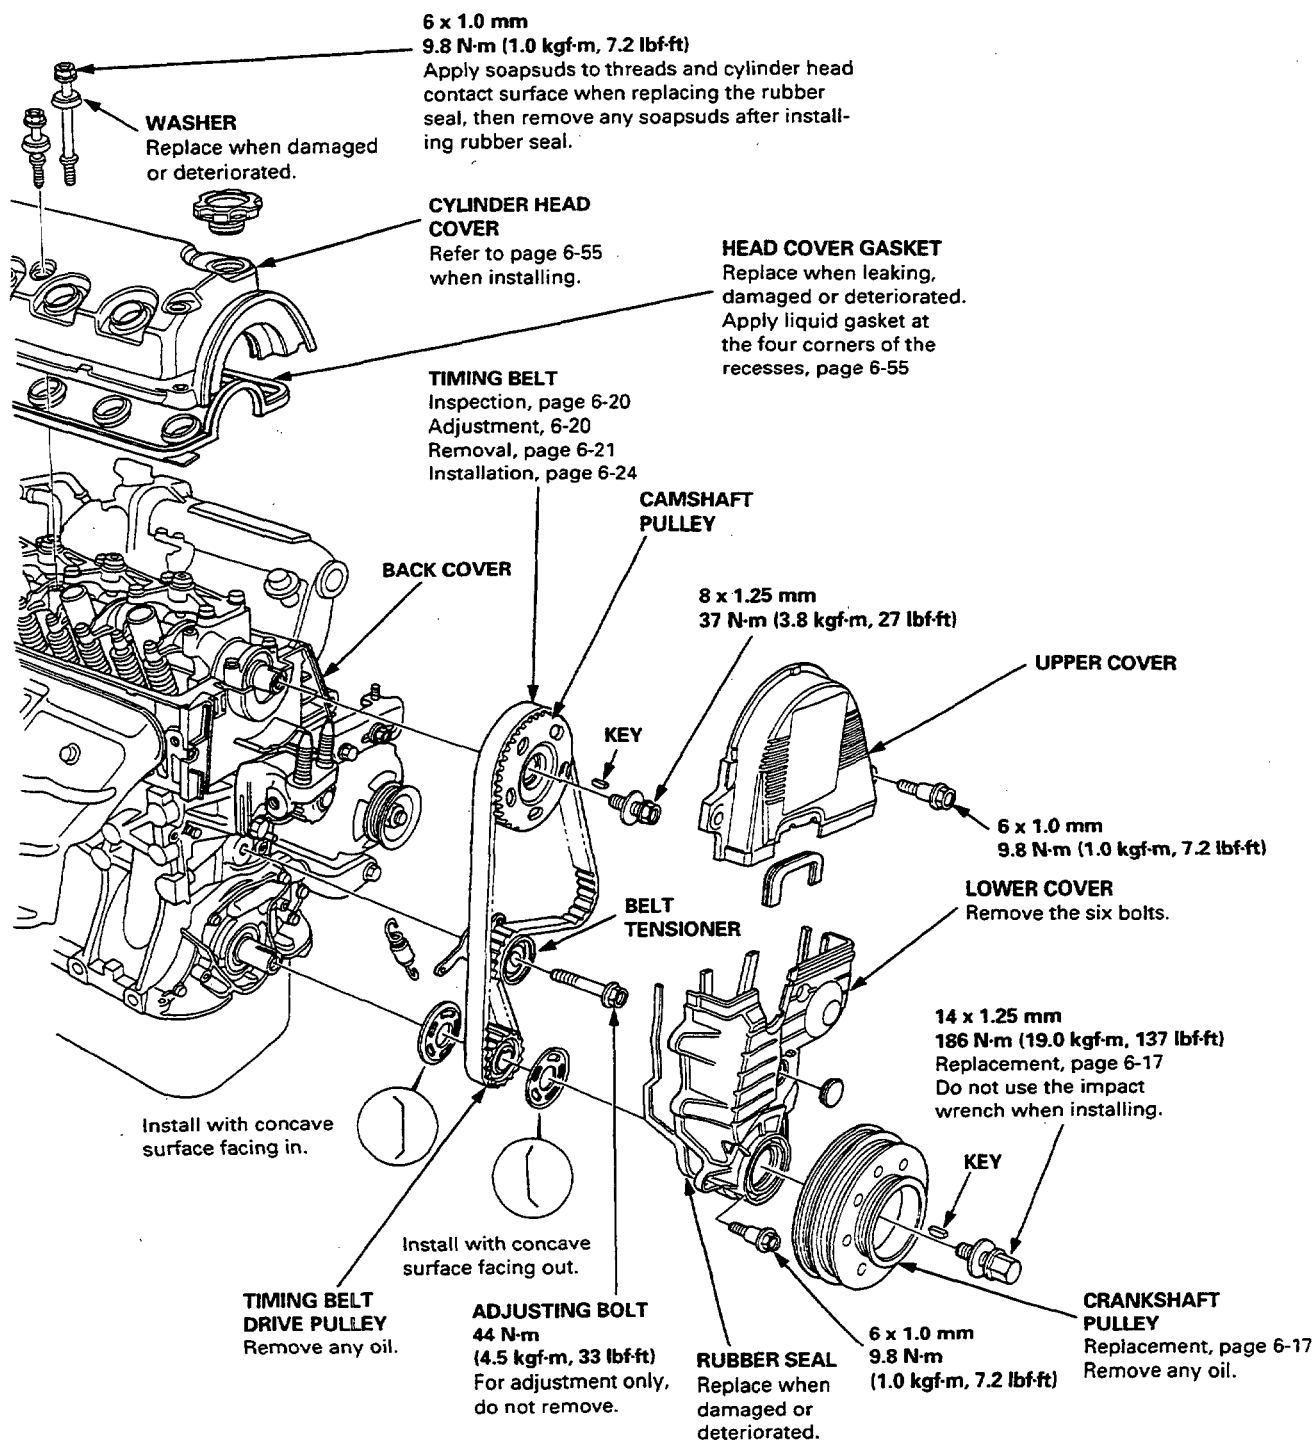



D16Y3, D14A2 engines:

