


# VTEC

## VTEC Solenoid Valve Inspection


1. Disconnect the 1P connector from the VTEC solenoid valve.
2. Measure resistance between the terminal and body ground.

Resistance: 14 – 30  $\Omega$

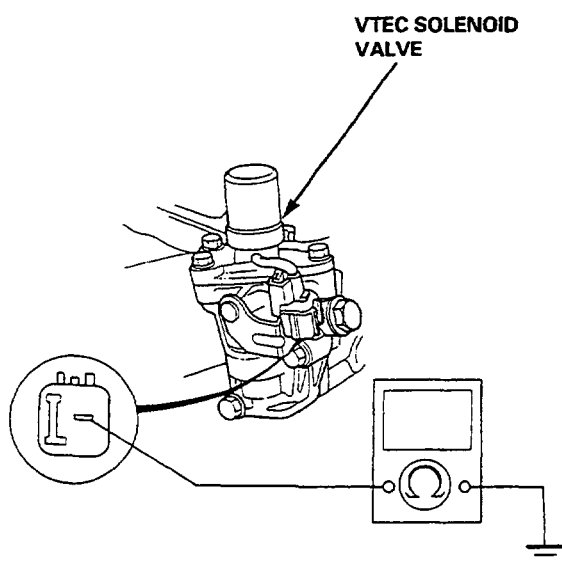

3. If the resistance is within specifications, remove the VTEC solenoid valve assembly from the cylinder head, and check the VTEC solenoid valve filter for clogging.
  - If there is clogging, replace the engine oil filter and the engine oil.

### VTEC SOLENOID VALVE ASSEMBLY

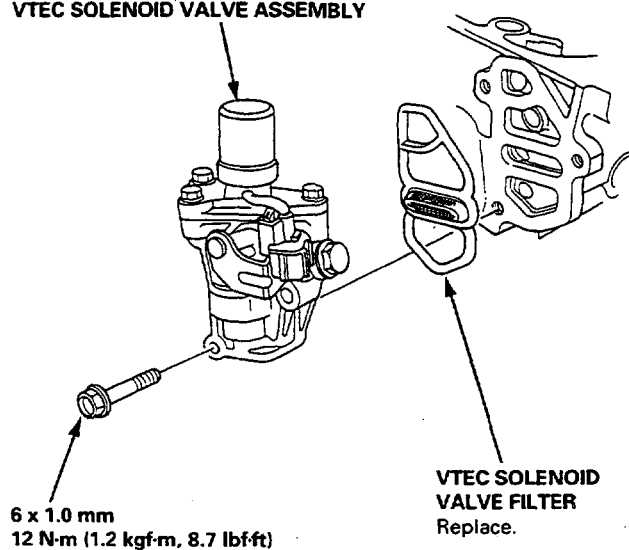

4. If the filter is not clogged, push the VTEC solenoid valve with your finger and check its movement.
  - If the VTEC solenoid valve is normal, check the engine oil pressure.

