

Intake Manifold


Replacement

NOTE: Use new gaskets and O-rings when reassembling.

CAUTION:

- Check for folds or scratches on the surface of the gasket.
- Replace with a new gasket if damaged.

D16Y2, D16Y3, D14A2 engines:

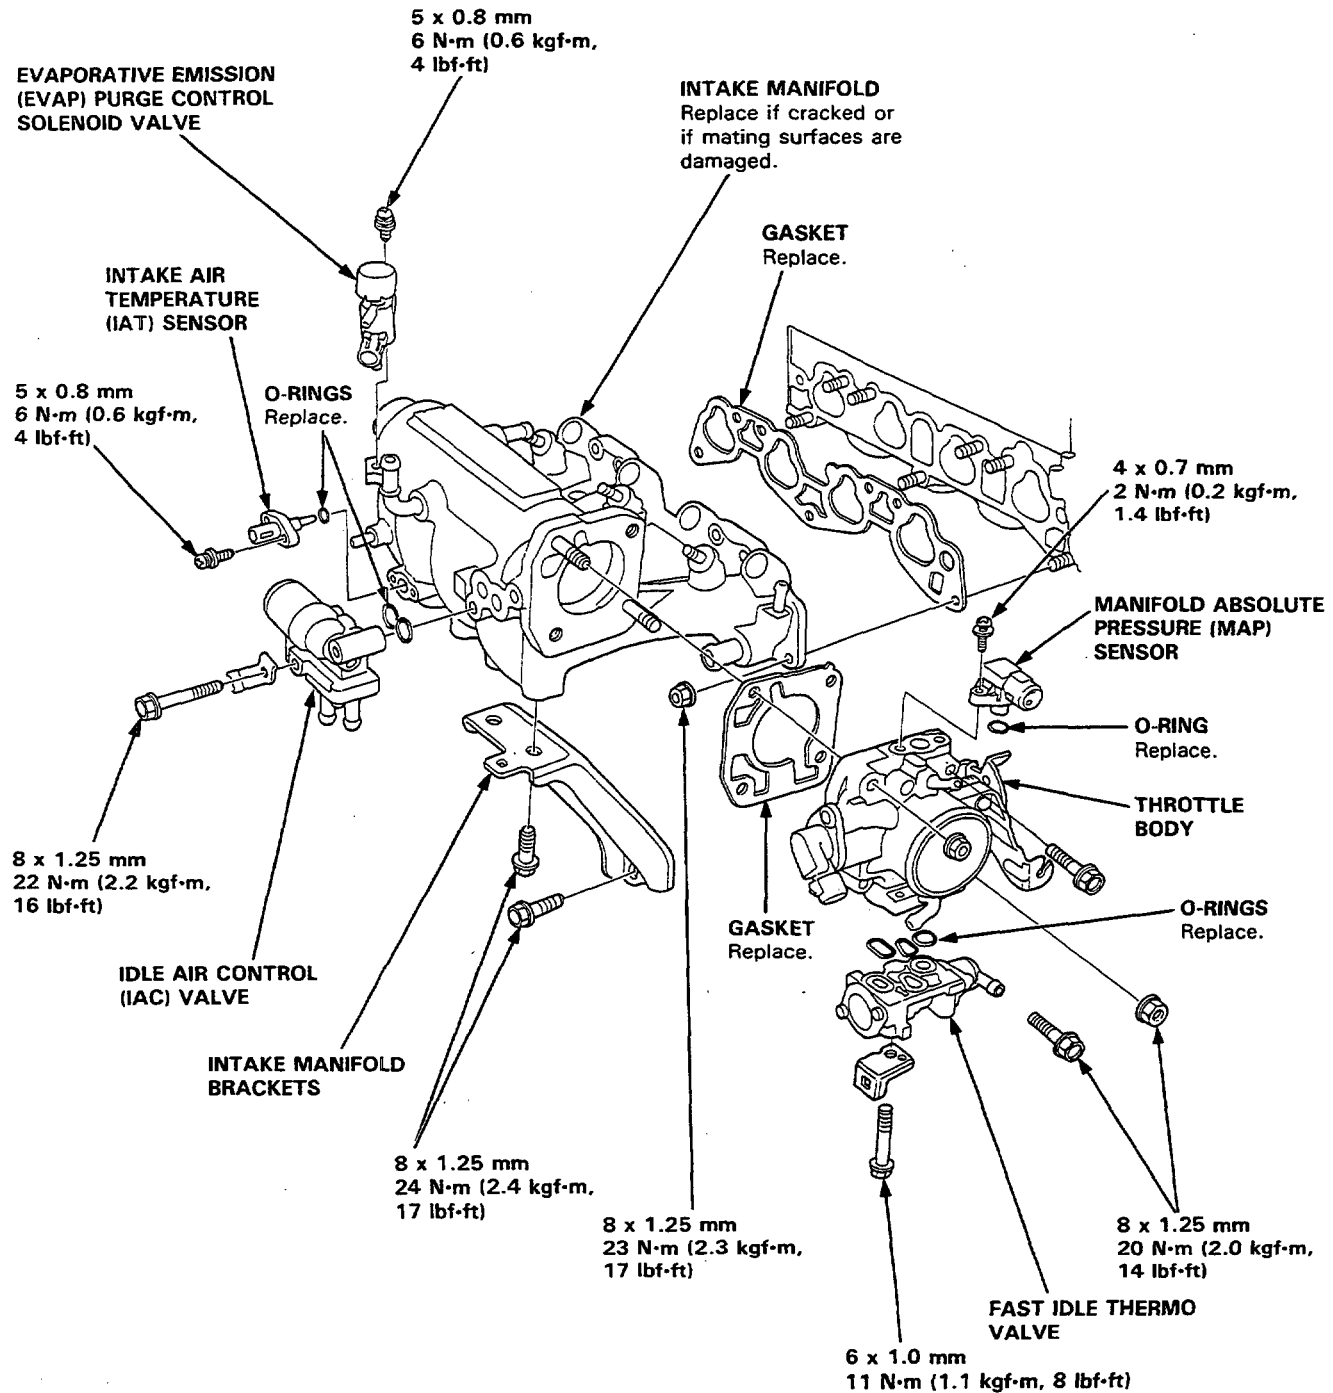



D15Z3 engine:

