


Front Grille Area




Replacement

1. Remove the 2 screws and the front grille (All except Coupe).
2. Remove the right and left front position lights.
3. Remove the screws and the headlight garnish (Canadian model only).
4. Remove the lower and side mount bolts, then remove the front panel by removing the upper bolts.

Coupe:

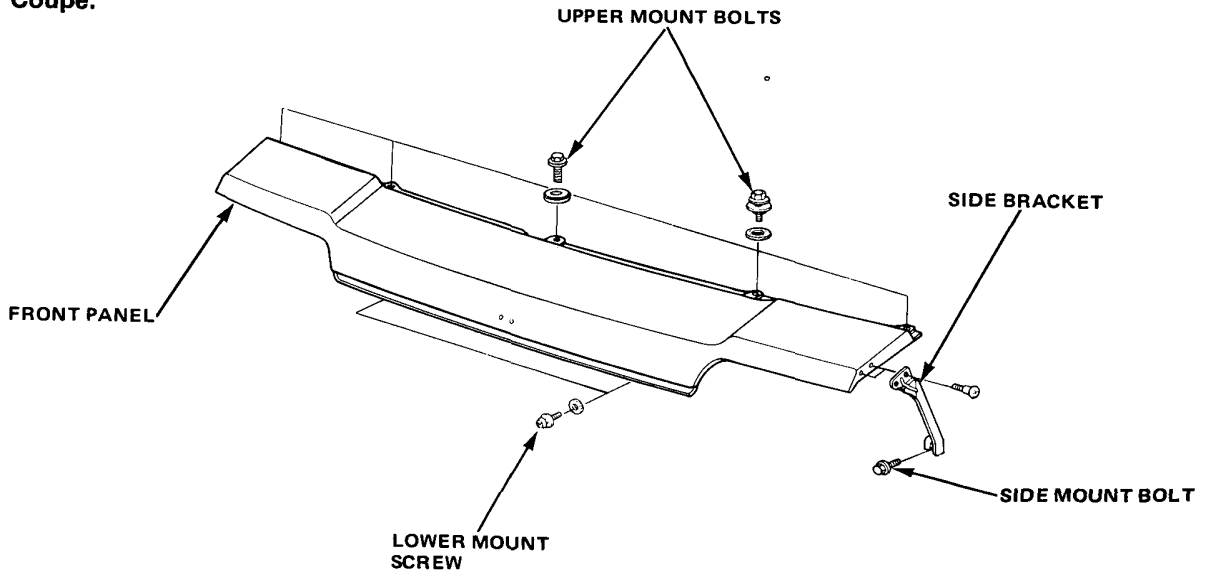

2D H/B, 4D, and 4D H/B:

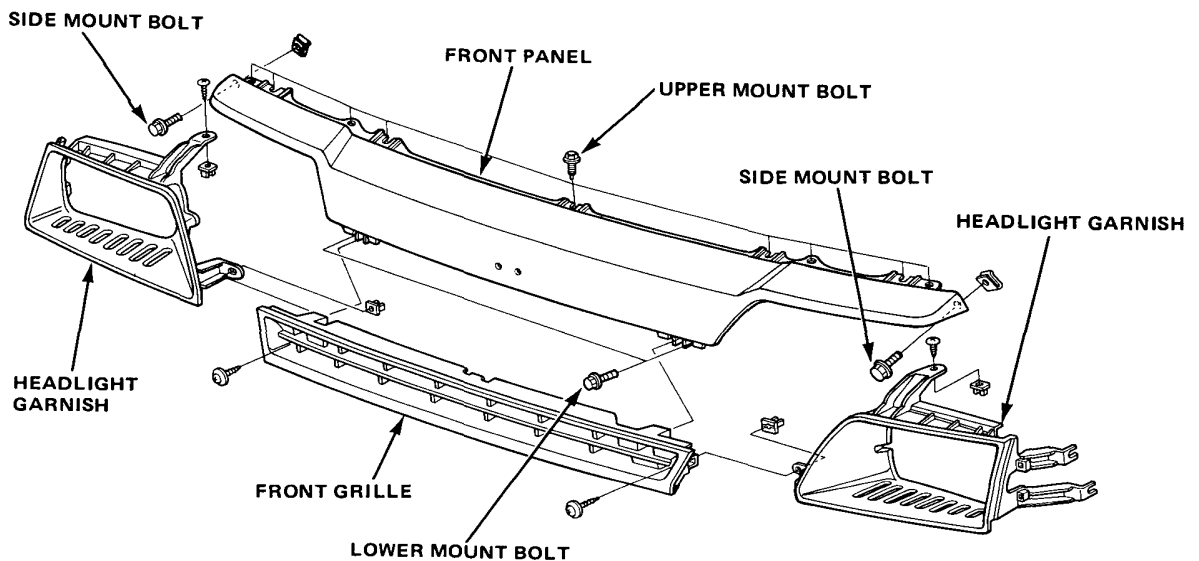


Rear Panels

Replacement

Coupe:

REAR PANEL


- Remove the rear trim, then remove the panel by removing the 2 mount nuts and 2 mount screws.

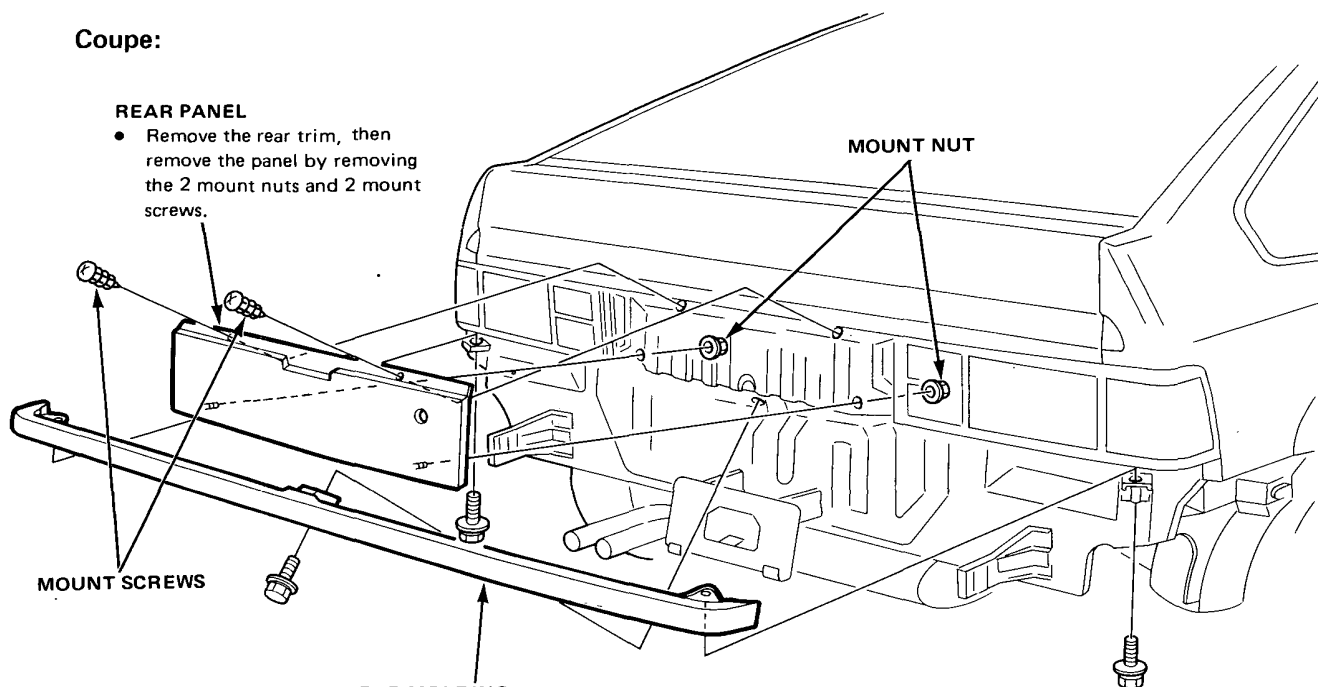

REAR MOLDING

- Remove the rear bumper, then remove the molding by removing the 3 mount bolts.


2D H/B:

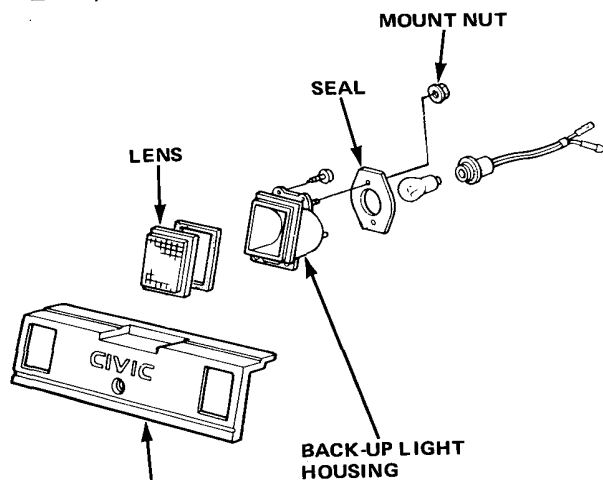

REAR PANEL

- Remove the rear trim, then remove the panel by removing the 4 mount nuts.

4D:

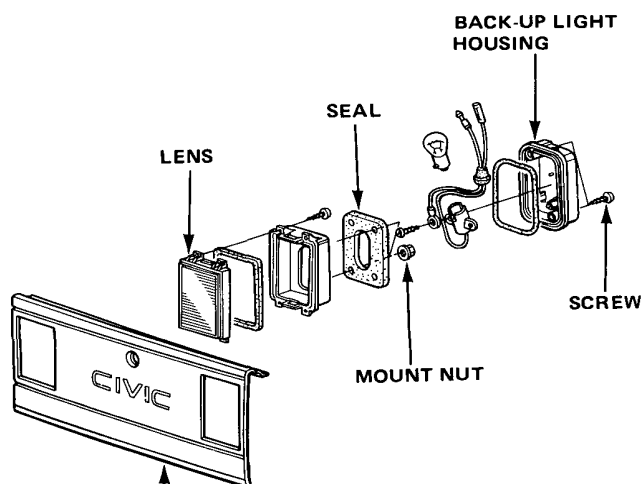

REAR PANEL

- Remove the screws and the back-up light housings, then remove the panel by removing the 4 mount nuts.