

Hood



Replacement/Adjustment

1. Remove the hood by removing the hood hinge bolts.
2. When installing the hood, don't tighten the hinge bolts until you've checked the adjustments shown below.

