




Light-on Warning System

Wiring Diagram

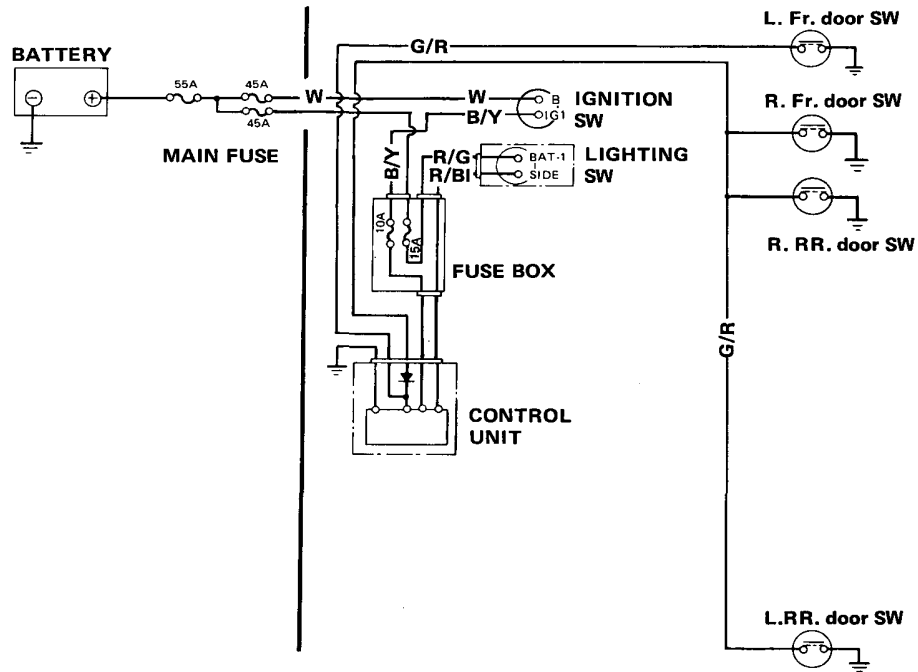

Troubleshooting

1. Buzzer does not sound.

Open driver's door.

Check room lamp.

OK?

YES

See page 25-14

NO

Check for continuity between driver's door switch harness wire and body ground.


Is there continuity?

YES

Check for continuity between ③ terminal and driver's door switch harness wire.


See page 25-14

NO Faulty door switch.

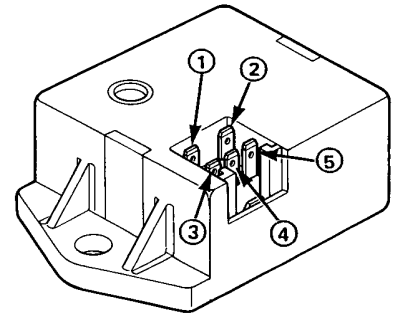

Light-on Warning System

Troubleshooting (cont'd)

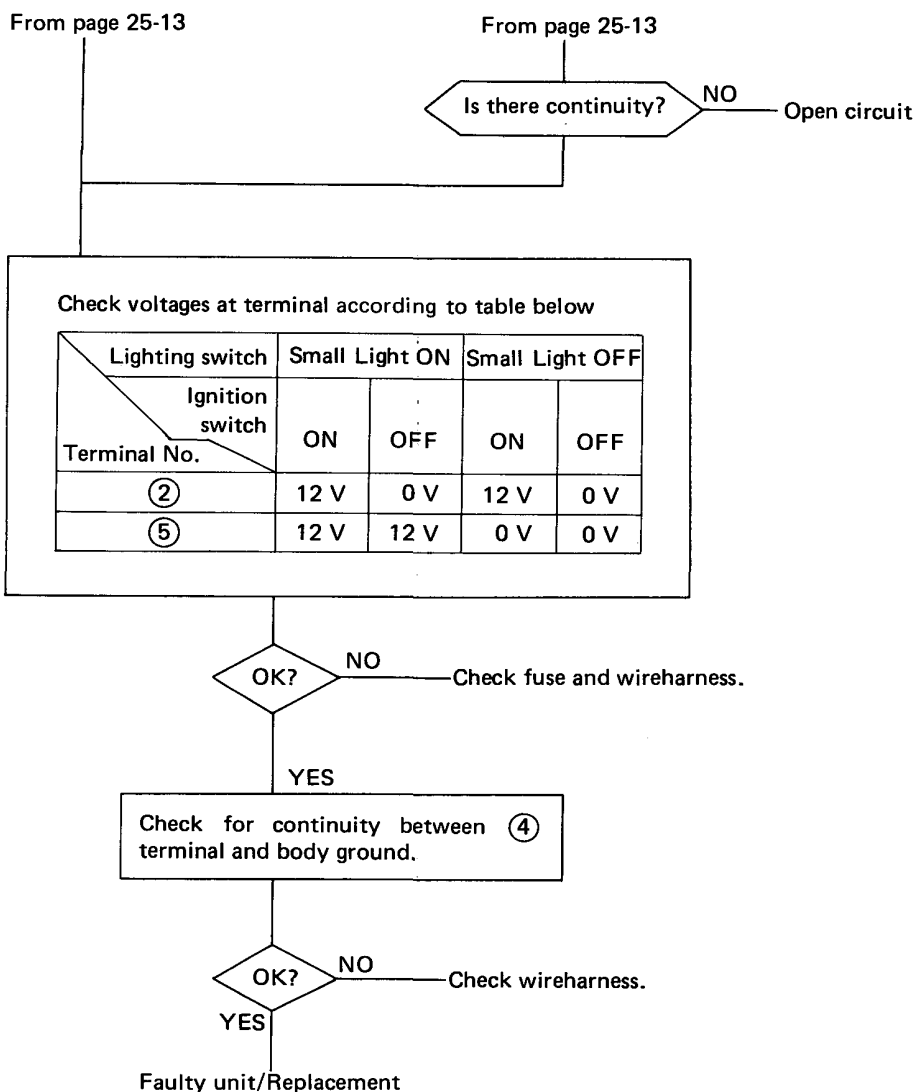

2. The room lamp won't light even when the driver's door is opened (the buzzer sounds): Replace the unit.
3. The buzzer sounds when the assistants door is opened: Replace the unit.