



# Sunroof

## Wiring Diagram

Coupe:

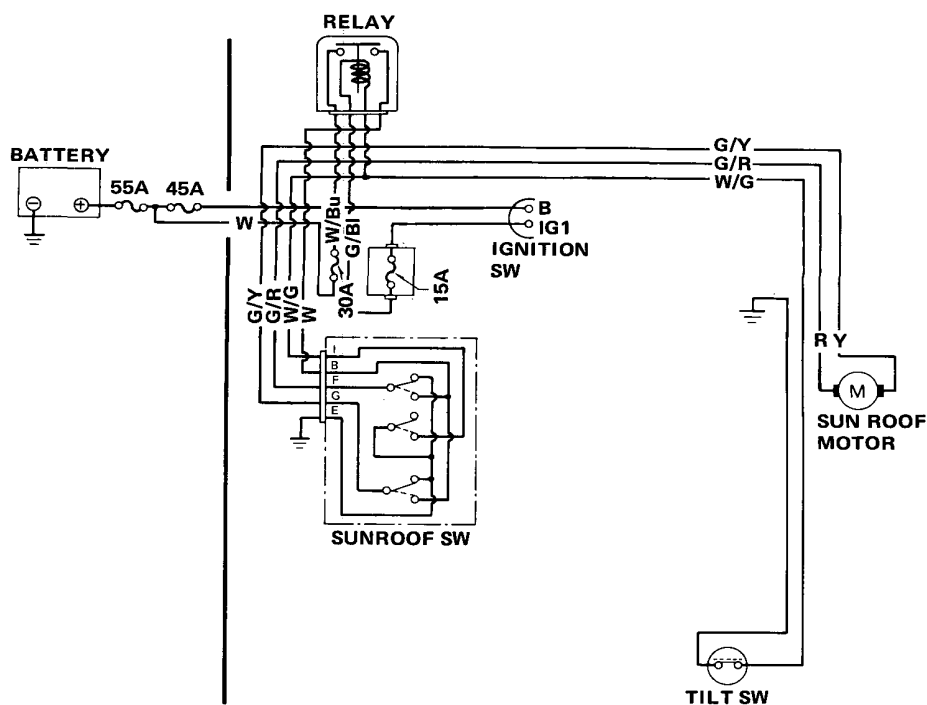

4D H/B:

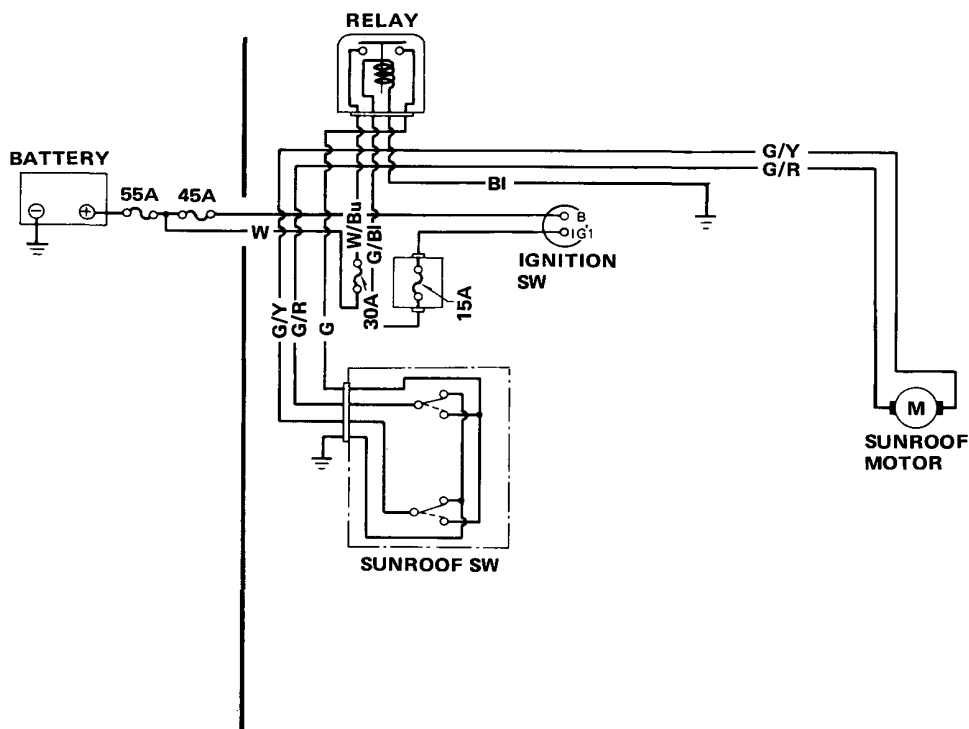




## Switch Testing (Coupe)

Check for continuity according to the table.


TERMINAL POSITION	B	F	G	I	E
CLOSE	○	○	○	○	○
OFF		○	○		○
TILT	○	○			
OPEN	○	○	○	○	○

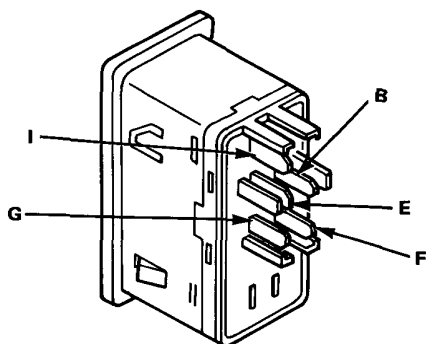

## Switch Testing (4D H/B)

Check for continuity according to table.

TERMINAL POSITION	V	O	S	G
OPEN	○	○		
OFF		○	○	○
CLOSE	○		○	


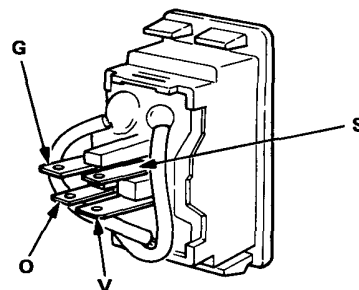


## Motor Testing

Check motor operation by connecting a wire from the battery positive terminal to one of the motor leads, and a battery ground to the other. Reverse the wires to be sure the motor will run in both directions.

(Coupe)

(4D H/B)

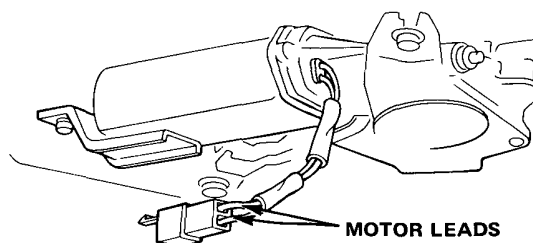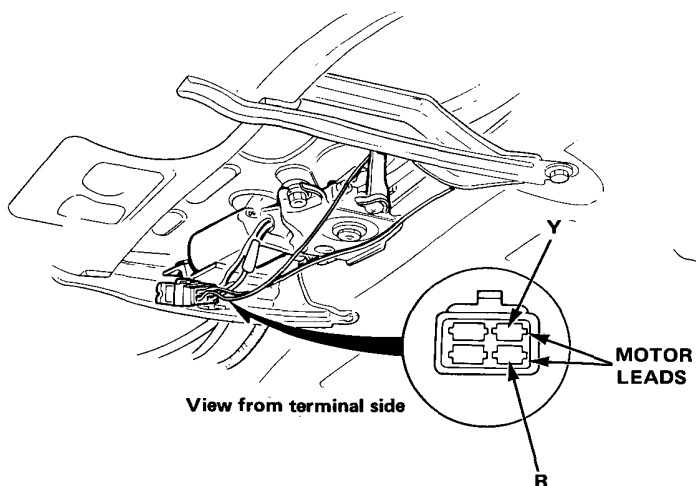


# Sunroof

## Rear Fog Light

### Sunroof Relay Testing


There should be continuity between A and B terminals, when applying battery voltage to C (positive) and D (negative) terminals. There should be no continuity when the battery is disconnected.

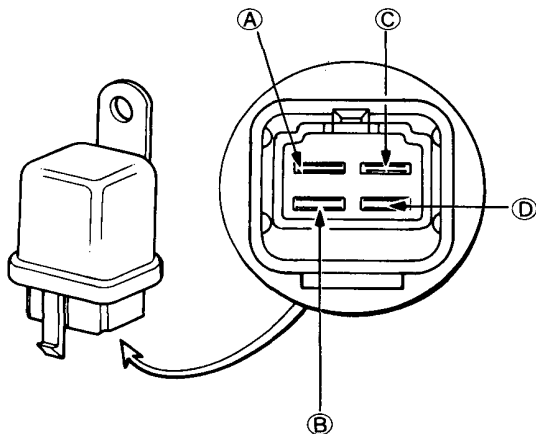

### Tilt Switch Testing (Coupe)

Check for continuity between the terminals. There should be continuity when the sunroof is not tilted. There should be no continuity when the sunroof is tilted.

#### TILT SWITCH TERMINALS

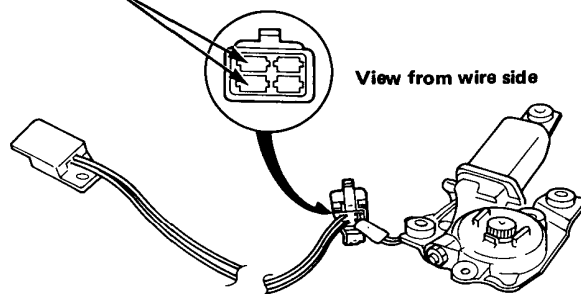

### Rear Fog Light Wiring Diagram

