




Seat Belt Warning System

Wiring Diagram

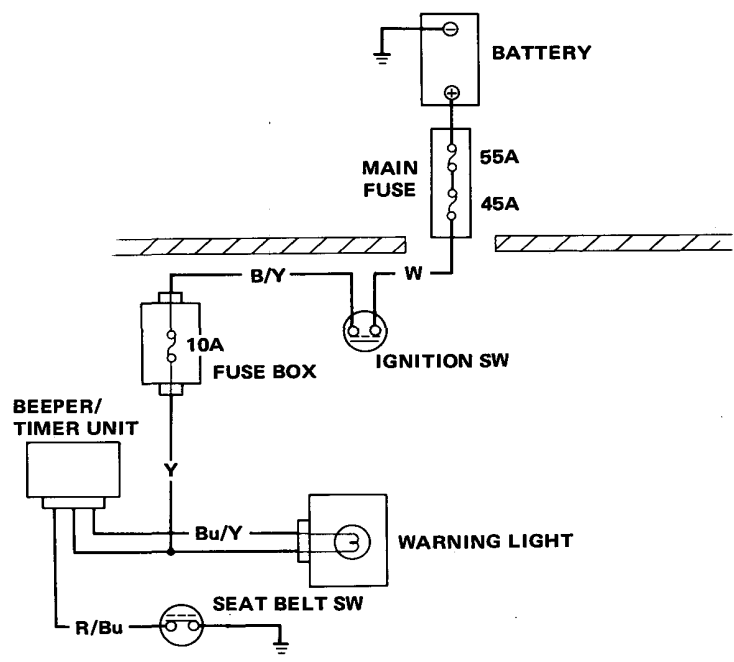

Troubleshooting



1. Light and beeper don't work.

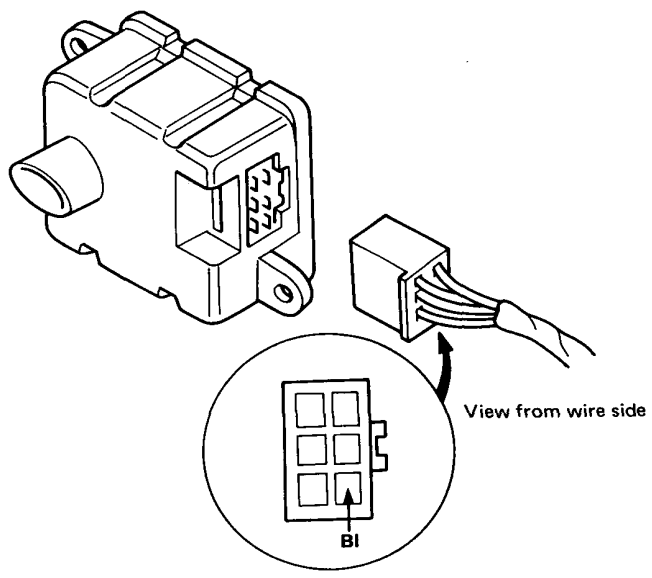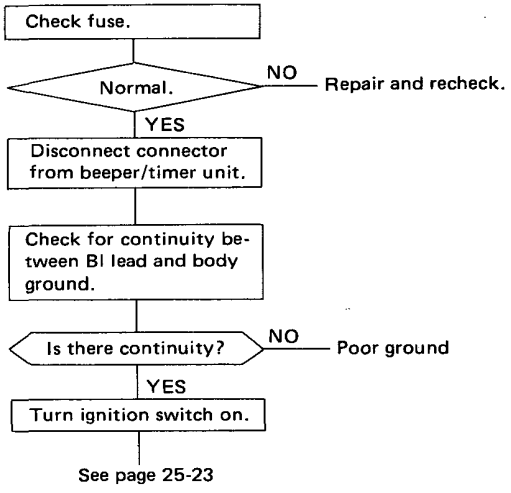


Seat Belt Warning System




Troubleshooting (cont'd)

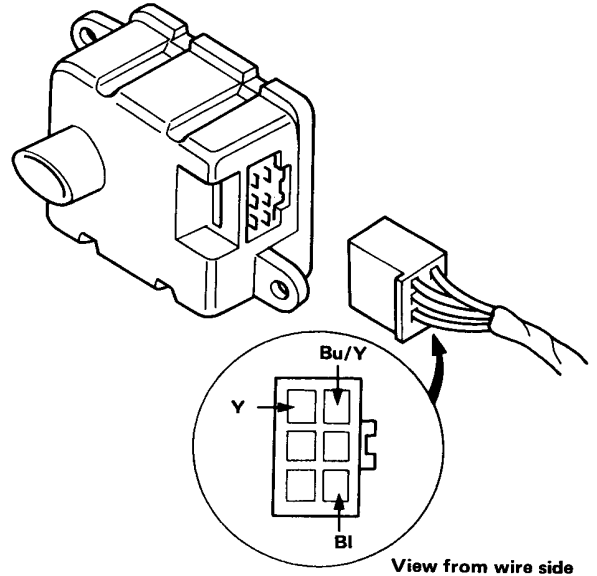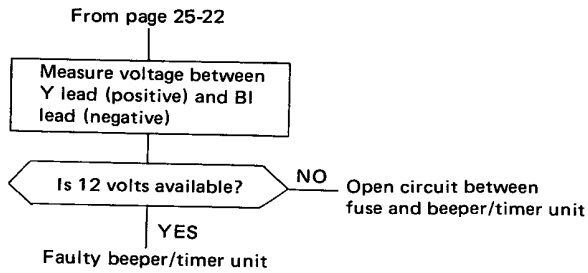

2. Light doesn't flash

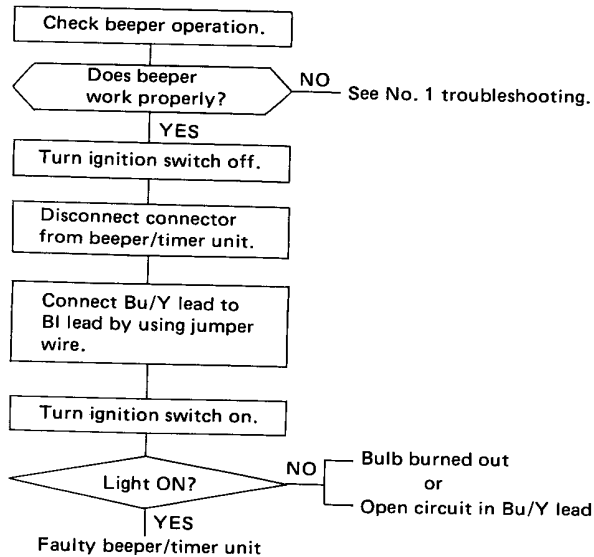



3. Beeper doesn't work.

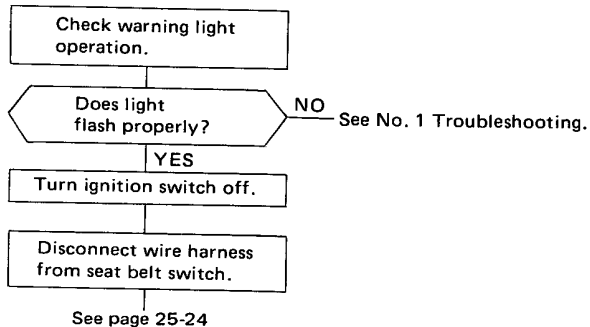

(cont'd)

Seat Belt Warning System

Troubleshooting (cont'd)

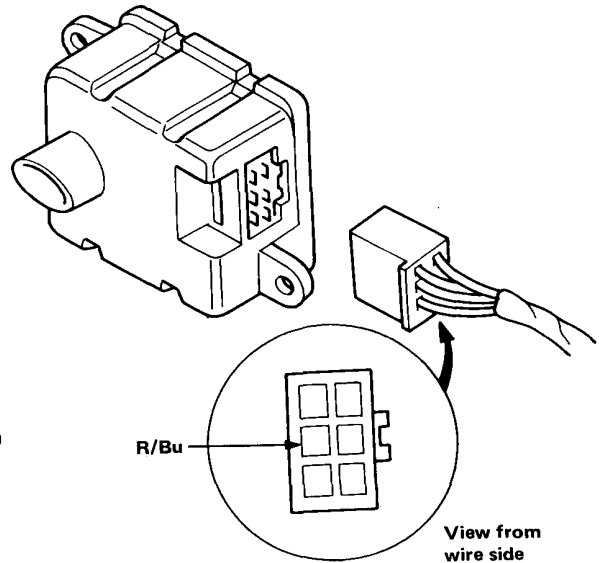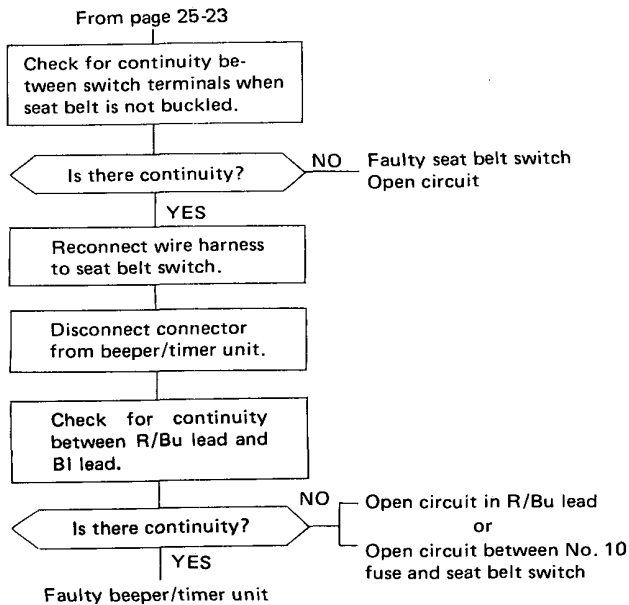

4. **Light stays on constantly.**
 - Short circuit in Bu/Y lead
5. **Light continues to flash and beeper won't shut off after 6 seconds.**
 - Faulty beeper/timer unit

Seat Belt Switch Testing

Check for continuity.

- There should be continuity when the seat belt is not buckled.
- There should be no continuity when the seat belt is buckled.

