


Key-On Warning System




Wiring Diagram

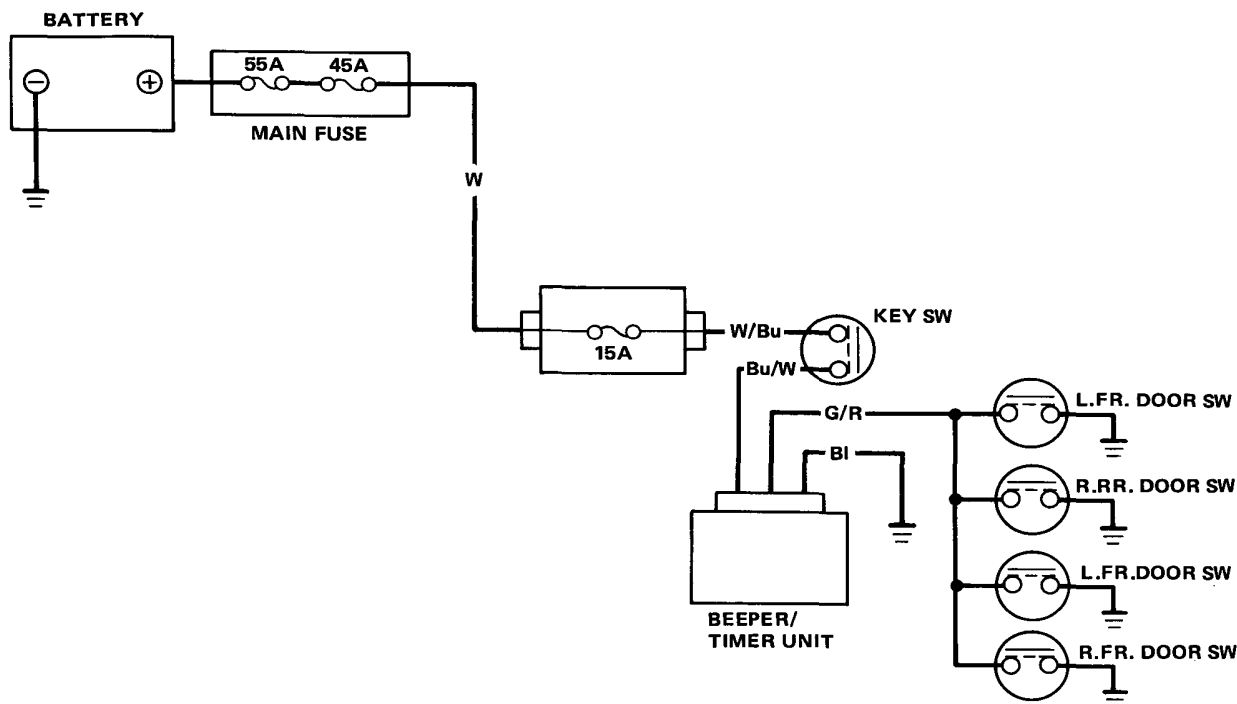

Troubleshooting

1. Beeper doesn't work.


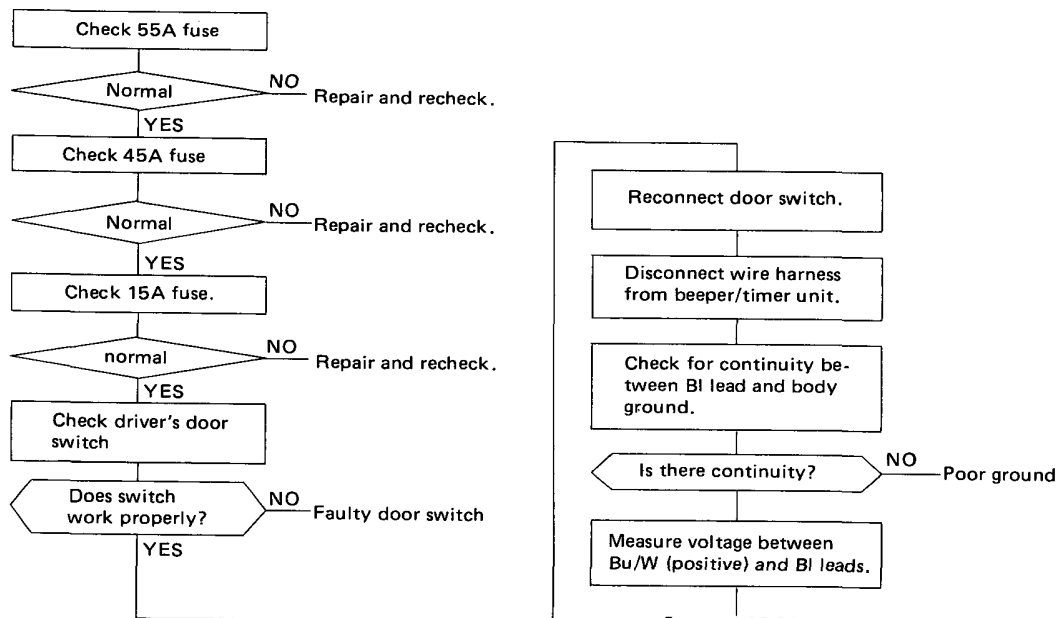


NOTE: Make sure the ignition key is inserted.

(cont'd)

Key-On Warning System

Troubleshooting (cont'd)

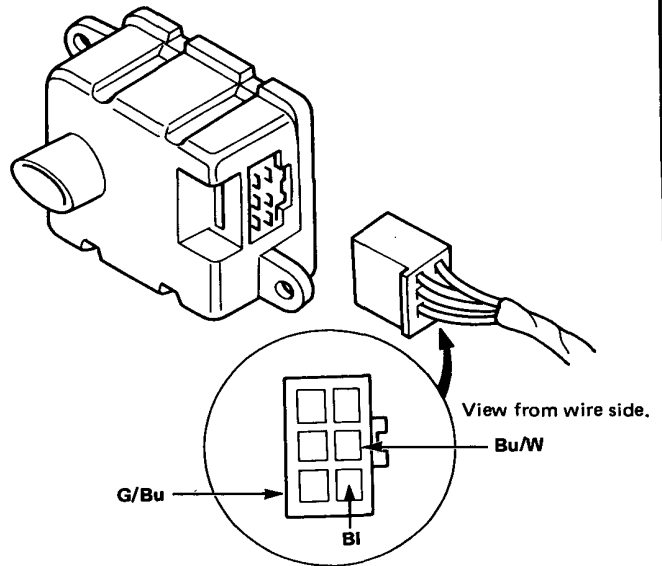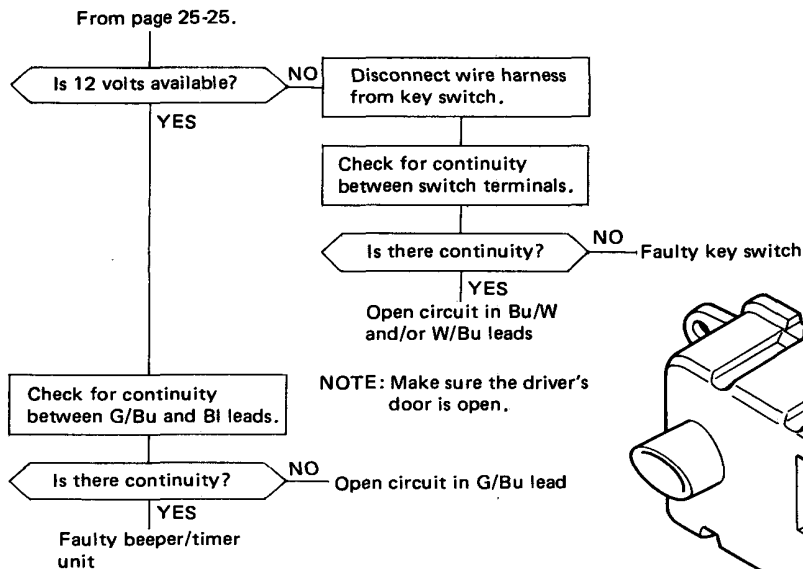

2. Beeper won't shut off when driver's door is closed.

- Faulty driver's door switch (switch remains on.)
- Short circuit in G/Bu lead
- Faulty beeper/timer unit

3. Beeper won't shut off when ignition key is removed.

- Faulty key switch (switch remains on.)

Key Switch Testing

Check for continuity.

- Turn the ignition switch on, then turn to LOCK position. There should be continuity when the ignition key is inserted.
- There should be no continuity when the ignition key is removed.

