


Heater Control Cable

Adjustment and Installation

Air Mix Cable


1. Slide the temperature control lever to COLD.
2. Close the air mix door, then connect the end of the cable to the arm and secure the cable housing with the clamp.

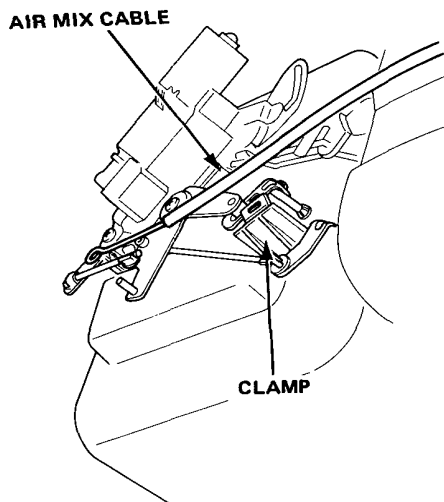

3. While looking through the heater duct opening, slide the temperature lever to HOT and make sure the air mix doors open fully, then slide the lever back to COLD. Make sure they close fully.

Mode Control Cable


1. Slide the mode control lever to the DEF position.
2. Move the mode control arm to the DEF position.
3. Connect the cable end to the function control arm, then secure the cable housing with the clamp.

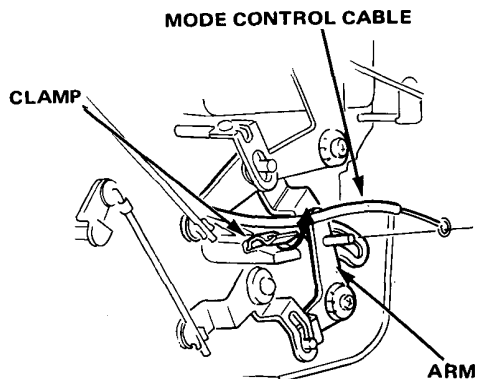


4. Move the mode control lever to the VENT position and check that the linkage operates smoothly.

Heater Valve Cable

1. Extend the end of the cable housing 5 mm (1/5 in.) from the end of the clamp boss and secure the housing with the clamp.
2. Connect the cable end to the heater valve control arm.

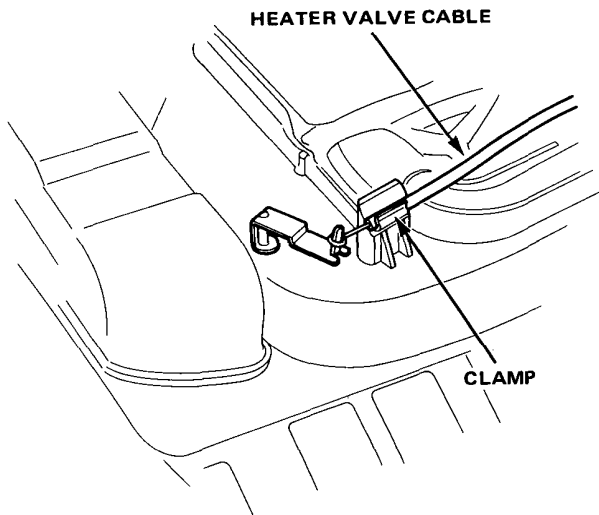

3. Slide the temperature control lever to COLD. Close the heater valve fully, then connect the end of the heater cable to the valve arm, and secure the cable housing with the clamp as shown.

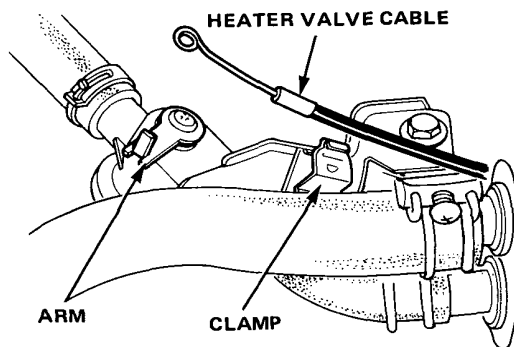


Heater Control Cable

Adjustment and Installation

Recirculation Cable

1. Slide the recirculation lever to the FRESH position.
2. Open the recirculation door.
3. Connect the recirculation cable to the recirculation arm and secure the cable housing with the clamp.

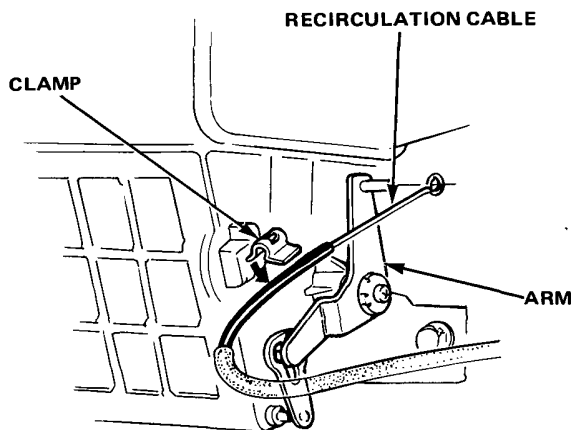

4. Move the recirculation lever to the REC position to be certain that the linkage operates smoothly.


Heater Control Panel



Replacement

Coupe

1. Disconnect the air mix cable from the heater.
2. Remove the trim panel.
3. Remove the temperature control lever knob and four screws, then remove the heater control panel from trim panel.

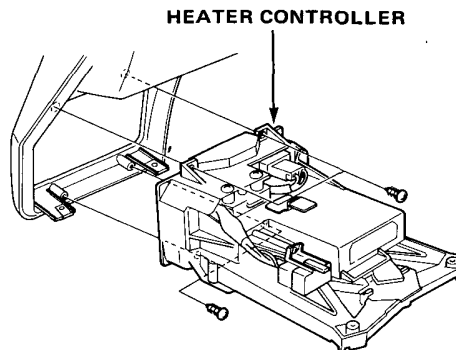

2DH/B, 4D, 4DH/B

1. Disconnect the temperature control cable, the function control cable and the recirculation cable.
2. Remove the heater control knobs and the fan switch knob.

2DH/B and 4D

3. Remove the center face panel.
4. Remove the heater control attaching screws.

4DH/B

3. Remove the illumination panel.
4. Remove the steering column mounting bolts and drop the steering column.
5. Remove the steering column mounting bolts, and drop the steering column.
6. Pull out the heater control panel from the side post the steering column.

NOTE: On the hatchback and sedan, the fan switch can be serviced separately. Remove the ashtray and heat shield. Remove the heater control knob and panel. Then remove the fan switch by removing the nut.

