

# Required Maintenance Schedule

CRX

SERVICE AT THE INTERVAL OF LISTED KM (MILES) OR MONTHS, WHICHEVER OCCURS FIRST.						
ITEMS	x 1,000 km	20	40	60	80	100
	x 1,000 miles	12	24	36	48	60
	months	12	24	36	48	60
IDLE SPEED AND IDLE CO		I	I	I	I	I
VALVE CLEARANCE		I	I	I	I	I
ALTERNATOR DRIVE BELT			I		I	
■ ENGINE OIL AND OIL FILTER		Replace every 10,000 km (6,000 miles) or 6 months				
■ TRANSMISSION OIL			R		R	
■ RADIATOR COOLANT					R*	
COOLING SYSTEM, HOSES AND CONNECTIONS			I		I	
AIR CLEANER ELEMENT		R	R	R	R	R
FUEL FILTER			R		R	
TANK, FUEL LINE AND CONNECTIONS			I		I	
IGNITION TIMING AND CONTROL SYSTEM			I		I	
SPARK PLUGS		R	R	R	R	R
DISTRIBUTOR CAP AND ROTOR			I		I	
IGNITION WIRING			I		I	
PCV VALVE			R		R	
BRAKE HOSES, LINES		I	I	I	I	I
BRAKE FLUID			R		R	
REAR BRAKES			I		I	
FRONT BRAKE DISCS AND CALIPERS		I	I	I	I	I
FRONT BRAKE PADS		Inspect every 10,000 km (6,000 miles) or 6 months				
PARKING BRAKE		I	I		I	
CLUTCH RELEASE ARM TRAVEL		I	I	I	I	I
ENGINE EXHAUST SILENCER, SUSPENSION MOUNTING BOLTS		I	I	I	I	I
FRONT WHEEL ALIGNMENT		I	I	I	I	I
STEERING OPERATION, TIE ROD ENDS, STEERING GEAR BOX AND BOOTS		I	I		I	

R—Replace

I—Inspect. After inspection, clean, adjust, repair or replace if necessary

■ **REMARK:** Day to day care (such as oil, coolant check and replenishment) should be done practically according to the Owner's Manual.

\* Thereafter, replace every 2 years or 48,000 km (30,000 miles), whichever comes first.

**CAUTION:** The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

"Severe driving conditions" include:

- A: Repeated short-distance driving
- B: Driving in dusty conditions
- C: Driving in severe, cold weather
- D: Driving in areas using road salt or other corrosive materials
- E: Driving on rough and/or muddy roads
- F: Towing a trailer

R—Replace

I—Inspect. After inspection, clean, adjust, repair or replace if necessary.

Condition	Maintenance item	Maintenance operation	Interval
A, B, F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 3 months
A, B, D, E, F	Front brake discs and calipers	I	Every 10,000 km (6,000 miles) or 6 months
A, B, C, E, F	Clutch release arm travel	I	Every 10,000 km (6,000 miles) or 6 months



## 2D H/B and 4D

SERVICE AT THE INTERVAL OF LISTED KM (MILES) OR MONTHS, WHICHEVER OCCURS FIRST.						
ITEMS	x 1,000 km	20	40	60	80	100
	x 1,000 miles	12	24	36	48	60
	months	12	24	36	48	60
IDLE SPEED AND IDLE CO		I	I	I	I	I
VALVE CLEARANCE		I	I	I	I	I
ALTERNATOR DRIVE BELT			I		I	
ENGINE OIL AND OIL FILTER		Replace every 10,000 km (6,000 miles) or 6 months				
TRANSMISSION OIL	MANUAL		R		R	
TRANSMISSION OIL**	HONDAMATIC	R		R		R
RADIATOR COOLANT					R*	
COOLING SYSTEM, HOSES AND CONNECTIONS			I		I	
AIR CLEANER ELEMENT		R	R	R	R	R
FUEL FILTER			R		R	
INTAKE AIR TEMP. CONTROL SYSTEM**						I
TANK, FUEL LINE AND CONNECTIONS			I		I	
THROTTLE CONTROL SYSTEM**			I		I	
CHOKE MECHANISM**			I		I	
CHARCOAL CANISTER**						I
TWO-WAY VALVE**						I
IGNITION TIMING AND CONTROL SYSTEM			I		I	
SPARK PLUGS		R	R	R	R	R
DISTRIBUTOR CAP AND ROTOR			I		I	
IGNITION WIRING			I		I	
PCV VALVE			R		R	
BLOW-BY FILTER**			R		R	
BRAKE HOSES, LINES		I	I	I	I	I
BRAKE FLUID			R		R	
REAR BRAKES			I		I	
FRONT BRAKE DISCS AND CALIPERS		I	I	I	I	I
FRONT BRAKE PADS		Inspect every 10,000 km (6,000 miles) or 6 months				
PARKING BRAKE		I	I		I	
CLUTCH RELEASE ARM TRAVEL		I	I	I	I	I
ENGINE EXHAUST SILENCER, SUSPENSION MOUNTING BOLTS		I	I	I	I	I
FRONT WHEEL ALIGNMENT		I	I	I	I	I
STEERING OPERATION, TIE ROD ENDS, STEERING GEAR BOX AND BOOTS		I	I		I	
POWER STEERING PUMP BELT**			I		I	
POWER STEERING SYSTEM**		I	I	I	I	I

R—Replace

I—Inspect. After inspection, clean, adjust, repair or replace if necessary

■ **REMARK:** Day to day care (such as oil, coolant check and replenishment) should be done practically according to the Owner's Manual.

\*1 Thereafter, replace every 2 years or 48,000 km (30,000 miles), whichever comes first.

\*2 Only for manual transmission on KW, KS and KQ types

\*3 Only for KQ and KY types

\*4 Except for cars equipped with Fuel Injection Engine.

\*5 Cars equipped with power steering.

**CAUTION:** The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

"Severe driving conditions" include:

- A: Repeated short-distance driving
- B: Driving in dusty conditions
- C: Driving in severe, cold weather
- D: Driving in areas using road salt or other corrosive materials
- E: Driving on rough and/or muddy roads
- F: Towing a trailer

R—Replace

I—Inspect. After inspection, clean, adjust, repair or replace if necessary.

Condition	Maintenance item	Maintenance operation	Interval
A, B, F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 3 months
A, B, D, E, F	Front brake discs and calipers	I	Every 10,000 km (6,000 miles) or 6 months
A, B, C, E, F	Clutch release arm travel	I	Every 10,000 km (6,000 miles) or 6 months
B, C, E	Power steering system	I	Every 10,000 km (6,000 miles) or 6 months

# Required Maintenance Schedule

4D H/B

SERVICE AT THE INTERVAL OF LISTED KM (MILES) OR MONTHS, WHICHEVER OCCURS FIRST.						
ITEMS	x 1,000 km	20	40	60	80	100
	x 1,000 miles	12	24	36	48	60
	months	12	24	36	48	60
IDLE SPEED AND IDLE CO		I	I	I	I	I
VALVE CLEARANCE		I	I	I	I	I
ALTERNATOR DRIVE BELT			I		I	
■ ENGINE OIL AND OIL FILTER		Replace every 10,000 km (6,000 miles) or 6 months				
■ TRANSMISSION OIL	MANUAL		R		R	
■ TRANSMISSION OIL	HONDAMATIC	R		R		R
■ RADIATOR COOLANT					R* <sup>1</sup>	
COOLING SYSTEM, HOSES AND CONNECTIONS			I		I	
AIR CLEANER ELEMENT		R	R	R	R	R
FUEL FILTER			R		R	
INTAKE AIR TEMP. CONTROL SYSTEM						I
TANK, FUEL LINE AND CONNECTIONS			I		I	
THROTTLE CONTROL SYSTEM* <sup>2</sup>			I		I	
CHOKE MECHANISM			I		I	
CHARCOAL CANISTER* <sup>3</sup>						I
TWO-WAY VALVE* <sup>3</sup>						I
IGNITION TIMING AND CONTROL SYSTEM			I		I	
SPARK PLUGS		R	R	R	R	R
DISTRIBUTOR CAP AND ROTOR			I		I	
IGNITION WIRING			I		I	
PCV VALVE			R		R	
BLOW-BY FILTER			R		R	
BRAKE HOSES, LINES		I	I	I	I	I
BRAKE FLUID			R		R	
REAR BRAKES			I		I	
FRONT BRAKE DISCS AND CALIPERS		I	I	I	I	I
FRONT BRAKE PADS		Inspect every 10,000 km (6,000 miles) or 6 months				
PARKING BRAKE		I	I		I	
CLUTCH RELEASE ARM TRAVEL		I	I	I		I
ENGINE EXHAUST SILENCER, SUSPENSION MOUNTING BOLTS		I	I	I	I	I
FRONT WHEEL ALIGNMENT		I	I	I	I	I
STEERING OPERATION, TIE ROD ENDS, STEERING GEAR BOX AND BOOTS		I	I		I	
POWER STEERING PUMP BELT			I		I	
POWER STEERING SYSTEM		I	I	I	I	I

R—Replace I—Inspect. After inspection, clean, adjust, repair or replace if necessary

■ **REMARK:** Day to day care (such as oil, coolant check and replenishment) should be done practically according to the Owner's Manual.

\*<sup>1</sup> Thereafter, replace every 2 years or 48,000 km (30,000 miles), whichever comes first.

\*<sup>2</sup> Only for manual transmission on KW, KS and KQ types

\*<sup>3</sup> Only for KQ and KY types

**CAUTION:** The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

"Severe driving conditions" include:

- A: Repeated short-distance driving
- B: Driving in dusty conditions
- C: Driving in severe cold weather
- D: Driving in areas using road salt or other corrosive materials
- E: Driving on rough and/or muddy roads
- F: Towing a trailer

R—Replace

I—Inspect. After inspection, clean, adjust, repair or replace if necessary.

Condition	Maintenance item	Maintenance operation	Interval
A, B, F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 3 months
A, B, D, E, F	Front brake discs and calipers	I	Every 10,000 km (6,000 miles) or 6 months
A, B, C, E, F	Clutch release arm travel	I	Every 10,000 km (6,000 miles) or 6 months
B, C, E	Power steering system	I	Every 10,000 km (6,000 miles) or 6 months