

Required Maintenance Schedule



Canadian Model

R — REPLACE

I — INSPECT

AFTER INSPECTION, CLEAN, ADJUST, REPAIR OR REPLACE IF NECESSARY

SERVICE AT THE INTERVAL LISTED x 1,000 KM (OR MILES) OR AFTER THAT NUMBER OF MONTHS, WHICHEVER OCCURS FIRST.		* ¹ Inspect idle CO every 60 months or 96,000 km (60,000 miles), whichever comes first. * ² Thereafter, replace every 2 years or 48,000 km (30,000 miles), whichever comes first.											
ITEMS		miles/months	7.5	15	22.5	30	37.5	45	52.5	60			
		km	12	24	36	48	60	72	84	96			
ENGINE	IDLE SPEED			I		I		I		I ^{*1}			
	VALVE CLEARANCE			I		I		I		I			
	ALTERNATOR DRIVE BELT					I				I			
	ENGINE OIL		R	R	R	R	R	R	R	R			
	ENGINE OIL FILTER		R	R	R	R	R	R	R	R			
	TRANSMISSION OIL	MANUAL				R					R		
		HONDAMATIC		R					R				
	RADIATOR COOLANT							R ^{*2}					
	COOLING SYSTEM, HOSES AND CONNECTIONS						I				I		
FUEL SYSTEM	AIR CLEANER ELEMENT					R				R			
	FUEL FILTER									R			
	INTAKE AIR TEMP. CONTROL SYSTEM									I			
	TANK, FUEL LINES AND CONNECTIONS					I				I			
	THROTTLE CONTROL SYSTEM					I				I			
	CHOKE MECHANISM						I				I		
EVAPORATIVE CONTROL SYSTEM	CHARCOAL CANISTER									I			
	TWO-WAY VALVE									I			
IGNITION COMPONENTS	IGNITION TIMING AND CONTROL SYSTEM					I				I			
	SPARK PLUGS			R		R		R		R			
	DISTRIBUTOR CAP AND ROTOR					I				I			
	IGNITION WIRING					I				I			
CRANKCASE EMISSION CONTROL SYSTEM	PCV VALVE					R				R			
	BLOW-BY FILTER					R				R			
FRAME	BRAKE HOSES, LINES		I	I		I		I		I			
	BRAKE FLUID					R				R			
	REAR BRAKES					I				I			
	FRONT BRAKE PADS, DISCS AND CALIPERS		I	I	I	I	I	I	I	I			
	PARKING BRAKE		I			I				I			
	CLUTCH RELEASE ARM TRAVEL		I	I	I	I	I	I	I	I			
	ENGINE EXHAUST SILENCER, SUSPENSION MOUNTING BOLTS		I	I		I		I		I			
	WHEEL ALIGNMENT (FRONT)			I		I		I		I			
	STEERING OPERATION, TIE ROD ENDS, STEERING GEAR BOX AND BOOTS		I			I					I		

CAUTION:

- If vehicle is operated under severe conditions; driving in severe cold condition, short distance driving or driving in dusty condition, change engine oil and engine oil filter every 5,000 km (3,000 miles) or 3 months, whichever comes first.
- Disc brakes should be serviced every 7-1/2 months or 12,000 km (7,500 miles) however, in areas using a high concentration of road salt or other corrosive materials more frequent servicing may be required.

REMARK: DAY TO DAY CARE (such as oil, coolant level check and replenishment etc,) should be done practically according to the Owner's Manual.

(cont'd)

Required Maintenance Schedule (cont'd)

Except Canadian Model

R — REPLACE

I — INSPECT

AFTER INSPECTION, CLEAN, ADJUST, REPAIR OR REPLACE IF NECESSARY

SERVICE AT THE INTERVAL LISTED x 1,000 KM (OR MILES) OR AFTER THAT NUMBER OF MONTHS, WHICHEVER OCCURS FIRST.		*1 Thereafter, replace every 2 years or 48,000 km (30,000 miles), whichever comes first.									
ITEMS		Miles/months	7.5	15	22.5	30	37.5	45	52.5	60	
		km	12	24	36	48	60	72	84	96	
ENGINE	IDLE SPEED AND IDLE CO			I		I		I		I	
	VALVE CLEARANCE			I		I		I		I	
	ALTERNATOR DRIVE BELT					I				I	
	ENGINE OIL *1		R	R	R	R	R	R	R	R	
	ENGINE OIL FILTER		R	R	R	R	R	R	R	R	
	TRANSMISSION OIL	MANUAL				R					R
		HONDAMATIC		R				R			
	RADIATOR COOLANT							R*1			
FUEL SYSTEM	COOLING SYSTEM, HOSES AND CONNECTIONS					I				I	
	AIR CLEANER ELEMENT			R		R		R		R	
	FUEL FILTER					R				R	
	INTAKE AIR TEMP. CONTROL SYSTEM*4									I	
	TANK, FUEL LINES AND CONNECTIONS					I				I	
	THROTTLE CONTROL SYSTEM*2 *4					I				I	
EVAPORATIVE CONTROL SYSTEM*3	CHOKE MECHANISM *4					I				I	
	CHARCOAL CANISTER									I	
IGNITION COMPONENTS	TWO-WAY VALVE									I	
	IGNITION TIMING AND CONTROL SYSTEM					I				I	
	SPARK PLUGS			R		R		R		R	
	DISTRIBUTOR CAP AND ROTOR					I				I	
CRANKCASE EMISSION CONTROL SYSTEM	IGNITION WIRING					I				I	
	PCV VALVE					R				R	
	BLOW-BY FILTER					R				R	
FRAME	BRAKE HOSES, LINES		I	I		I		I		I	
	BRAKE FLUID					R				R	
	REAR BRAKES					I				I	
	FRONT BRAKE PADS, DISCS AND CALIPERS		I	I	I	I	I	I	I	I	
	PARKING BRAKE		I			I				I	
	CLUTCH RELEASE ARM TRAVEL		I	I	I	I	I	I	I	I	
	ENGINE EXHAUST SILENCER, SUSPENSION MOUNTING BOLTS		I	I		I		I		I	
	WHEEL ALIGNMENT (FRONT)			I		I		I		I	
	STEERING OPERATION, TIE ROD ENDS, STEERING GEAR BOX AND BOOTS		I			I				I	

CAUTION:

- If vehicle is operated under severe conditions; driving in severe cold condition, short distance driving or driving in dusty condition, change engine oil and engine oil filter every 5,000 km (3,000 miles) or 3 months, whichever comes first.
- Disc brakes should be serviced every 7-1/2 months or 12,000 km (7,500 miles) however, in areas using a high concentration of road salt or other corrosive materials more frequent servicing may be required.

REMARK: DAY TO DAY CARE (such as oil, coolant level check and replenishment etc,) should be done practically according to the Owner's Manual.

*2 Only for Manual transmission on Swedish, Swiss and Australian types.

*3 Only for the cars sold in Australia.

*4 Except the car with Electronical Fuel Injection.