

Steering Wheel



Disassembly/Reassembly

Removal


1. Remove the center pad.
2. Remove the steering shaft nut.
3. Remove the steering wheel by rocking it slightly side-to-side as you pull steadily with both hands.

Disassembly

1. Remove the upper and lower covers.
2. Remove the contact plate. Check the contact points and repair if necessary.

Reassembly

1. Adjust the clearance between the coil springs and the contact face to 1.0-1.5 mm (0.04-0.06 in.)
2. Clean the contact plate points.
3. Install the upper and lower covers.
4. Turn the front wheels to a straight ahead position.
5. Install the steering wheel in a straight ahead position.
6. Tighten the steering wheel mount nut and torque to 50 N·m (5.0 kg·m, 36 lb·ft).
7. Check that the horn works properly, then install the center pad.

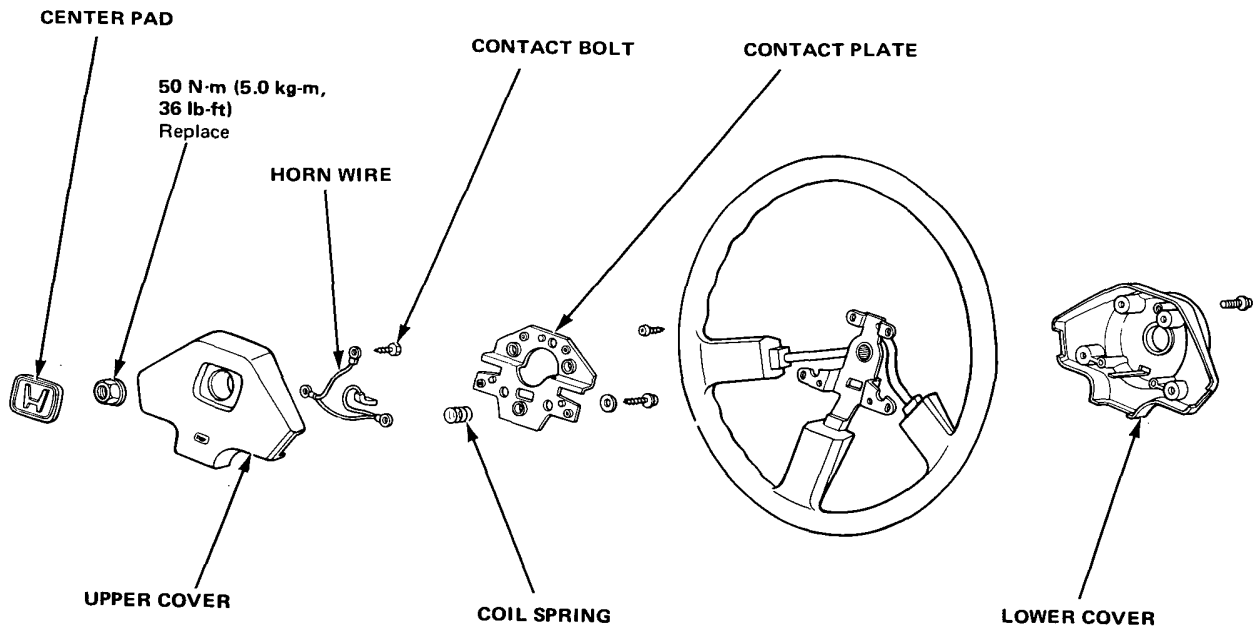

Steering Wheel

Disassembly/Reassembly

