

0

Honda CR-V Body Repair

[Introduction.....](#) 0-2

[Table of Contents.....](#) 0-3

[Index.....](#) 0-7

1

General Info

2

Preparation
of Work

3

*Replacement

4

Body
Dimensional
Drawings

5

Rust
Prevention

6

Paints

Introduction

How to use this manual

This manual covers the repairs of 2002 CR-V that have been involved in an accident, and it describes the work related to the replacement of damaged body parts.

Please read through these instructions and familiarize yourself with them before actually using this manual.

NOTE: Refer to the 2002 CR-V Shop Manual, P/N. 62S9A00 for specifications, wire harness locations, safety stand support points, etc.

Special Information



WARNING



You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.



CAUTION



You CAN be HURT if you don't follow instructions.

NOTE: Gives helpful information.



CAUTION



Detailed descriptions of standard workshop procedures, safety principles and service operations are not included. Please note that this manual does contain warnings and cautions against some specific service methods which could cause PERSONAL INJURY, damage a vehicle, or make it unsafe. Please understand that these warnings cannot cover all conceivable ways in which service, whether or not recommended by Honda, might be done or of the possible hazardous consequences of each conceivable way, nor could Honda investigate all such ways. Anyone using service procedures or tools, whether or not recommended by Honda, must satisfy himself thoroughly that neither personal safety or vehicle safety will be jeopardized.

All information contained in this manual is based on the latest product information available at the time of printing. We reserve the right to make changes at any time without notice. No part of this publication may be reproduced, stored in retrieval system, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher. This includes text, figures and tables.

Sections with an * include SRS components; special caution is required when servicing

HONDA MOTOR CO., LTD.

Service Publication Office

First Edition 12/2001 124 pages

All Rights Reserved

Table of Contents

Honda CR-V Body Repair

Table of Contents	0-3
Index	0-7

General Information

Supplemental Restraint System (SRS)	1-2
SRS Component Replacement / Inspection After Deployment	1-3
Identification Number Locations	1-4
Lift and Support Points	1-5
Frame Hoist	1-5
Safety Stands	1-5
Floor Jack	1-5
Body Specifications / Wheel Alignment	1-6
Exterior Parts Removal / Installation	1-7
Tailgate Compartment Parts Removal / Installation	1-8
Body Construction	1-9
Door and Bumper Reinforcement Beams	1-10
Zinc-plated Steel Plate Repair	1-11
Color Chart Paint Specifications	1-12
Types and Materials of Exterior Plastic Parts	1-14

Preparation of Work

Outline of Body Repair	2-2
General Safety Precaution	2-3
Accurate Inspection of Damaged Parts (Visual)	2-4
Description	2-4
Measurement	2-5
Reshaping	2-6
Correction of the Damaged Area	2-6
Replacement	2-7
Removal	2-7
Installation	2-8
Rust Prevention / Paint	2-10
Installation and Inspection	2-11
Repair Tools	2-12
Measurement Equipment	2-12
Protective Tools	2-12

Introduction

Processing Tools	2-13
Cutting Tools.....	2-13
Shaping Tools.....	2-14
Fixing Tools.....	2-15
Welders.....	2-16
Sanding Tools.....	2-16
Welding Methods	2-17
Spot Welding.....	2-17
Carbon Dioxide Arc Welder (MIG Arc Weld).....	2-19
Gas Welding	2-20

Replacement

Front Bulkhead	3-2
Mass Production Body Welding Diagram	3-2
Removal	3-3
Installation.....	3-3
Front Wheelhouse / Damper Housing	3-4
Mass Production Body Welding Diagram	3-4
Removal.....	3-5
Installation.....	3-7
Front Side Frame / Outrigger	3-9
Mass Production Body Welding Diagram	3-9
Removal.....	3-10
Installation.....	3-12
Front Pillar Outer Panel	3-14
Mass Production Body Welding Diagram	3-14
Removal.....	3-15
Installation.....	3-16
Side Sill Outer Panel	3-17
Mass Production Body Welding Diagram	3-17
Removal.....	3-18
Installation.....	3-19
Roof Panel	3-20
Mass Production Body Welding Diagram	3-20
Removal.....	3-21
Installation.....	3-22
Rear Side Outer Panel	3-23
Mass Production body Welding Diagram.....	3-23
Removal.....	3-25
Installation.....	3-27
Rear Panel	3-29
Mass Production Body Welding Diagram	3-29
Removal.....	3-30
Installation.....	3-31
Rear Floor / Rear Floor Cross-member	3-32

Mass Production Body Welding Diagram	3-32
Removal.....	3-33
Installation.....	3-34

Body Dimensional Drawings

Upper Body Measuring Dimensions	4-2
Engine Compartment.....	4-2
Engine / Transmission Mount Positions.....	4-3
Passenger's Compartment	4-3
Rear Panel / Rear Pillar Gutter Positions	4-4
Tailgate Hinge Mount Position.....	4-4
Opening Repair Chart.....	4-5
Under Body Measuring Dimensions	4-6
Engine Compartment and Front Floor Under View.....	4-6
Middle and Rear Floor Under View.....	4-7
Frame Repair Chart	4-8
Top View.....	4-8
Side View.....	4-10

Rust Prevention

Cross Section of Body and Sealants	5-2
General	5-2
Engine Compartment, Front Wheelhouse, and Damper Housing	5-3
Dashboard Upper, Dashboard Lower, and Roof Panel	5-4
Front Floor and Rear Floor	5-5
Rear Side Outer Panel, and Rear Panel.....	5-6
Under Floor, and Rear Wheelhouse	5-7
Soft Chipping Guard Primer Coat	5-8
General	5-8
Coating Diagram.....	5-9
Rust-preventive Treatments	5-10
General	5-10
Undercoating Diagram.....	5-11
Area to be Covered by Anti-rust Agents	5-12
Materials and Tools	5-13

Paints

General Safety Precaution	6-2
Body Paint	6-3
General	6-3
Refinishing Processes	6-4
Preprocessing of Painting.....	6-5
Treatment of Metal Surface	6-6
Undercoating	6-7
Intermediate Coating	6-8

Introduction

- Top Coating 6-9
- 3-coat Pearl (White Pearl) Paint 6-11**
 - Coating Procedures 6-11
 - Painting Repair (Gradation) 6-12
- Plastic Parts Paint 6-15**
 - Features of Plastic Material 6-15
 - Use of the Repair Material (reference)..... 6-17
 - Refinishing Processes 6-18
 - Preprocessing of Painting 6-19
 - Undercoating..... 6-19
 - Intermediate Coating..... 6-21
 - Top Coating 6-22
- Glossary 6-23**

Index

B

Body Construction	1-9
--------------------------------	------------

Body Repair

Frame Repair Chart	4-8
General Safety Precaution	2-3
Inspection of Damaged Part	2-4
Installation and Inspection	2-11
Opening Repair Chart	4-5
Procedures	2-2
Replacement of the Damaged Area	2-7
Reshaping of the Damaged Area	2-6
Tools	2-12
Welding Methods	2-17
Zinc-plated Steel Plate	1-11

Body Replacement

Front Bulkhead	3-2
Front Pillar Outer Panel	3-14
Front Side Frame / Outrigger	3-9
Front Wheelhouse / Damper Housing	3-4
Rear Floor / Rear Floor Cross-member	3-32
Rear Panel	3-29
Rear Side Outer Panel	3-23
Roof Panel	3-20
Side Sill Outer Panel	3-17

Body Specifications	1-
----------------------------------	-----------

D

Dimensional Drawings

Under Body	4-
Upper Body	4-

E

Exterior Parts

Installation	1-
Removal	1-

Exterior Plastic Parts

Materials	1-
Types	1-

I

Identification Numbers

Locations	1-
-----------------	----

Introduction

L

Lift and Support Points

Floor Jack	1-
Frame Hoist	1-
Safety Stands	1-

P

Paint

Body	6-
Color Chart	1-
General Safety Precautions	6-
Glossary	6-
Plastic Parts	6-

R

Reinforcement Beams

Bumper	1-
Door	1-

Rust Prevention

Cross Sections of Body	5-
Materials	5-
Primer Coat	5-
Sealants	5-
Tools	5-
Treatments	5-

S

Supplemental Restraint System (SRS)	1-
---	----

W

Wheel Alignment

Front	1-
Rear	1-