

Turn Signal/Hazard Flasher System

Component Location Index

SRS wire harness is routed near the flasher system related parts (SRS wire harness locations, page 16-117).

⚠ WARNING All SRS wire harness and connectors are colored yellow.
Do not use electrical test equipment on these circuit.

CAUTION: Be careful not to damage SRS wire harness when servicing flasher system.

TURN SIGNAL INDICATOR
LIGHTS
(in the gauge assembly)

HAZARD WARNING LIGHT
(EC only)
(in the gauge assembly)

HAZARD SWITCH

LIGHTING/TURN SIGNAL
SWITCH
Test, page 16-114

TURN SIGNAL/HAZARD
RELAY

DASH RELAY HOLDER
(Located under dash,
driver's side)