


Position of Parts in Instrument Panel <LHD>

- * 1: Refer to the Service Bulletin for the installation position of the parts.
- * 3: w/ Headlight Beam Level Control (Manual)
- * 7: w/o Entry Function

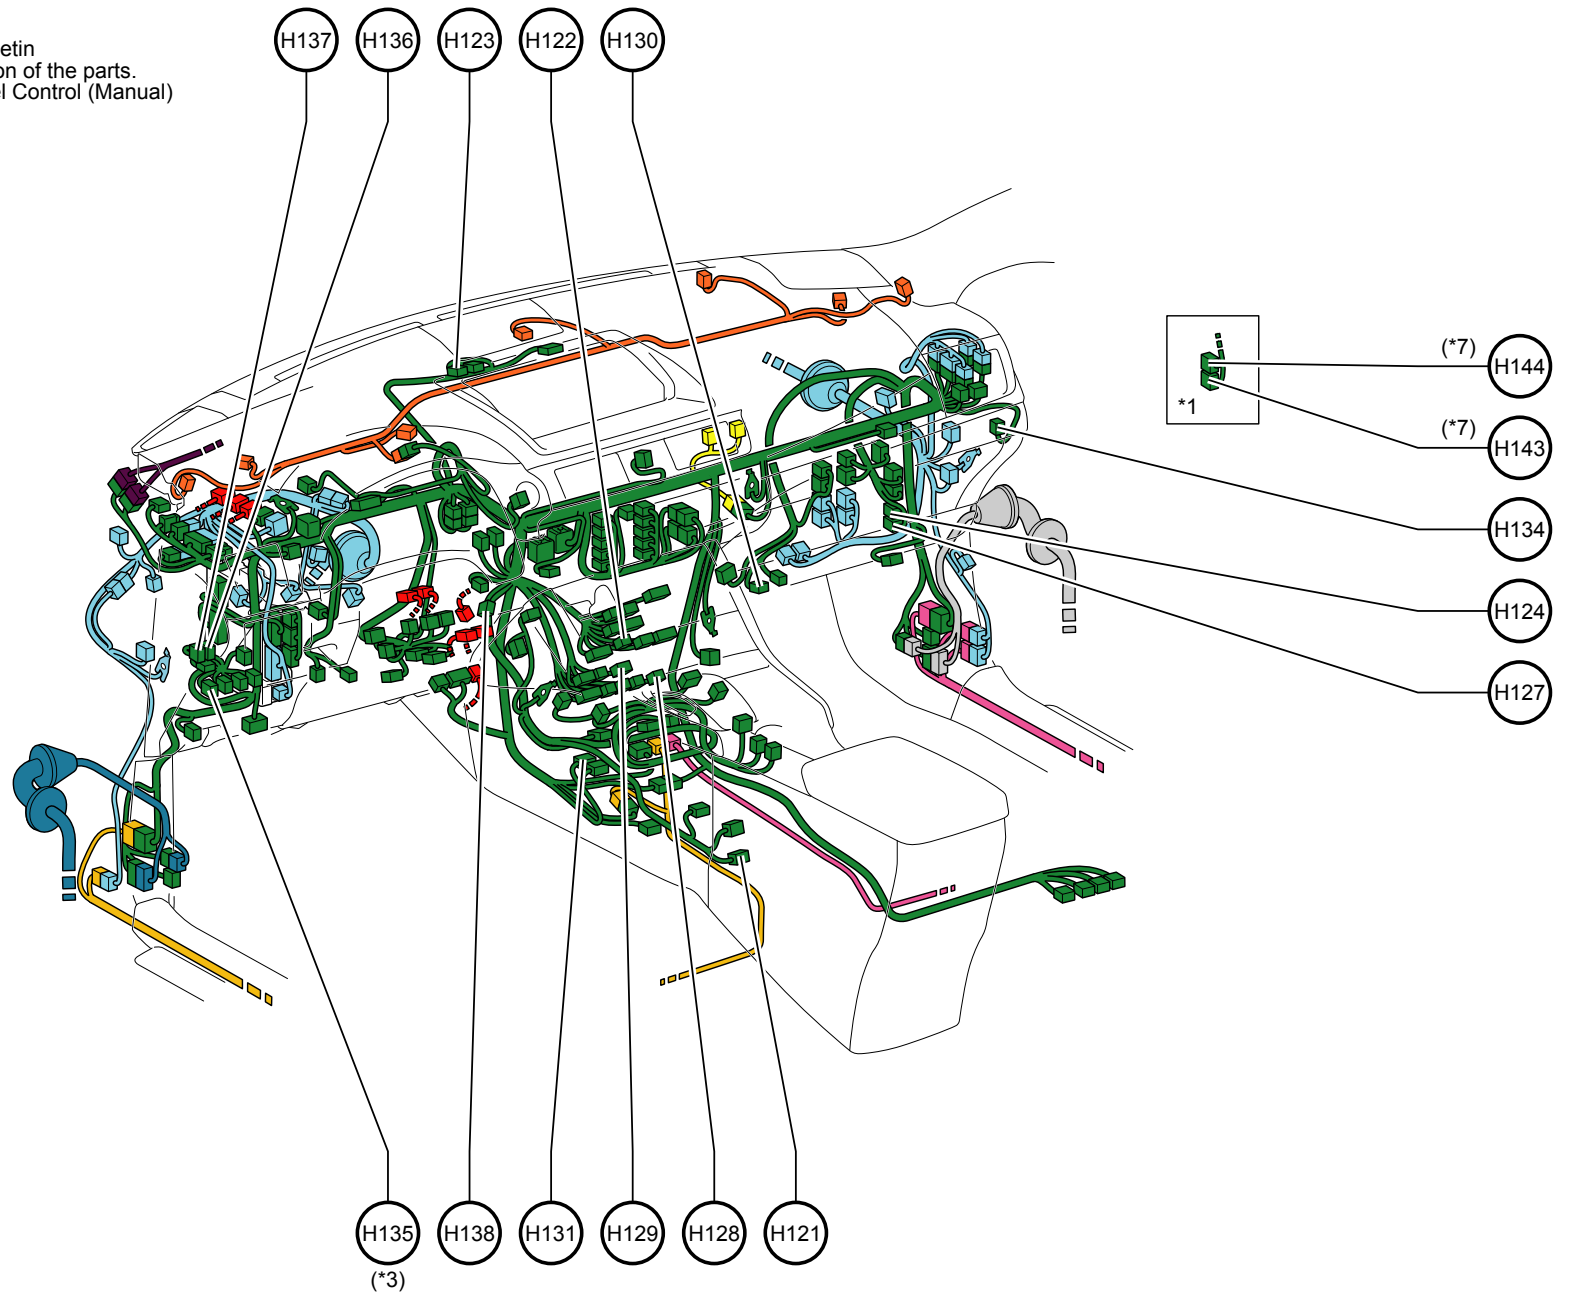

H 121	Multi-Media Interface ECU Assembly
H 122	Radio Receiver Assembly
H 123	Multi-Display
H 124	Parking Assist ECU
H 127	Parking Assist ECU
H 128	Display & Navigation Module Display
H 129	Display & Navigation Module Display
H 130	IEEE Connector
H 131	Multi-Media Module Navigation Assembly
H 134	Airbag Cut Off Switch Cylinder Sub-Assembly
H 135	Headlight Leveling Switch
H 136	Outer Mirror Switch Assembly
H 137	Retractable Outer Mirror Switch
H 138	Junction Connector
H 143	Certification ECU Assembly
H 144	Certification ECU Assembly

Position of Parts in Instrument Panel <LHD>

