

1993 MY U.S.A. Maintenance Schedule

Chassis & Body

No.	Items	Service Intervals x 1000 miles	Months								ES300	LS400	SC300/400	GS300	
			1	7.5	15	22.5	30	37.5	45	52.5	60				
1	Brake Linings and drums			I		I		I		I	I: Every 24 Months	X	X	X	X
2	Brake pads and discs			I		I		I		I	I: Every 24 Months	X	X	X	X
3	Brake Fluid	I		I		R		I		R	R: Every 36 Months	X	X	X	X
4	Brake line pipes and hoses			I		I		I		I	I: Every 24 Months	X	X	X	X
5	Steering linkage			I		I		I		I	I: Every 24 Months	X	X	X	X
6	SRS airbag		After inspection at 10 years, inspect every 2 years									X	X	X	X
7	Steering gear box	See note (1)	I	I	I	I	I	I	I	I	I: Every 24 Months	X	X	X	X
8	Ball joints and dust covers			I		I		I		I	I: Every 24 Months	X	X	X	X
9	Drive shaft boots			I		I		I		I	I: Every 24 Months	X			
10	Automatic transmission and differential	I		I		I		I		I	I: Every 24 Months	X	X	X	X
11	Manual Transaxle/Transmission	I		I		I		I		I	I: Every 24 Months	X		X	
12	Bolts and nuts on chassis and body	I		I		I		I		I	I: Every 24 Months	X	X	X	X
13	Body Inspection	I	I	I	I	I	I	I	I	I	I: Every 12 Months	X	X	X	X
14	Air conditioning filter		R	R	R	R	R	R	R	R	R: Every 12 Months		X		
15	Road Test	I	I	I	I	I	I	I	I	I	I: Every 12 Months	X	X	X	X

I: Inspect and correct or replace as necessary

R: Replace, change, or lubricate

Note:

(1) Inspect the steering gear housing for oil leakage only

1993 MY U.S.A. Maintenance Schedule

Chassis & Body

No.	Items	Service Intervals x 1000 miles	Months								ES300	LS400	SC300/400	GS300	
			1	7.5	15	22.5	30	37.5	45	52.5	60				
1	Brake Linings and drums			I		I		I		I	I: Every 24 Months	X	X	X	X
2	Brake pads and discs			I		I		I		I	I: Every 24 Months	X	X	X	X
3	Brake Fluid	I		I		R		I		R	R: Every 36 Months	X	X	X	X
4	Brake line pipes and hoses			I		I		I		I	I: Every 24 Months	X	X	X	X
5	Steering linkage			I		I		I		I	I: Every 24 Months	X	X	X	X
6	SRS airbag		After inspection at 10 years, inspect every 2 years									X	X	X	X
7	Steering gear box	See note (1)	I	I	I	I	I	I	I	I	I: Every 24 Months	X	X	X	X
8	Ball joints and dust covers			I		I		I		I	I: Every 24 Months	X	X	X	X
9	Drive shaft boots			I		I		I		I	I: Every 24 Months	X			
10	Automatic transmission and differential	I		I		I		I		I	I: Every 24 Months	X	X	X	X
11	Manual Transaxle/Transmission	I		I		I		I		I	I: Every 24 Months	X		X	
12	Bolts and nuts on chassis and body	I		I		I		I		I	I: Every 24 Months	X	X	X	X
13	Body Inspection	I	I	I	I	I	I	I	I	I	I: Every 12 Months	X	X	X	X
14	Air conditioning filter		R	R	R	R	R	R	R	R	R: Every 12 Months		X		
15	Road Test	I	I	I	I	I	I	I	I	I	I: Every 12 Months	X	X	X	X

I: Inspect and correct or replace as necessary

R: Replace, change, or lubricate

Note:

(1) Inspect the steering gear housing for oil leakage only

1993 MY U.S.A. Maintenance Schedule

Engine

No.	Items	Service Intervals		x 1000 miles	1	7.5	15	22.5	30	37.5	45	52.5	60	Months	ES300	LS400	SC300/400	GS300	
		1000 miles	Years																
1	Valve Clearance													A	A: Every 72 months	X	X	X	X
2	Drive Belt													I	I: See note (1)	X	X	X	X
3	Engine oil and Filter			R	R	R	R	R	R	R	R	R		R: Every 12 Months	X	X	X	X	
4	Engine Coolant										R				R: See note (2)	X	X	X	X
5	Exhaust Pipes & Mountings								I					I	I: Every 36 Months	X	X	X	X
6	Air Cleaner Filter							R					R		R: Every 36 Months	X	X	X	X
7	Fuel lines and connections								I					I	I: Every 36 Months	X	X	X	X
8	Fuel tank cap gasket												R		R: Every 72 Months	X	X	X	X
9	Spark Plugs												R		R: Every 72 Months	X	X	X	X
10	Charcoal cannister												I		I: Every 72 Months	X	X	X	X

A: Check and adjust as necessary **I:** Inspect and correct or replace as necessary **R:** Replace, change, or lubricate

Note:

- (1) After 60,000 miles (96,000 km) or 72 months, inspect every 7,500 miles (12,000 km) or 12 months
- (1) After 45,000 miles (72,000 km) or 36 months, replace every 30,000 miles (48,000 km) or 24 months