


FRONT ACCELERATION SENSOR REPLACEMENT

25000-02

1. REMOVE FRONT DOOR SCUFF PLATE RH (See page 71-11)
2. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.1 (See page 71-11)
3. REMOVE INSTRUMENT PANEL SUB-ASSY LOWER (See page 71-11)

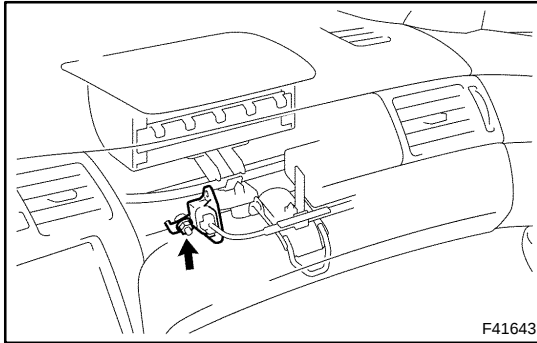


4. **REMOVE ACCELERATION SENSOR ASSY**
 - (a) Disconnect the acceleration sensor connector.
 - (b) Remove the nut and acceleration sensor from the instrument panel reinforcement.
5. **INSTALL ACCELERATION SENSOR ASSY**
 - (a) Install the acceleration sensor with the nut.
Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)
 - (b) Connect the acceleration sensor connector.

REAR ACCELERATION SENSOR REPLACEMENT

2500P-02

1. REMOVE REAR SEAT CUSHION ASSY (See page 72-39)
2. REMOVE REAR SEATBACK ASSY (See page 72-39)
3. REMOVE ROOF SIDE GARNISH INNER RH (See page 74-10)

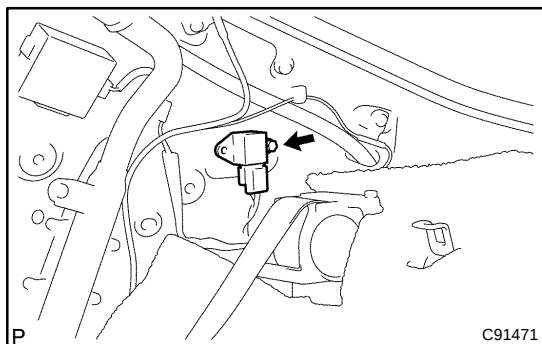


4. **REMOVE ACCELERATION SENSOR**
 - (a) Disconnect the acceleration sensor connector.
 - (b) Remove the bolt and acceleration sensor from the side pillar RH.
5. **INSTALL ACCELERATION SENSOR**
 - (a) Install the acceleration sensor with the bolt.
Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)
 - (b) Connect the acceleration sensor connector.

ABSORBER CONTROL ECU REPLACEMENT

2500Q-02

1. REMOVE FRONT DOOR SCUFF PLATE LH (See page 71-11)
2. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER (See page 71-11)
3. REMOVE INSTRUMENT PANEL INSERT SUB-ASSY LOWER LH (See page 71-11)

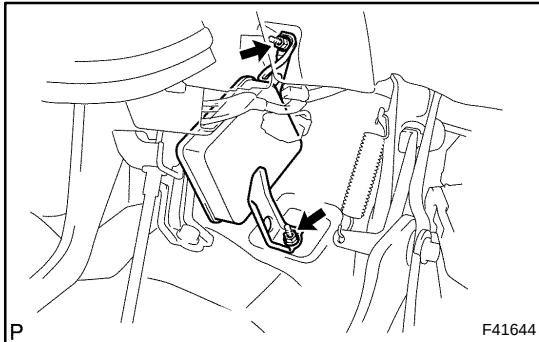

4. REMOVE ABSORBER CONTROL ECU
 - (a) Disconnect the 2 absorber control ECU connectors.
 - (b) Remove the 2 nuts and absorber control ECU.
5. INSTALL ABSORBER CONTROL ECU
 - (a) Install the absorber control ECU with the 2 nuts.
Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)
 - (b) Connect the 2 absorber control ECU connectors.