


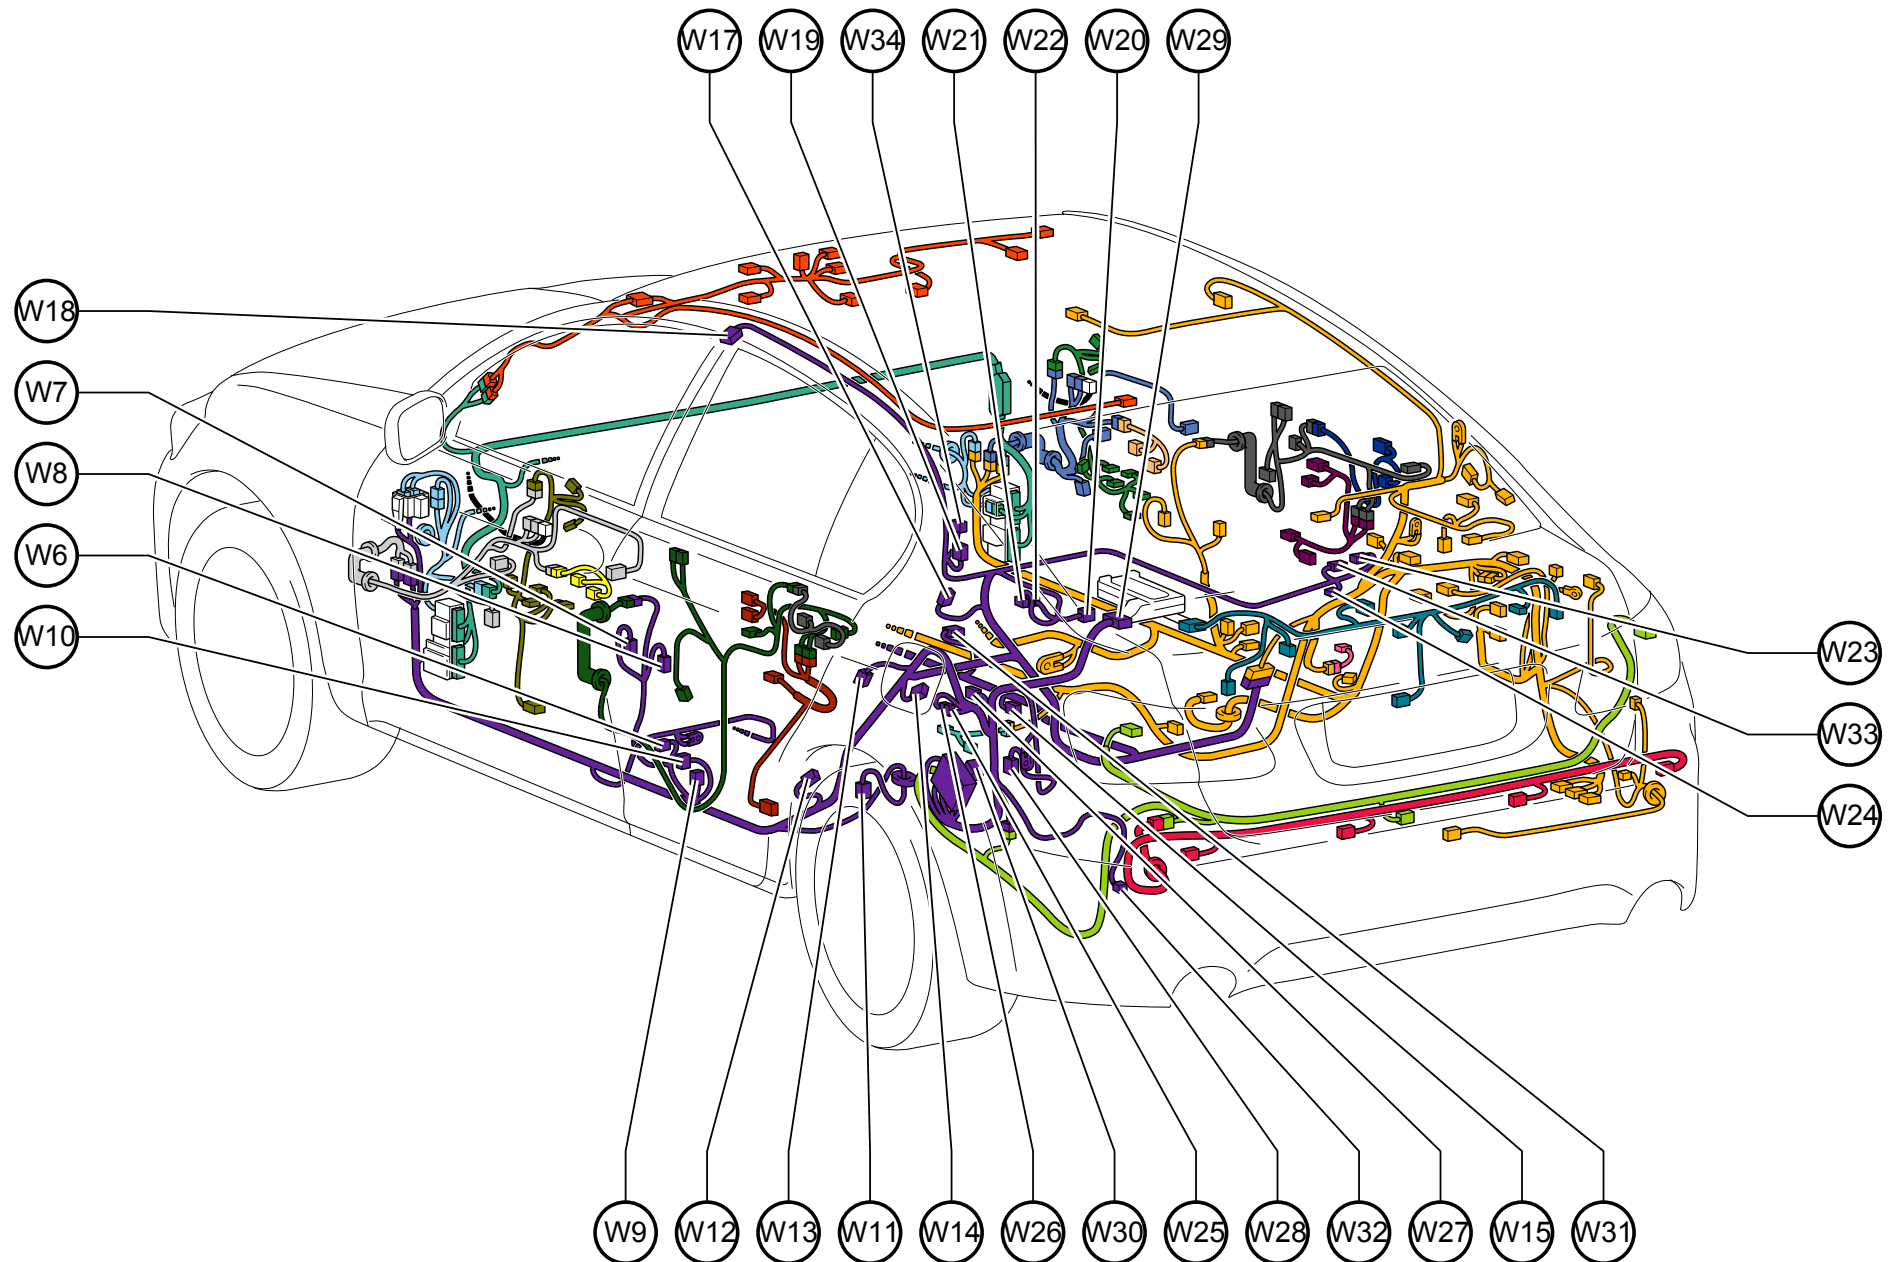

|      |                                                 |
|------|-------------------------------------------------|
| W 6  | Front Seat Outer Belt Motor (LH)                |
| W 7  | Door Courtesy SW (Front LH)                     |
| W 8  | Side Airbag Sensor (LH)                         |
| W 9  | Pretensioner (Front LH)                         |
| W 10 | Front Seat Outer Belt (LH)                      |
| W 11 | Fuel Suction Pump and Gage Assembly             |
| W 12 | Airbag Sensor (Rear LH)                         |
| W 13 | Door Courtesy SW (Rear LH)                      |
| W 14 | Side Airbag Squib (Rear LH)                     |
| W 15 | Rear Seat Inner Belt (LH)                       |
| W 17 | Noise Filter (Center Stop Lamp)                 |
| W 18 | Curtain Shield Airbag Squib (LH)                |
| W 19 | Rear Window Defogger                            |
| W 20 | Speaker (Rear LH)                               |
| W 21 | Rear Seat Outer Belt (LH)                       |
| W 22 | Pretensioner (Rear LH)                          |
| W 23 | Center Stop Lamp                                |
| W 24 | Rear Sunshade Relay                             |
| W 25 | Junction Connector                              |
| W 26 | Junction Connector                              |
| W 27 | Absorber Control Actuator (Rear LH)             |
| W 28 | Fuel Lid Opener Motor                           |
| W 29 | Wiring Harness Spool                            |
| W 30 | Seat Belt Control ECU                           |
| W 31 | Electrical Key Oscillator (Rear Seat)           |
| W 32 | Electrical Key Oscillator (Inside Luggage Room) |
| W 33 | Sun Beam Sensor (LHD)                           |
| W 34 | Junction Connector                              |

# Position of Parts in Body <LHD>

