


IGNITION SWITCH CIRCUIT

CIRCUIT DESCRIPTION

The driver side junction block receives ACC and ON information from the ignition switch and sends it to each ECU.

WIRING DIAGRAM

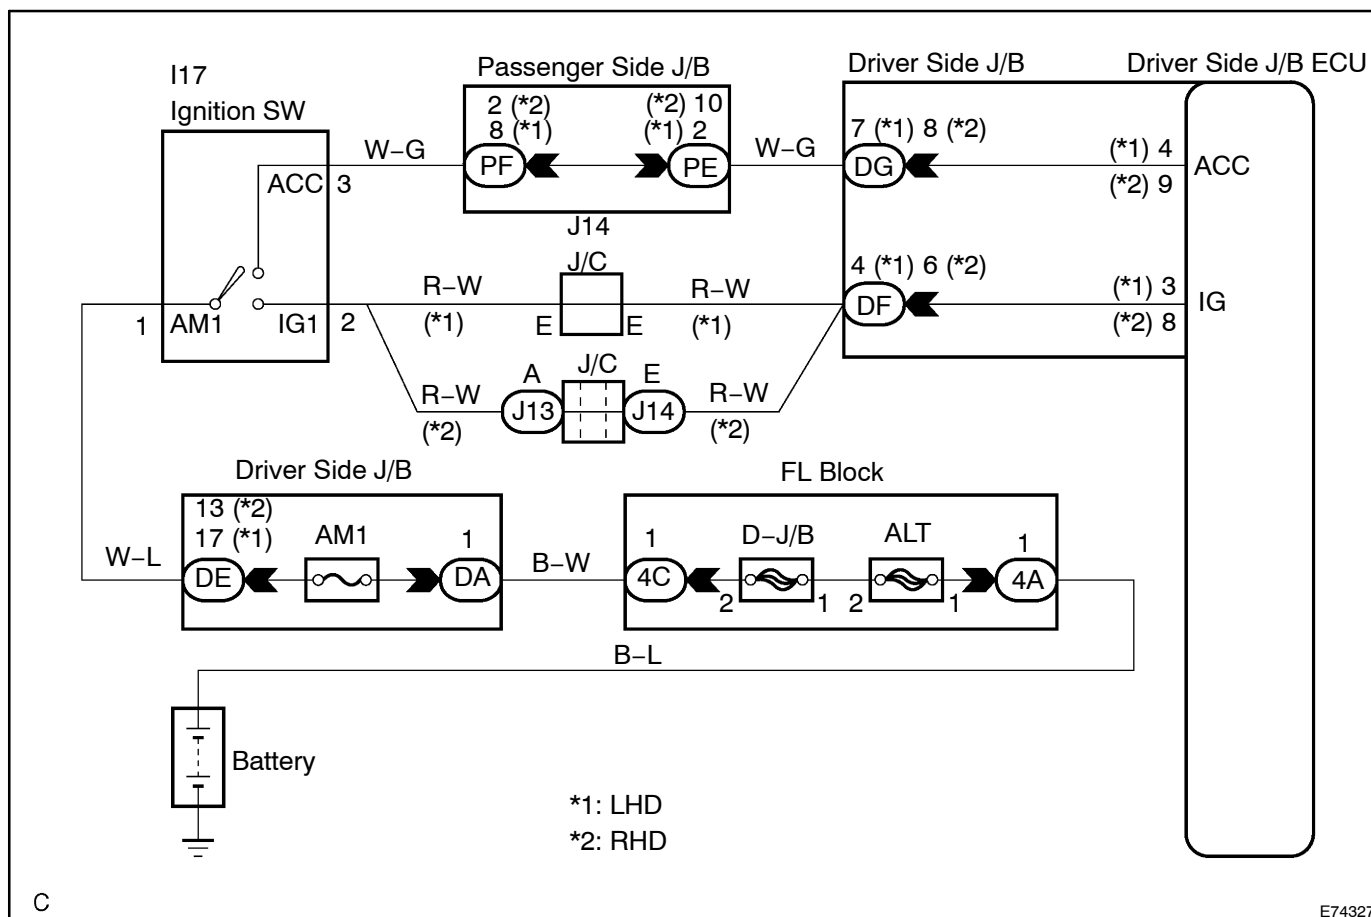


INSPECTION PROCEDURE

1 INSPECT DRIVER SIDE JUNCTION BLOCK

(a) Measure the voltage according to the value(s) in the table below.

Standard:

Tester Connection	Condition	Specified Condition
DF-4 - Body ground	Ignition switch ON	10 to 14 V
DG-7 - Body ground	Ignition switch in ACC	10 to 14 V

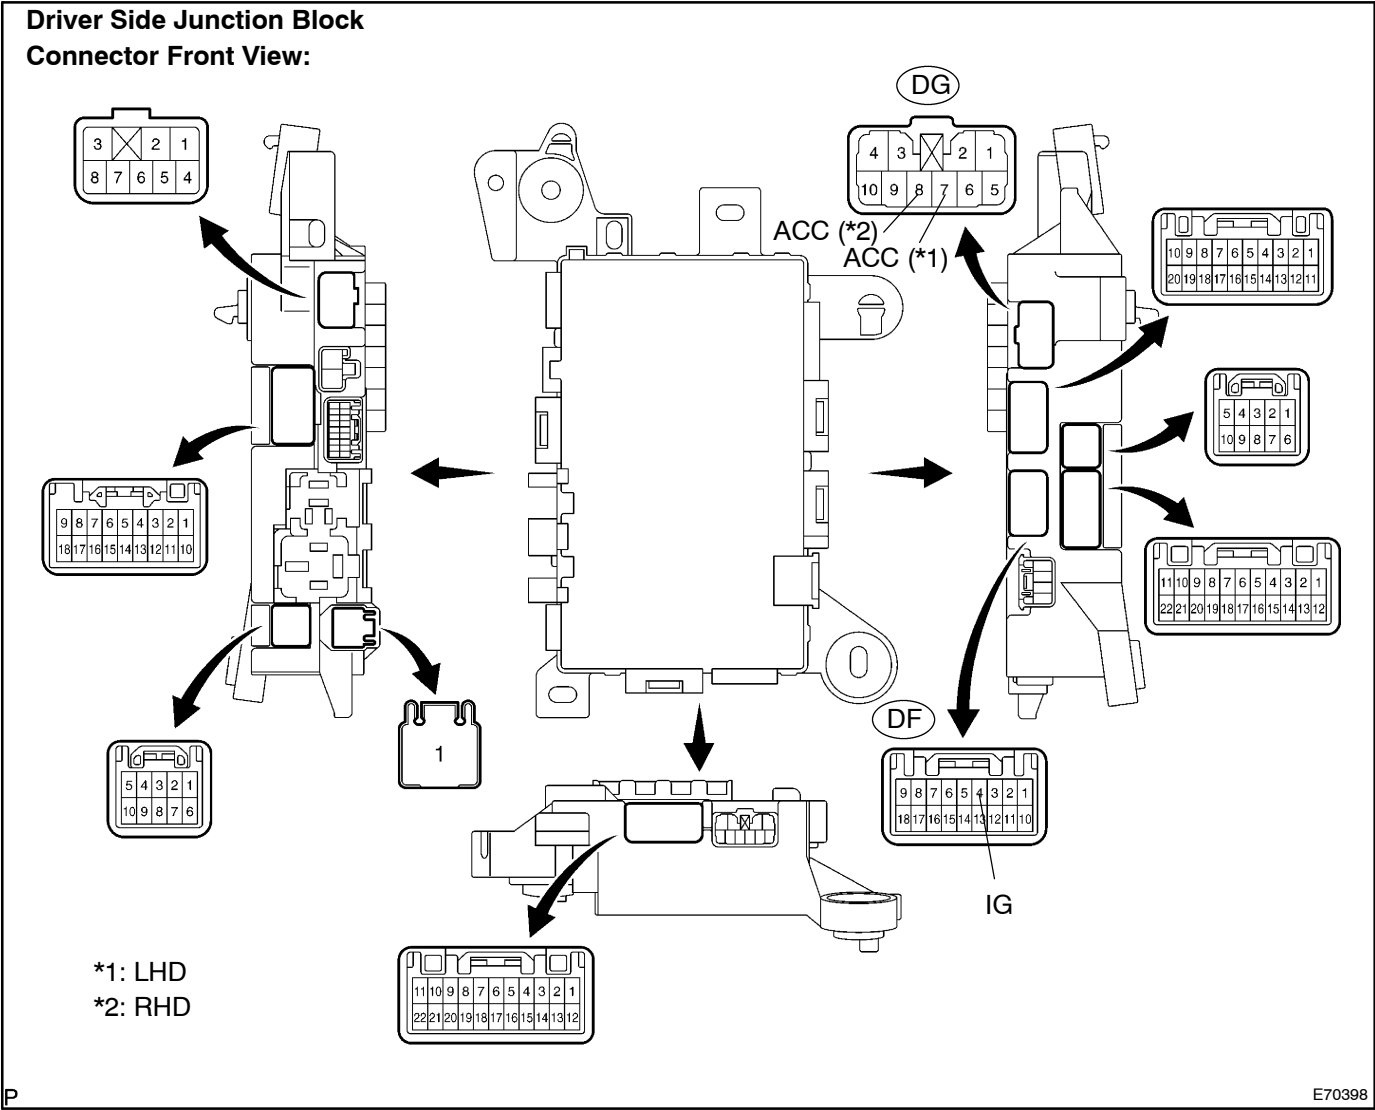

HINT:

This illustration is for RHD model. The RHD and LHD models are symmetrical.

NG REPAIR OR REPLACE HARNESS OR CONNECTOR (IGNITION SWITCH CIRCUIT)

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1369)