



# POWER SOURCE CIRCUIT (AUDIO AND REAR A/C CONTROL SW)

## CIRCUIT DESCRIPTION

This circuit provides the power to the audio and rear A/C control switch.


## WIRING DIAGRAM

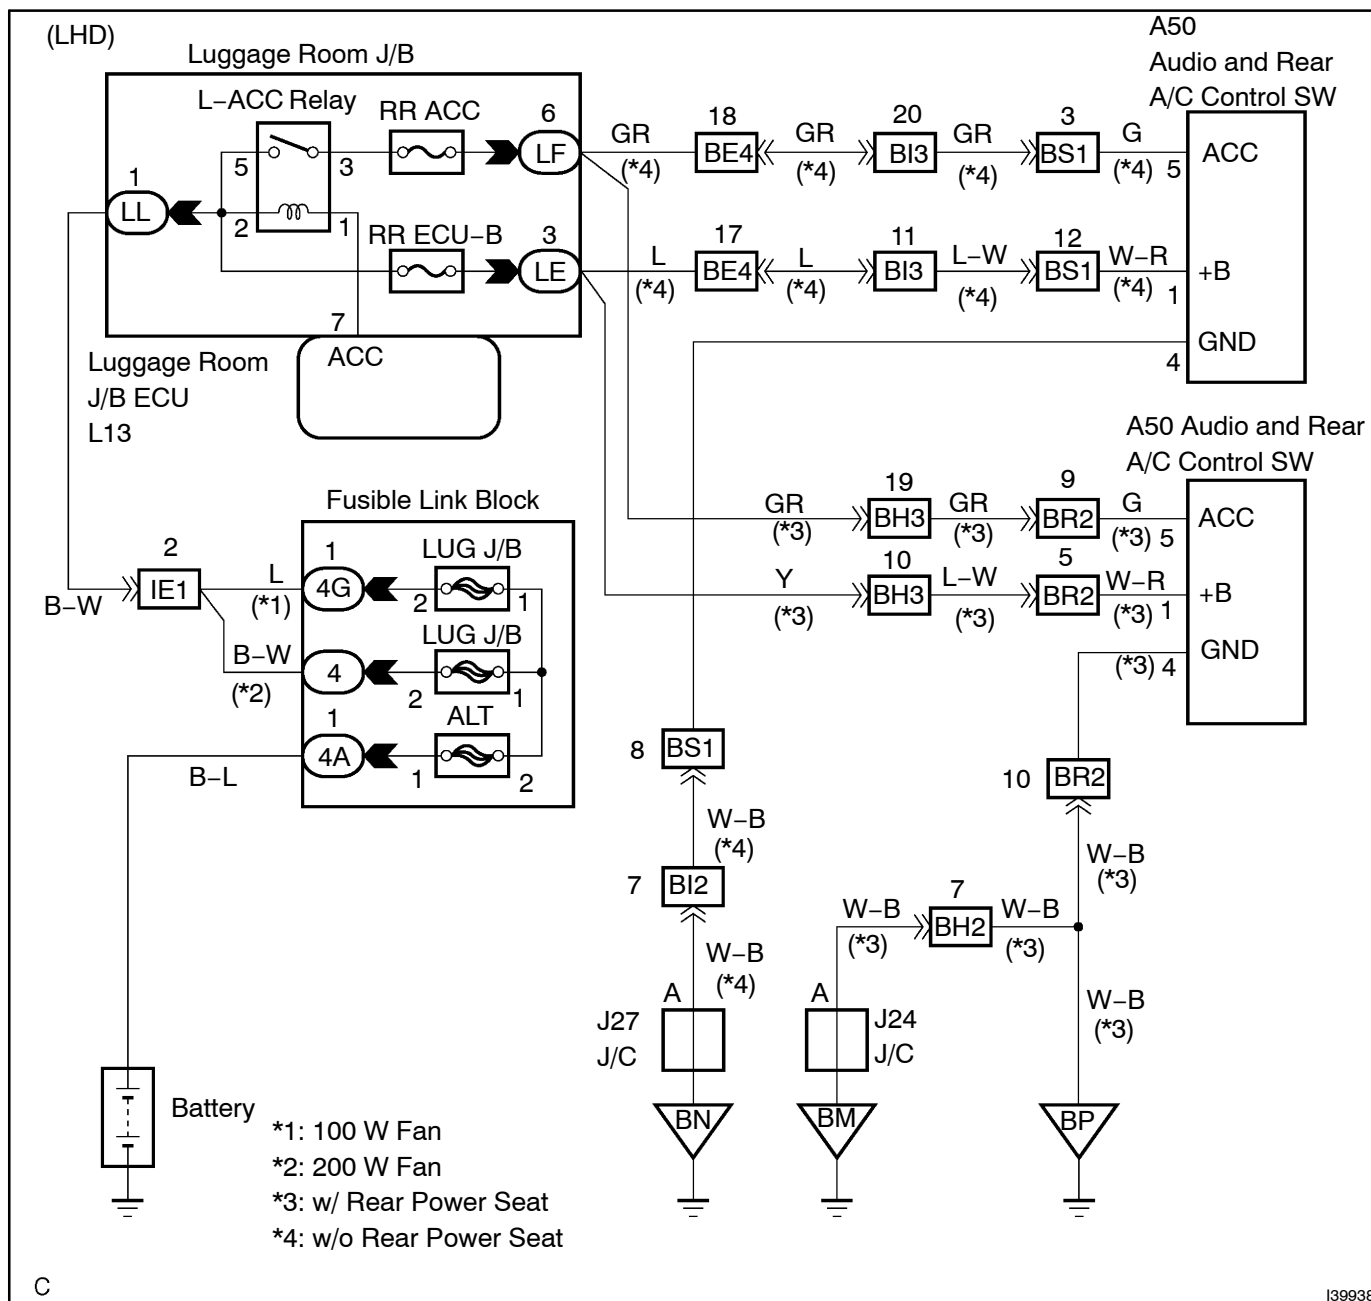

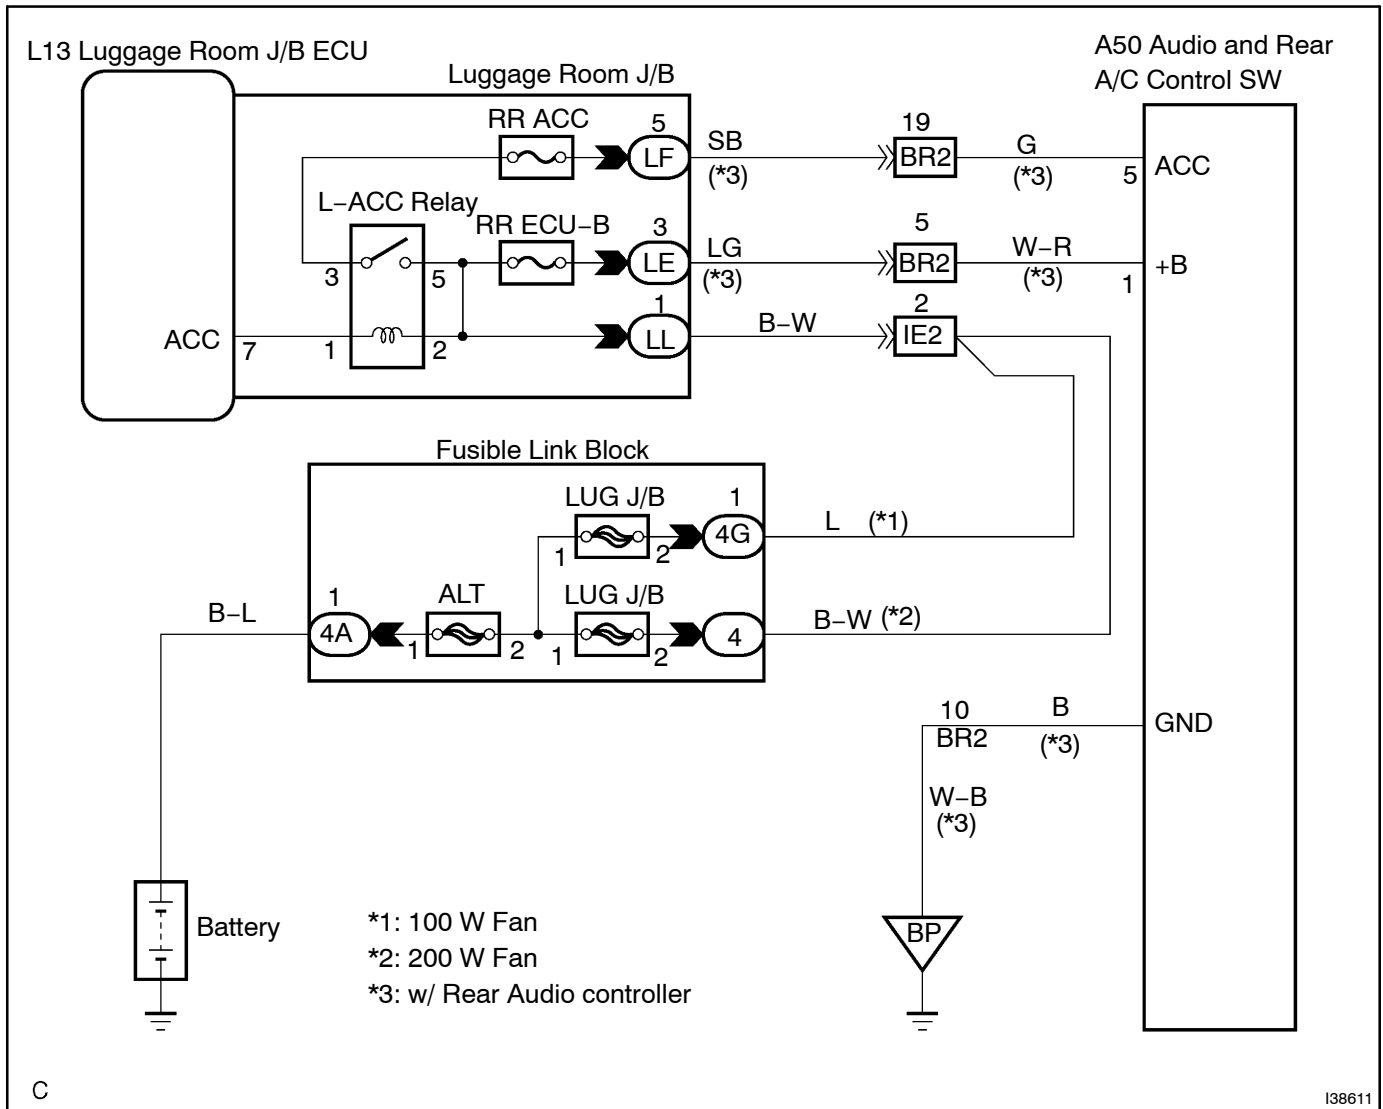

INSPECTION PROCEDURE

1 INSPECT AUDIO AND REAR A/C CONTROL SWITCH(+B, ACC, GND)

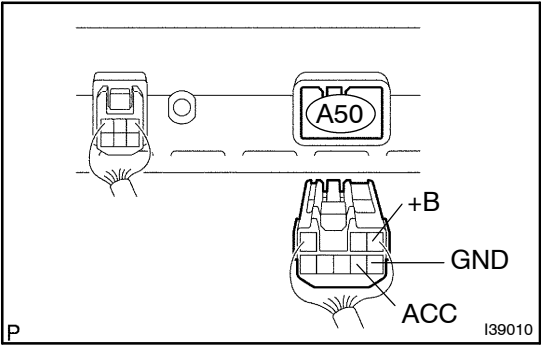

- (a) Disconnect the audio and rear A/C control switch connector A50.
- (b) Measure the resistance according to the value(s) in the table below.

Standard:

| Tester connection | Condition | Specified condition |
|-------------------|-----------|---------------------|
| GND - Body ground | Always    | Below 1 $\Omega$    |

- (c) Measure the voltage according to the value(s) in the table below.

Standard:

| Tester connection | Condition       | Specified condition |
|-------------------|-----------------|---------------------|
| +B - GND          | Always          | 10 to 14 V          |
| ACC - GND         | Ignition SW ACC | 10 to 14 V          |

NG

REPAIR OR  
CONNECTOR

REPLACE HARNESS OR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE OR DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05-1660 OR 05-1673)