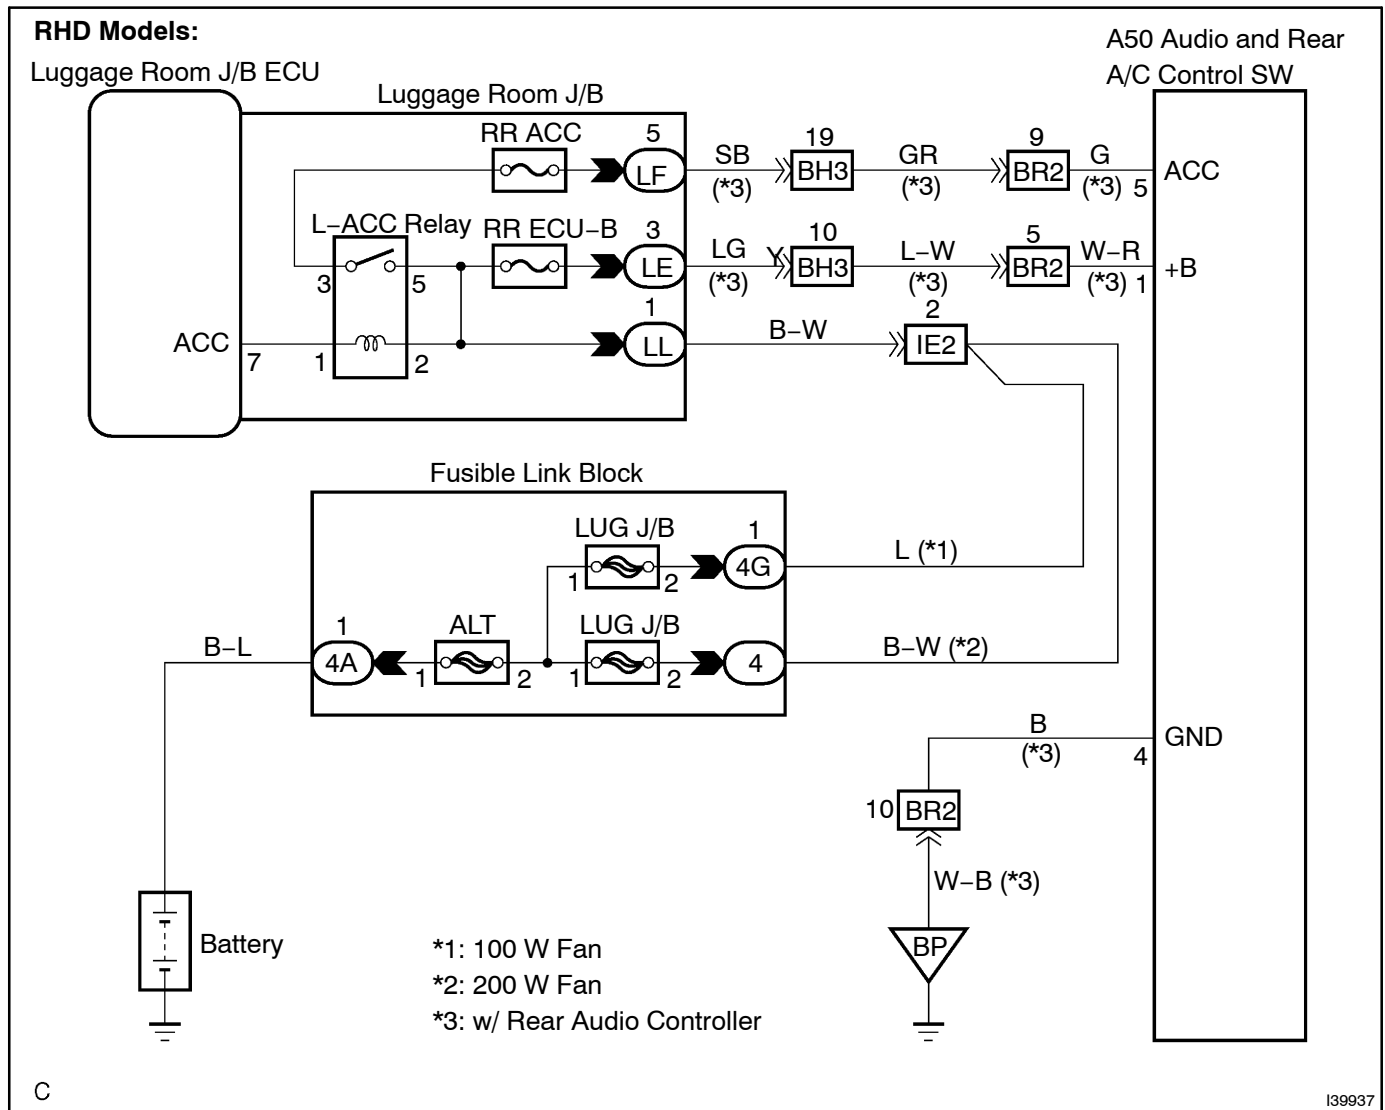


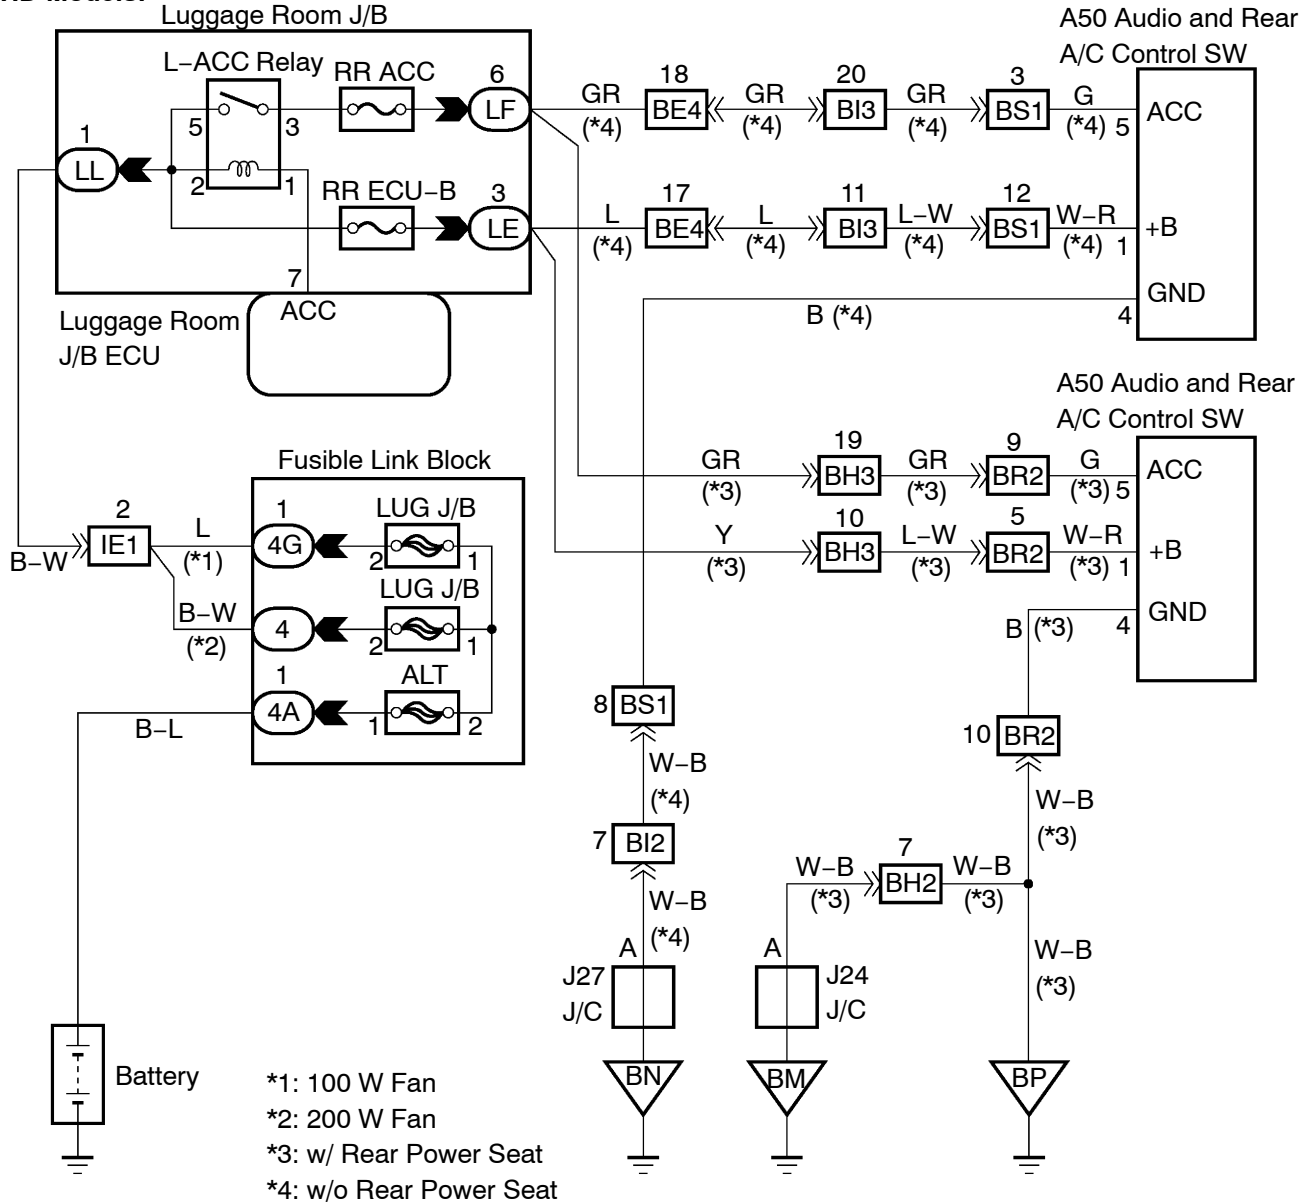
POWER SOURCE CIRCUIT (AUDIO AND REAR A/C CONTROL SW)

CIRCUIT DESCRIPTION

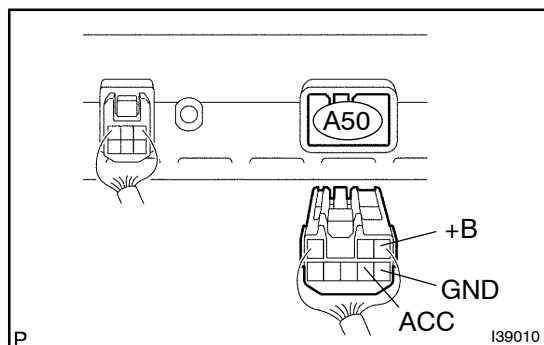
This circuit provides power to the audio and rear A/C control switch.

WIRING DIAGRAM



LHD Models:

INSPECTION PROCEDURE

1 INSPECT AUDIO AND REAR A/C CONTROL SWITCH(+B, ACC, GND)

- (a) Disconnect the audio and rear A/C control switch A50.
(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
GND - Body ground	Always	Below 1 Ω

- (c) Measure the voltage according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
+B - GND	Always	10 to 14 V
ACC - GND	Ignition SW ACC	10 to 14 V

NG**REPAIR OR REPLACE HARNESS OR CONNECTOR****OK**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART
(SEE PAGE 05-1788)**