

PROBLEM SYMPTOMS TABLE

Symptoms	Suspected Area	See Page
Power window does not operate at all	1. Power source circuit on driver side 2. Power window master switch circuit 3. Driver door ECU	05-2022 05-2033 05-1987
Driver side power window does not operate	1. Power source circuit on driver side 2. Power window motor circuit (driver) 3. Power window master switch circuit 4. Driver door ECU	05-2022 05-2046 05-2033 05-1987
Passenger side power window does not operate	1. Power source circuit on passenger side 2. Power window motor circuit (passenger) 3. Power window regulator switch circuit 4. Passenger door ECU	05-2024 05-2049 05-2037 05-1987
Rear LH power window does not operate	1. Power source circuit on rear LH side 2. Power window motor circuit (rear) 3. Power window regulator switch circuit 4. Rear door LH ECU	05-2027 05-2052 05-2040 05-1987
Rear RH power window does not operate	1. Power source circuit on rear RH side 2. Power window motor circuit (rear) 3. Power window regulator switch circuit 4. Rear door RH ECU	05-2030 05-2055 05-2043 05-1987
Jam protection function and AUTO UP/DOWN function do not operate on driver side	1. Master switch circuit 2. Limit switch circuit 3. Pulse sensor circuit	05-2033 05-2008 05-2008
Jam protection function and AUTO UP/DOWN function do not operate on passenger side	1. Regulator switch circuit 2. Limit switch circuit 3. Pulse sensor circuit	05-2037 05-2012 05-2012
Jam protection function and AUTO UP/DOWN function do not operate on rear LH side	1. Regulator switch circuit 2. Limit switch circuit 3. Pulse sensor circuit	05-2040 05-2016 05-2016
Jam protection function and AUTO UP/DOWN function do not operate on rear RH side	1. Regulator switch circuit 2. Limit switch circuit 3. Pulse sensor circuit	05-2043 05-2019 05-2019
Window lock function does not operate	1. Power window master switch circuit 2. Window lock switch circuit 3. Power window regulator switch circuit 4. Driver door ECU 5. Passenger door ECU 6. Rear door LH ECU 7. Rear door RH ECU	05-2033 05-2058 05-2037 05-1987 05-1987 05-1987 05-1987
Window control function does not operate	1. Power window master switch circuit 2. Window lock switch circuit 3. Power window motor circuit (passenger) 4. Power window motor circuit (rear) 5. Driver door ECU 6. Passenger door ECU 7. Rear door LH ECU 8. Rear door RH ECU	05-2033 05-2058 05-2049 05-2052 05-1987 05-1987 05-1987 05-1987
Transmitter cannot open power windows	1. Transmitter 2. Door control receiver 3. Theft deterrent ECU	05-2852 05-2852 05-3074

Door key linked power window operation does not function	1. Door key lock and unlock warning switch	05-2529
	2. Door lock control system	05-2529
	3. Driver door ECU	05-1987
Key-off operation does not function	1. Power window master switch circuit	05-2033
	2. Power window regulator motor circuit	05-2046
		05-2049
		05-2052
		05-2055
	3. Door courtesy switch circuit	05-2529
	4. Driver door ECU	05-2551
	5. Passenger door ECU	05-2553
	6. Rear door LH ECU	05-2556
	7. Rear door RH ECU	05-2560