

DIAGNOSTIC TROUBLE CODE CHART

1. DTC CHECK

If a malfunction code is displayed during the DTC check, check the suspected area listed for that code in the table below and proceed to the appropriate page.

DTC No. (See Page)	Circuit Inspection	Trouble Area
B1221 (05-1999)	Power window switch circuit on driver door	• Power window switch • Manual door lock switch • Wire harness • Driver door ECU
B1231 (05-2008)	Jam protection limit switch circuit on driver door	• Jam protection limit switch • Wire harness • Driver door ECU
B1232 (05-2008)	Jam protection pulse switch circuit on driver door	• Jam protection pulse switch • Wire harness • Driver door ECU
B1223 (05-2001)	Power window switch circuit on passenger door	• Power window switch • Manual door lock switch • Wire harness • Passenger door lock switch
B1233 (05-2012)	Jam protection limit switch circuit on passenger door	• Jam protection limit switch • Wire harness • Front passenger door ECU
B1234 (05-2012)	Jam protection pulse switch circuit on passenger door	• Jam protection pulse switch • Wire harness • Front passenger door ECU
B1226 (05-2004)	Power window switch circuit on rear door LH	• Power window switch • Wire harness • Rear door LH ECU
B1237 (05-2016)	Jam protection limit switch circuit on rear door LH	• Jam protection limit switch • Wire harness • Rear door LH ECU
B1238 (05-2016)	Jam protection pulse switch circuit on rear door LH	• Jam protection pulse switch • Wire harness • Rear door LH ECU
B1225 (05-2006)	Power window switch circuit on rear door RH	• Power window switch • Wire harness • Rear door RH ECU
B1235 (05-2019)	Jam protection limit switch circuit on rear door RH	• Jam protection limit switch • Wire harness • Rear door RH ECU
B1236 (05-2019)	Jam protection pulse switch circuit on rear door RH	• Jam protection pulse switch • Wire harness • Rear door RH ECU