

DIAGNOSTIC TROUBLE CODE CHART

If a trouble code is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the appropriate page.

DTC No. (See page)	Circuit Inspection	Trouble Area
B2231 (05-2238)	Front left side sensor malfunction	• Ultrasonic sensor No.1 • Wire harness • Clearance warning ECU assy
B2232 (05-2240)	Front left sensor malfunction	• Ultrasonic sensor No.1 • Wire harness • Clearance warning ECU assy
B2233 (05-2242)	Front left center sensor malfunction	• Ultrasonic sensor No.2 • Wire harness • Clearance warning ECU assy
B2234 (05-2244)	Front right center sensor malfunction	• Ultrasonic sensor No.2 • Wire harness • Clearance warning ECU assy
B2235 (05-2246)	Front right sensor malfunction	• Ultrasonic sensor No.1 • Wire harness • Clearance warning ECU assy
B2236 (05-2248)	Front right side sensor malfunction	• Ultrasonic sensor No.1 • Wire harness • Clearance warning ECU assy
B2237 (05-2250)	Rear left sensor malfunction	• Ultrasonic sensor No.1 • Wire harness • Clearance warning ECU assy
B2238 (05-2252)	Rear left center sensor malfunction	• Ultrasonic sensor No.2 • Wire harness • Clearance warning ECU assy
B2239 (05-2254)	Rear right center sensor malfunction	• Ultrasonic sensor No.2 • Wire harness • Clearance warning ECU assy
B2241 (05-2256)	Rear right sensor malfunction	• Ultrasonic sensor No.1 • Wire harness • Clearance warning ECU assy