

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See Page
All functions do not operate. (Driver side)	1. ECU power source circuit (Driver seat ECU) If the suspected area above is functioning normally, replace the driver seat ECU.	05-2293
Slide operation does not operate. (Driver side)	1. Motor circuit 2. Position sensor circuit If the 2 suspected areas above is functioning normally, replace the driver seat ECU.	05-2299 05-2302
Front vertical operation does not operate. (Driver side)	1. Motor circuit 2. Position sensor circuit If the 2 suspected areas above is functioning normally, replace the driver seat ECU.	05-2299 05-2302
Lifter operation does not operate. (Driver side)	1. Motor circuit 2. Position sensor circuit If the 2 suspected areas above is functioning normally, replace the driver seat ECU.	05-2299 05-2302
Reclining operation does not operate. (Driver side)	1. Motor circuit 2. Position sensor circuit If the 2 suspected areas above is functioning normally, replace the driver seat ECU.	05-2299 05-2302
Headrest operation does not operate. (Driver side)	1. Motor circuit 2. Position sensor circuit If the 2 suspected areas above is functioning normally, replace the driver seat ECU.	05-2299 05-2302
Seat cushion operation does not operate. (Driver side)	1. Seat cushion switch circuit 2. Motor circuit 3. Position sensor circuit If the 3 suspected areas above is functioning normally, replace the driver seat ECU.	05-2311 05-2299 05-2302
Seat position memory return function does not operate. (Driver side)	1. Driving position memory switch circuit (w/memory) 2. Position sensor circuit If the 2 suspected areas above is functioning normally, replace the driver seat ECU.	05-2314 05-2302
Lumber support operation does not operate. (Driver side)	1. Lumber support switch circuit 2. Motor circuit 3. Position sensor circuit If the 3 suspected areas above is functioning normally, replace the driver seat ECU.	05-2308 05-2299 05-2302
Driving position memory system does not operate. (Driver side)	1. Driving position memory switch circuit (w/memory) 2. ECU power source circuit (Driver door ECU) If the 2 suspected areas above is functioning normally, replace the driver seat ECU and driver door ECU.	05-2314 05-2297
All functions do not operate. (Passenger side)	1. P P/SEAT fuse 2. Wire harness	05-2271 –
Slide operation does not operate. (Passenger side)	1. Power seat switch (passenger side) 2. Power seat switch sub (passenger side) 3. Power seat motor 4. Wire harness	05-2321 05-2321 05-2321 –
Front vertical operation does not operate. (Passenger side)	1. Power seat switch (passenger side) 2. Power seat motor 3. Wire harness	05-2321 05-2321 –
Lifter operation does not operate. (Passenger side)	1. Power seat switch (passenger side) 2. Power seat motor 3. Wire harness	05-2321 05-2321 –

Reclining operation does not operate. (Passenger side)	1. Power seat switch (passenger side)	05-2321
	2. Power seat switch sub (passenger side)	05-2321
	3. Power seat motor	05-2321
	4. Wire harness	-
Headrest operation does not operate. (Passenger side)	1. Power seat switch (passenger side)	05-2321
	2. Power seat motor	05-2321
	3. Wire harness	-
Lumbar support operation does not operate. (Passenger side)	1. Power seat switch (passenger side)	05-2321
	2. Power seat motor	05-2321
	3. Wire harness	-